

User Manual

F11-10CC

Introduction

Please read this User Manual, as it contains information about the wonderful features of this Charging Trolley as well as some tips to make more enjoyable.

Important

Read this user manual carefully before you use the appliance. Save it for future reference.

Danger

 
Make sure the AC power section (plug/socket) does not get wet.

Specification:


Model	F11-10CC
Input	100~120V-50/60Hz 4A Max
Output/Port	5V-2.4A Max
Charging Standard Complied with	Apple2.4A(Divider1/2/3), Samsung(D+/D- 1.2V), BC 1.2
Charging Ability	10pcs USB-C Device
LED Indicators	Green: Fully Charged/No Load Red: Charging
Slot Size	10.63×8.27×1.02"
Case Size	19.29×14.17×10.43"

Charge


1.Put the charging trolley on flat surface near an AC socket. Ensure the ventilation system not be covered.

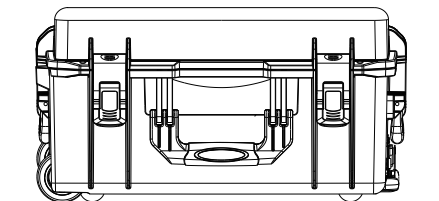

 2.Open the charging trolley.

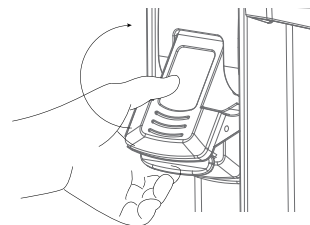

 3.Insert the power cord plug into the external connector of charging trolley and connect the other end with AC socket.

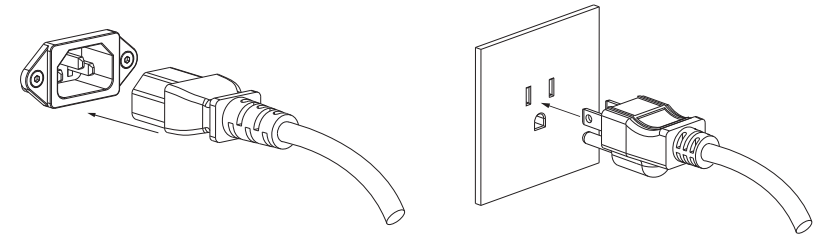


4.Press "I" to power the USB ports.



5.Put tablets into the inner compartments of trolley, connect USB ports and tablets with USB cables, then tablets are charged.

 Tips: The USB cables can be easily managed by tying them up into small loops.

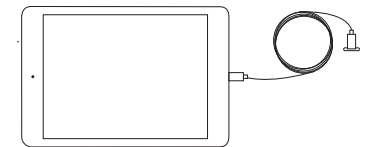

Cleaning

Always unplug the charging trolley before you clean it.

Clean surface with a soft dry cloth.

Storage

Store charging trolley in the conditions of temperature -13°F~ 122°F and relative humidity 20-90% RH non-condensing.

Move and Transportation

- 1.Press "O" to turn off the power
- 2.Unplug the USB cables.
- 3.Unplug the AC power cord.
- 4.Make sure all the accessories are stored well in the correct position.
- 5.Close the charging trolley and lock latches.

Environment

Do not throw away the appliance as the normal household waste, but hand them in at an official collection point for recycling. By doing this, you help to preserve the environment.

