

Operating instructions

celexon Tripod Screen Ultra-Lightweight



Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully before connecting or operating this product. Please retain these instructions for future reference.

WARNINGS

The purpose of these operating instructions is to familiarise you with the operation of this product. Therefore, keep these instructions in a safe place so that you can refer to them at any time.

- Before installation or use, please refer to the enclosed data sheet with additional-further safety and usage instructions.
- Do not start installation until you have read and understood the complete operating instructions.
- Remove the product from its packaging and remove all packaging materials. Make sure that there is no packaging material on or in the product. If you notice any damage to the packaging, also check whether there is any damage to the product. If you notice any external damage to the unit or any unexpected or unusual functioning, do not continue to use the product. Contact the dealer from whom you purchased the product or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk) for further information.
- This product is intended for indoor use and storage. Occasional outdoor use is possible and may only be carried out under supervision, in a max. wind force 1 and in dry conditions.
- The use of the screen and accessories is prohibited for children under 16 years of age. Ensure that children do not play with the appliance or stay in the vicinity without supervision.
- Conversion or modification of the product impairs product safety.
- **Caution: Risk of injury!** Never open the product without authorisation. Never carry out repairs yourself!
- Do not use the product in the vicinity of escaping gas, water or in a dusty environment.
- Handle the product with care. It can be damaged by knocks, blows or falling from a from even a small height.
- Keep the product away from moisture and heat.
- Never immerse the product in water or other liquids.
- Only use the product in its intended manner. Any other use may result in damage to the product or its surroundings.

- **Caution: Risk of injury!** The unit closes flush and firmly when retracted. Keep fingers, hands or other small parts away from the opening.
- Failure to follow the above instructions may result in personal injury and damage to the product or equipment, or devices connected to it. Incorrect installation or use may also invalidate the warranty.
- If you are unsure about the use of the product, please contact your specialist personnel, your dealer or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk).
- Technical changes and errors expected.

The manufacturer accepts no responsibility for damage to property or personal injury if the screen is used outside the recommended specifications, or in the event of improper installation. Do not use this screen in the vicinity of heaters or air conditioners. If possible, do not use the product in direct sunlight or in front of a window. Due to the temperature-sensitive material of the screen the projection screen fabric may become deformed (flatness).

We recommend that you wait approx. 2 hours after delivery before installing the projection screen fabric. This way the projection screen can acclimatise, especially if it is moved from a cold to a warm environment.

Please **avoid any stains on the surface of the screen.** These may not be able to be removed.

DISCLAIMER

The information in this document is subject to change without notice by the manufacturer. Changes will be added to subsequent versions of this manual. The manufacturer does not guarantee or warranty for the correctness of the information in this document.

CARE INSTRUCTIONS

NEVER clean the screen with alcohol or other cleaning agents containing solvents. Use only a soft and clean cloth. If necessary, use a mild soap solution to remove dirt from the surface. Avoid contact with sharp or pointed objects. These could permanently damage the projection screen fabric. For further information, please refer to the enclosed projection screen instructions.

1. Do not position or store the screen in areas where direct sunlight shines on the screen.
2. Keep the screen fabric free of dirt or particles so as not to damage the surface of the screen and spoil the projection result. If the screen is dirty, clean it with a soft cloth and lukewarm, mild soap solution. Then wipe again with clean water so that no soap residue remains. The fabric must not be soaked, but only wiped with a slightly damp cloth. It must be completely dry before being retracted.
3. Please do not use petrol, thinners or similar solvents to clean the fabric.

IN THE BOX



1x projection screen fabric



1x tripod



4x pole



1x transport bag

INSTALLATION NOTES

Install the screen in a position that is completely visible to all viewers. The optimum installation height corresponds to the position of the viewers centrally to the screen. Ideally the viewer's eye level will be level with the lower third of the screen surface.

Do not place the projection screen in walkways or in fast-moving areas to prevent it from falling over and injuring people.

1. Only touch the screen fabric with clean hands while setting up or dismantling the screen to avoid soiling the projection surface.
2. Do not place the screen on unstable or uneven surfaces, the screen could fall or tip over. Be careful children are not left alone in the room with the screen.
3. When the screen is not in use, always store it protected in the bag provided. The fabric should be rolled up in the cardboard sleeve supplied to avoid creases.
4. Do not hang any objects on the screen.
5. Always roll the fabric and hang it with 2 people to avoid creases in the surface and to prevent the screen from falling over.

SETTING UP THE SCREEN

 
1 |



2 |



3 |

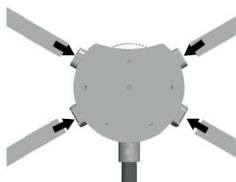


4 |




5 |



6 |

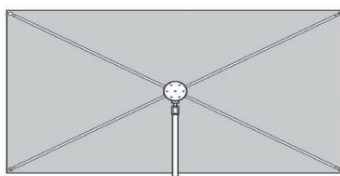 

7 |

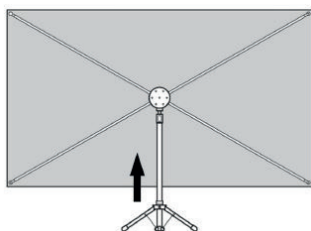 

8 |

