

NC7

ACTIVE NOISE CANCELLATION
Quick Guide



1 Bluetooth pairing and wearing



Bluetooth pairing

1. Take out the 2 earbuds from the charging case, they will power on and pair within 10s.
2. The two earbuds flash red and blue alternately. (Pairing Mode)
3. Search for pairing name [TOZO - NC7]



Select your fit

Wearing

1. Ensure the eartip facing downwards, then place the earbuds into your ears.
 2. Rotate the earbuds back to the auricleside to fit snugly.
- * Eartip facing upwards is the incorrect way to wear the earbuds.



 
Insert



Twist to lock



Wrong demo



XS

S

M

L

XL

XXL

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once **X2:** Press twice

X3: Press three times

Hold: Press and hold for 2 seconds

X2 



Previous song | 前の曲 |

Vorheriges lied | Chanson Irécédente |

Canzone precedente | Canción anterior |

Vorig nummer | Föregående låt



Volume down | 音量を下げる |

Lautstärke runter | Baisser le volume |

Volume basso | Bajar volumen |

Volume verminderen | Sänk volymen

X1 



Active Noise Cancellation mode/Transparent mode/Active Noise Cancellation off mode

アクティブノイズキャンセルモード / 透明モード / アクティブノイズキャンセルオフモード |

Aktiver Rauschunterdrückungsmodus / transparenter Modus / aktive Rauschunterdrückungsmodus |

Mode d'annulation du bruit actif / mode transparent / mode annulation de bruit actif |

Modalità di cancellazione del rumore attivo / modalità trasparente / cancellazione del rumore attivo OFF Modalità |

Modo de cancelación de ruido activo / modo transparente / modo de cancelación de ruido activo de apagado |

Actieve ruis annuleringsmodus / transparante modus / actieve ruis annulering van de modus |

Aktivt brusavbokningsläge / transparent läge / aktivt brusavbokning utanför läget

X1 



Answer | 答え |

Antworten | Réponse |

Rispondere | Responder |

Antwoorden | Svar

Hold 



Reject | 拒絶 |

Ablehnen | Rejeter |

Rifiutare | Rechazar |

Afwijzen | Avvisa

2

Smart touch control

X1 



Play/Pause | 再生/一時停止 |

Spielen/Pause | Jouer/Pause |

Giocare a/Pausa | Tocar/Pausa |

Toneelstuk/Pauze | Spela/Paus

X2 



Next song | 次の曲 |

Nächstes lied | Chanson prochaine |

Canzone prossima | Canción siguiente |

Völgende nummer | Nästa låt



Volume up | 音量を上げる |

Lauter | Monter le son |

Alza il volume | Sube el volumen |

Volume omhoog | Høj volymen

X3 



Voice assistant | 音声アシスタント |

Sprachassistenten | Assistant vocal |

Assistente vocale | Asistente de voz |

Spraakassistent | Röstassistent



Hang up | 電話を切る |

Auflegen | Raccrocher |

Appendere | Colgar |

Ophangen | Lägg på



Power on

Power off

EN

Power on :

Open the cover of the charging case, the earbuds will power on automatically.

Power off :

Put the earbuds into the charging case, close the cover, and automatically power off.

DE

Ein :

Öffnen Sie die Abdeckung des Ladekoffers, die Ohrhörer schalten sich automatisch ein.

Ausschalten :

Legen Sie die Ohrhörer in das Ladeetui, schließen Sie die Abdeckung und schalten Sie sich automatisch aus.

IT

Accensione :

Apri il coperchio della custodia di ricarica, gli auricolari si accenderanno automaticamente.

Spegni :

Inserisci gli auricolari nella custodia di ricarica, chiudi il coperchio e si spengono automaticamente.

NL

Aanzetten:

Open het deksel van de oplaadcassette, de oordopjes worden automatisch ingeschakeld.

Uitschakelen:

Plaats de oordopjes in de oplaadcassette, sluit de hoes en schakel ze automatisch uit.

3

Power on/off

JP

電源オン :

充電ボックスのカバーを開くと、イヤフォンの電源が自動的にオンになります。

電源を切る :

イヤフォンを充電ケースに入れ、カバーを閉じて、自動的に電源を切ります。

FR

Allumer :

Ouvrez le couvercle du boîtier de charge, les écouteurs s'allumeront automatiquement.

Éteindre :

Placez les écouteurs dans le boîtier de charge, fermez le couvercle et éteignez-les automatiquement.

ES

Encendido :

Abra la tapa del estuche de carga, los auriculares se encenderán automáticamente.

Apagado :

Coloque los auriculares en el estuche de carga, cierre la tapa y apáguelos automáticamente.

SE

Ström på :

Öppna locket på laddningsfodralet, öronsnäckorna slås på automatiskt.

Stäng av :

 
 
Sätt i hörsnäckorna i laddningsfodralet, stäng locket och stäng av automatiskt.

5 Reset

If you accidentally get only one earbud work, or fails to pair each other, please reset it:

1.Delete all [TOZO-NC7] Bluetooth records on the phone, and turn off Bluetooth. Take earbuds out from the charging case, press the touch panel for 5 seconds to turn the earbuds off.

2.Press both earbuds for 5 seconds till the Blue light goes out, and then quickly double-tap the panel. The reset is complete once purple light is on.

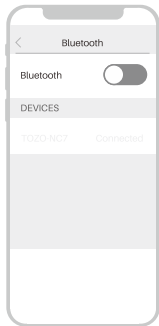




Place the case upright on the wireless charger.
(Wireless charging pad not included)

Or charge the case via USB-C connector.
(USB-C cable included)

 * * * * < 25% * * * * 50%
* * * * > 75% * * * * 100%



Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.



Don't place the case face up or face down.

TOZO



Download on the
App Store



GET IT ON
Google Play

Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: www.tozostore.com

For any assistance please contact Email: info@tozostore.com



RoHS



UK
CA

