 


**UNCOMMON
CARRY**

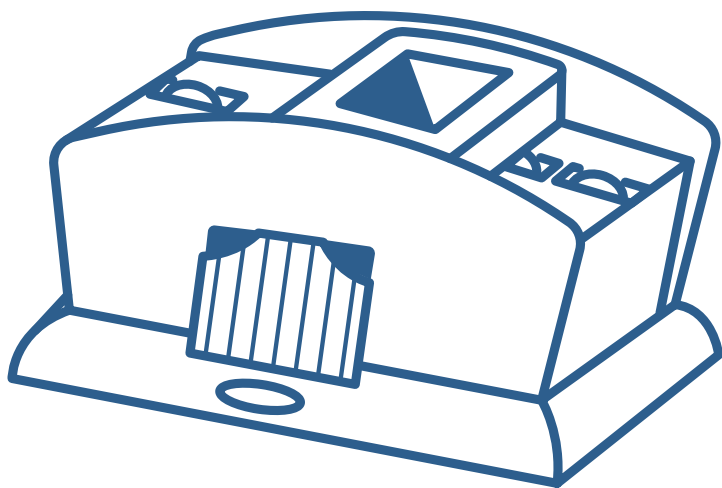

CARD SHUFFLER

— USER GUIDE —



D I S T R I B U T E D B Y
UNCOMMON CARRY

207-536-1174
www.uncommoncarry.com
10 W Point Ln., Suite 10-215,
Biddeford, ME 04005



PRODUCT DESCRIPTION

This shuffler uses innovative gears on each side to evenly and accurately drive the playing cards into the tray in a swift and smooth motion.



QUIET



**SHUFFLES UP TO
2 CARD DECKS**



EASY TO USE



**MEETING DIFFERENT
DEMANDS**

Suitable for different card types:

- **STANDARD 52-CARD DECK**
- **UNO**
- **PHASE 10**
- **SKIP-BO**

WHAT'S IN THE BOX?

1 X CARD SHUFFLER
1 X MANUAL

SPECIFICATIONS

 
Dimensions: 9.4 x 5.3 x 4.1inch
(24 x 13.5 x 10.5cm)

Battery: 4xAA Battery
(not included)

Item Weight: 1.54lbs (698.5g)


Material: ABS, Wood

INSTRUCTIONS

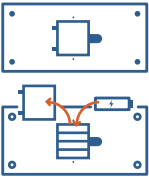


01

 Place 4x AA batteries
at the bottom of
the shuffler.

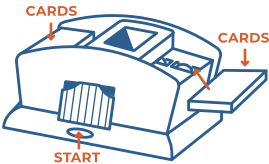

02

 Place cards on each end
of the shuffler (as shown).
Press Start to shuffle.

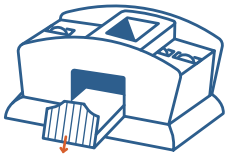

03

Take out the cards
by pulling out the
card station.

