

Instructions for use 1734 Gas barbecue mobile with roof and extractor

Safety instructions:

- Do not place the device in the immediate vicinity of flammable objects.
- Place the device on a flat and horizontal surface.
- Never cover the entire device or the ventilation openings during use.
- Use only commercially available propane/butane liquid gas mixture (5 or 11 kg).
- All hose connections are regularly checked in our workshop. Nevertheless, check all connections (especially those to the liquefied gas bottle).
- If you smell gas, turn off the gas bottle tap immediately.
- Only transport the gas appliance when it is switched off and cooled down.

Switch on:

1. Connect a commercially available liquid gas bottle to the pressure regulator on the device. NOTE: left-hand thread.
2. Turn the gas bottle tap fully open (until the stop and back 1/4 turn to prevent ice from forming on the seal).
3. Press the gas control knob on the burner and turn it clockwise as far as possible (hold).
4. Operate the piezo igniter until the burner element is lit. Continue to hold the gas control knob for 15 seconds.
5. Turn the gas regulator to the desired position (large flame, small flame). The burner element ignites.

Switch off:

1. Push in and turn the gas control knob to its original position. Turn off gas supply.
- The burner element and the pilot light go out (if the gas control knob is not pressed, it is not possible to reach the starting position and the pilot light does not go out).

