



**EVOKE**  
Mp3 PLAYER + RADIO



## USING OPERATION

### RADIO:

#### ON/OFF KNOB

A. Turn the Volume knob to turn on the radio

B. Volume is adjusted with the Volume knob to desired sound level.

Select the mode by sliding the mode selector to FM/AM/SW mode.

Tune in the desired station by turning the tuning knob to search for the available FM/AM/SW stations.

### ANTENNA:

For FM and SW signal reception a telescopic antenna is provided and for AM signal reception a ferrite antenna has been built in. These antennas are direction oriented, and it is recommended to rotate the set for proper signal reception.

### SOLAR PANEL:

A solar panel is provided on top of radio to charge the set using Solar energy.

### MEDIA PLAYER:

Slide the mode selector to Music option. Music can be played via Bluetooth or by Inserting USB drive or TF/SD card.

Press Next/FF (▶▶) or Prev/REW (◀◀) button to choose desired song.

### BLUETOOTH:

Change from Radio mode to Bluetooth mode by sliding the mode selector to Music mode. Turn on the Bluetooth of your digital device (mobile phone/Tablet) and search for the name “iGear Evoke” and connect it.

### POWER OPERATION

DC OPERATION: Plug the Charging cord into a wall outlet.

Note: Please check carefully that the voltage of your household matches with the voltage on your set.

## SPECIAL ATTENTION

- This unit must not be exposed to moisture or rain.
- Ensure all connections are properly made before operating the unit.
- This unit should be positioned so that it is properly ventilated areas.
- Do not expose this unit to direct sunlight for prolonged period or heat radiation sources.

**Warranty Period: 1 Year**  
**In case of consumer complaints:**  
**Customer Support: +91 93726 67193**  
**Email: support@igear.asia**  
**(Between 10am to 5pm, Mon to Fri)**  
**www.igear.asia**

