

U-BOAT

ITALO FONTANA

FLIGHTDECK

CHRONO



Dear Customer


WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.


WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

Mechanical Automatic Chrono

- A** CROWN COVER
- B** CROWN
- C** CHRONOGRAPH START/STOP PUSHER
- D** CHRONOGRAPH RESET PUSHER
- E** CHRONOGRAPH SECONDS HAND
- F** CHRONOGRAPH HOUR COUNTER
- G** SECONDS COUNTER
- H** CHRONOGRAPH MINUTE COUNTER
- I** DATE
- J** HOUR HAND
- K** MINUTE HAND

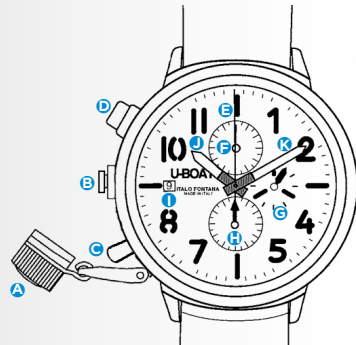

Representative image.
Some components may be in different positions or not fitted.

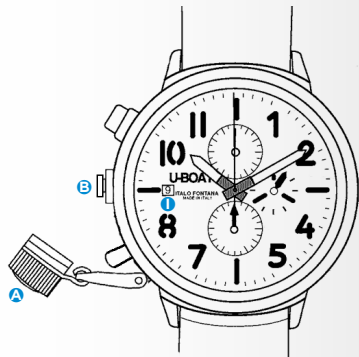

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 2**
FIRST CLICK
- **POSITION 3**
SECOND CLICK

1. Unscrew the crown cover **A** to access the crown **B**.

POSITION 1
NEUTRAL POSITION

to wind up and start the watch, turn the crown **B** clockwise.

POSITION 2
FIRST CLICK

extract the crown **B** to lead it to position 2. Turn the crown **B** clockwise to set the desired date **I**.

POSITION 3
SECOND CLICK

extract the crown **B** to lead it to position 3. Turn the crown **B** clockwise to set the desired time.

2. Press the crown **B** all the way down to return it to position 1. Carefully screw down the crown cover **A** until it locks completely.



***CAUTION IMPORTANT**

INCORRECT POSITION

3
4

CORRECT POSITION

3

To avoid misalignment or breakage of the date click wheel when setting the date, make sure that:

1. When resetting the date ❶ manually, the hand ❷ is not positioned between 21 and 03 o'clock.
2. The day ❶ indicated by the date window is aligned with the window (see figure alongside).
3. Bring the crown ❸ to position 3, position the watch hand ❷ at 3 o'clock, bring the crown ❸ to position 2, move the date ❶ to the desired day paying attention to point 2.



CHRONOGRAPH FUNCTIONS

Press the (on/off) pusher **C** to start the chronograph hand and the hours/minutes totalizer.

Press the pusher **C** again to stop the chronograph, which will restart by pressing it again.

After measuring the times, with the chronograph stopped, press the pusher **D** to reset the chronograph and totalizer hands to zero.



- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com