

Instant Children Print Camera





USER MANUAL

RoHS FC CE 




Description

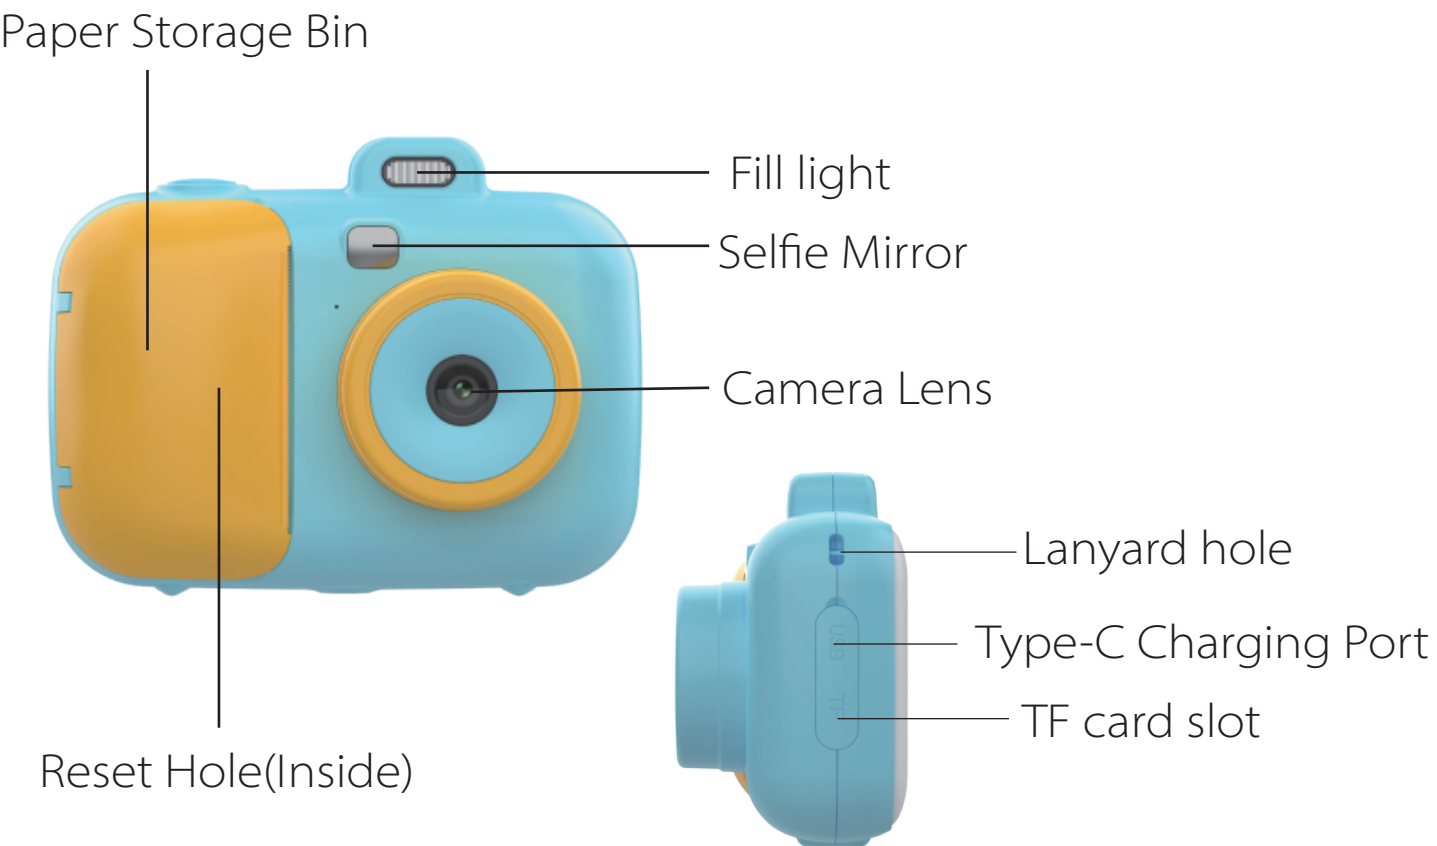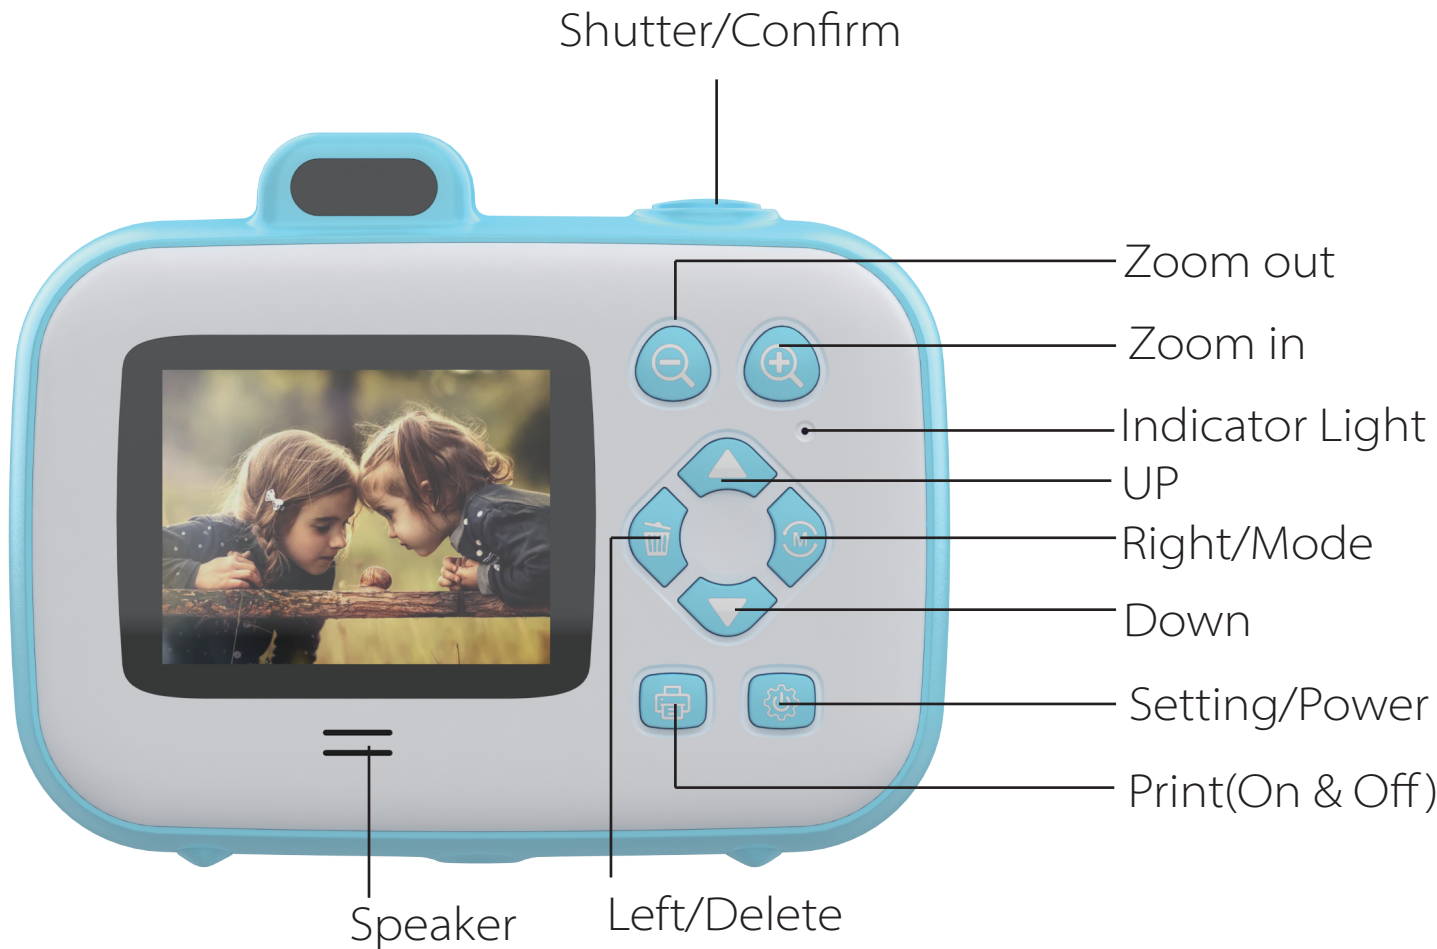

Before Use

1. Charging

Before the first time use, please fully charge the camera before use. The indicator light is red while charging and it goes off when the camera is fully charged(About 3.5 hours).

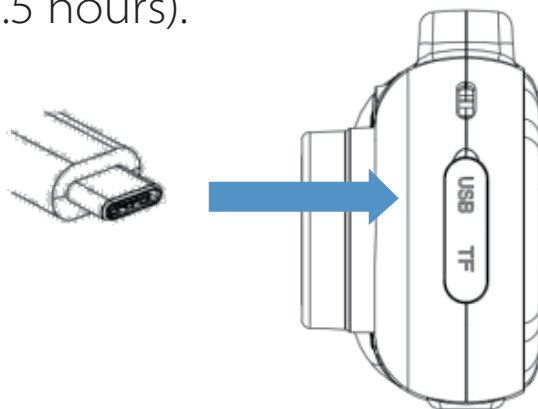


2. TF card installation

Push the card into the TF card slot and you will hear a "click" sound when it is correctly installed and the TF card will stay in the slot.

Notice:

When inserting the card, the side with metal bars should be in the same direction as the screen. If it does not stay in the slot, please push it deeper until you hear the "click" sound. The TF card icon on the screen change as well.

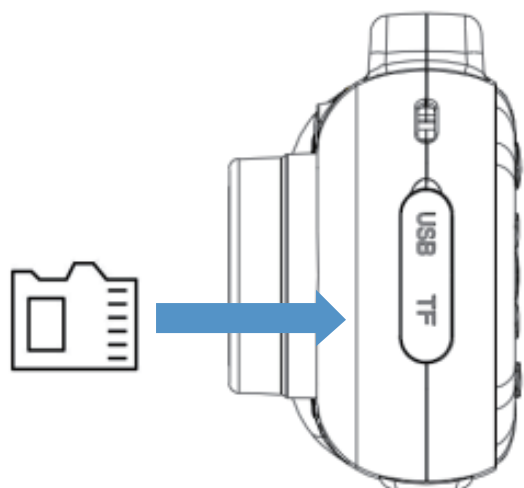

Correctly installed



No Card

3. Print Paper Installation

- Open the cover of the paper storage bin
- Load the paper with the smooth side facing down
- Leave part of the paper outside of the storage bin and close the cover

Notice:

- Wrong direction of installing the paper will not print photos.
- Do not block the print page when printing in case it gets jammed.
- If you see "Printer overheating! Please wait" on the screen, please stop printing photos and wait for it cools down.
- Please tear the photo off gently and slowly.



Please keep the marked area in the picture clean, otherwise it will affect the printing effect.

Cleaning method: wipe with a cotton swab dipped in alcohol.



Start to Use

 
1. Turn on

Long push the power() button to turn it on. The indicator light is blue while working.

2. Take photos and print

Turn on the camera, the default mode is the photo mode. Push the shutter button() to take a photo and it will print as well.

Notice: The print function needs to be opened first, otherwise, it will only take photos and will not print. You can push the print button() to turn it on and off. If the print icon is on the screen, which means it is ready to print.

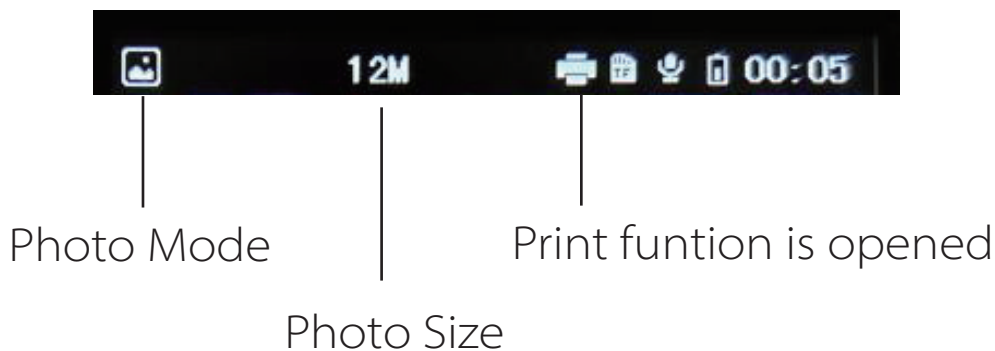

3. Shoot Videos

 
Turn on the camera, the default mode is the photo mode. Long press the shutter button() or push the mode button() to switch to video mode.

Push the shutter button() to start and push it again to finish the recording.

Notice:

Please make sure the audio is opened, otherwise, it will not pick up sound (You can find the audio option in settings).



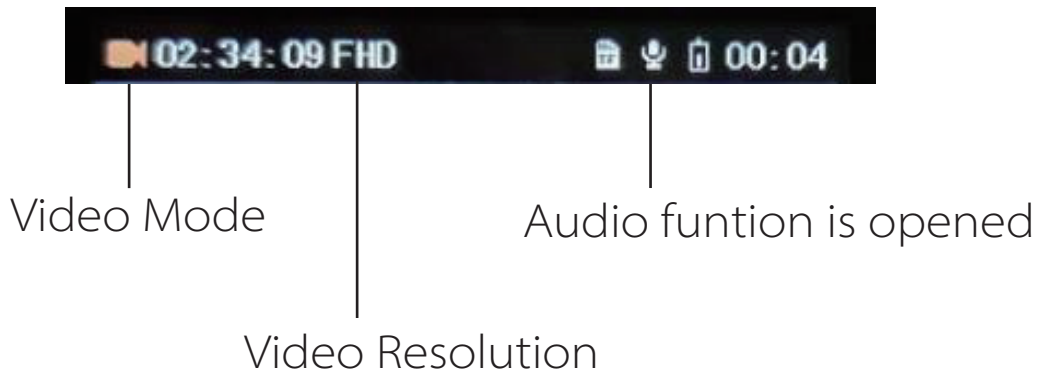


4. View Photos and Videos

Turn on the camera, the default mode is the photo mode. Push the mode button() to switch it to Playback mode. Push the UP/DOWN button to browse photos and videos.

Playback videos: push the shutter button() to start playback and push it() again to pause. Use the UP()/DOWN() button can browse other photos and videos.

Notice:

 - When the print function is opened, push the print button() when viewing a photo will directly print the current photo.
The print button() will not work in viewing videos.
- When playback a video, you need to pause it first before pushing the mode button() to switch modes.

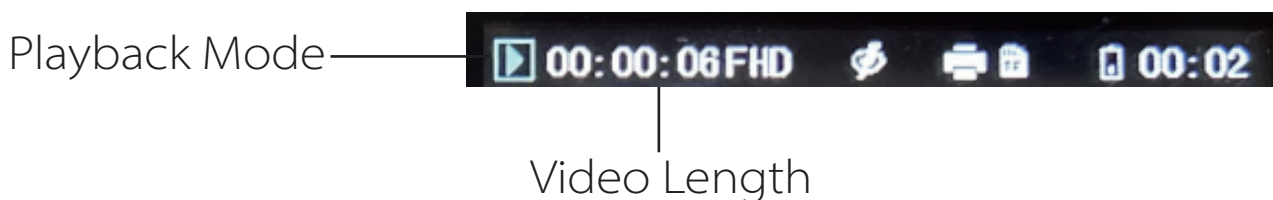

5. Delete Photo/Video

- a. Switch it to Playback mode, then use the UP/DOWN button to choose the one you would like to delete.
- b. Push the delete button() and use the UP()/DOWN() button to choose to delete the current file or delete all files.
- c. Then push the shutter button() to confirm, and use the Left()/Right() button to continue your option
- d. Push the shutter button() to make the final confirmation.

Notice:

If you just want to empty the TF card, you can find "Format" on the settings. Formatting the TF card will delete all files.

But please make sure you have backed up the files you want before formatting the card.



Features

1. Photo Stickers

In photo/video mode, push the DOWN(▼) button to open the sticker feature. Then use the UP(▲)/DOWN(▼) to choose a sticker. Long press the DOWN(▼) button can directly shut off the sticker.

2. Fill Light

Long press the UP(▲) button can turn on the fill light. Long press again can turn it off.

3. File Transmission

- a. Use the Type-C cord to connect it to the computer
- b. A USB drive icon shows on the camera screen means it is successfully connected.
- c. Find this USB drive on your computer and you can see the photos and videos you take
- d. Copy it to your computer or other memory devices

Notice:

1. If you connect it to the computer when the camera is turned on, "memory" will show on the screen and you need to push the shutter button() to confirm.
2. Some cords may not support file transmission, please use the cord enclosed with this product.



Settings

Turn on the camera, and push the setting() button to get into settings. Use the UP()/DOWN() button to choose the feature you want to set up and push the shutter button to confirm.

1. Video resolution and photo quality:

Choose the feature and push the shutter button() to confirm. Then use the UP()/DOWN() button to choose and push the shutter button() to confirm again.

2. Delay photo:

Push the shutter button() to choose or cancel this feature.

✓ means this feature is working, ☐ means not.

3. Cyclic record:

Push the shutter button() to choose the options: 3 mins/5 mins/10 mins. Push this button() again to confirm your choice.

4. Print Shade:

Push the shutter button() to choose the options: High/Mid/Low
The higher the print shade, the clearer the printed photo.

Notice: Because this is printed in black and white, choosing the higher print shade will cause the printed photo darker. You can choose the appropriate print shade for your photo.

5. Audio

Push the shutter button() to choose or cancel this feature.

Notice: If cancel this feature, the video will not pick up the sound.



6. Date Tag

Push the shutter button() to choose or cancel this feature.

Notice: If cancel this feature, there is no time stamp on the photos and video you shoot.

7. Beep Sound

Push the shutter button() to choose or cancel this feature.

Notice: If cancel this feature, the beep sound of manipulating buttons will disappear. The sound effect of taking photos will disappear as well.

8. Time Setting

Push the shutter button() to the setting page. Use the Left() /Right() button to choose the Year/Month/Day/Hour/Minute/Second to set.

Then use the UP() button to increase and the DOWN() button to reduce. Then choose OK and push the shutter button() to confirm.

Year	Month	Day
H	Min	S
OK	Cancel	

9. Auto-Power off

Push the shutter button() to choose the options: OFF/3mins/5mins/10mins. Use the UP() /DOWN() button to choose and push the shutter button() to confirm your choice.

Notice: If you turn on this feature, the camera will auto-power off when not in use.



10. Format

The camera uses the FAT32 file system. Please use the card enclosed with the product. If you use a card that is not the FAT32 file system, the camera will ask you to format the card after installing the card.

Notice:

- a. The 32GB TF card has already been installed in the camera.
- b. If the TF card you used is not the FAT32 file system, and it still can't work after formatting it on the camera. It could be the card can't be formatted to the FAT32 system on the camera and you need to format it on your computer. Or you could use a different TF card.
- c. Format the card will erase all files in the card, please save the files if it is needed.



Troubleshooting

1. Issues with the Memory card

a. Says No card after installing the card


----Check if the card is correctly installed. See the instruction on Page 2

b. Keep asking to format the card

----The file system of the card should be FAT32. If it can't format it to the FAT32 file system, it does not work with the card.

2. The camera froze

----Open the cover of the paper storage bin, and you can find the reset hole inside of it, use a pin to insert the hole and the camera will be turned off. Then you can restart the camera and use it.

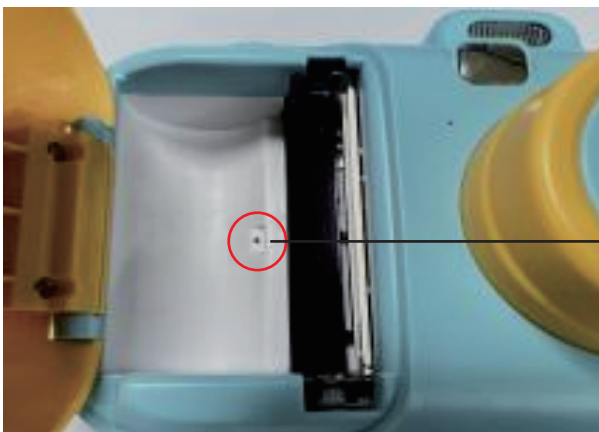

Reset Hole

3. Does not work when connecting to PC

----If you see a "Memory" icon on the screen, push the shutter button() to confirm and the camera will enter the file transmission mode.

----After connecting to the PC, if it has no icons on the screen, please check if the cord has been fully inserted into the port or change to a different cord that supports file transmission.



Be Careful

1. This product is not waterproof, please keep the camera away from water and wet environment.
2. Built-in 1000mAh battery, do not replace the battery by yourself.
3. This product can only be charged with the (5V/1 A) adapter, and keep your kids away from it.
4. The adapter used to charge this product (not included in the package) cannot be used as a toy, and should be used according to the charging specification of 5V/1 A.
5. The camera can not be cleaned with liquid directly. Disconnect the toy from the charger before cleaning.
6. Regularly check if the camera/cords and other accessories are damaged, and stop using them if they could cause dangerous problems.

Warning

1. Contains small parts, not suitable for children under 3 years old!
2. Keep it away from the fire source when using it!
3. This product needs to be used under direct adult supervision!

NO.DC503J 20230309

