



STREAMLINE | INSTRUCTION MANUAL

STREAMVAC™

Internal Dusting Kit



1 Safety Precautions

Safety Precautions

- Operators shall be adequately instructed on the use of these machines, as with all electrical equipment, care and attention must be exercised at all times during use, you must also make certain that routine and preventative maintenance is carried out periodically to ensure safe operation.
- Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.
- This machine is for DRY USE only.
- You must disconnect the machine from the mains by removing the plug from the supply socket BEFORE cleaning or maintenance and when replacing parts or converting the machine to another function.
- This appliance is intended to be assembled, cleaned and maintained by an adult.
- This machine is not suitable for the collection of biological hazards, hazardous or explosive dusts.
- This machine is not a toy, children shall not play with this machine.
- This machine must not be used by persons with reduced physical, sensory or motor capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction
- If the vacuum cleaner has a blockage, switch off, remove the plug from the socket outlet, and inspect the poles and hose for debris. If the poles and the hose are clear, replace the dust bag and clean the filter.
- The vacuum system should be inspected before use for any damage.
- Always replace any worn/damaged parts immediately.
- This machine must NOT be stored outside, or used in wet environments, or to collect wet materials.
- The vacuum cleaner should be stored in a dry place and is for indoor use only.

Instructions For Use

Setting Up

Make sure that you are displaying sufficient warning signs if you are working in public places.

- Connect the power lead to a mains power supply. Connect the flexible vacuum hose to the front of the Streamvac™.
- Join the required number of carbon fibre pole sections together, with the narrow tapered end pointing in the direction of the air flow. Connect the flexible hose to the narrow taper end of the pole sections. Select the required attachment and join it to the larger taper end of the pole using the plastic taper connector.
- Switch the Streamvac™ on and commence with the task on hand.

Care should be taken to avoid contact with any electrical sources. Electrocution can occur.


Maintenance

- When the dust bag becomes full, remove the Streamvac™ head assembly by pulling out the two tabs on either side and replace the bag.
- Dust the filter basket periodically and replace it if it gets damaged or becomes unserviceable.

Pole Sections

- Keep the taper joints of the sectional pole clean and free from grit.

2 Instructions For Use

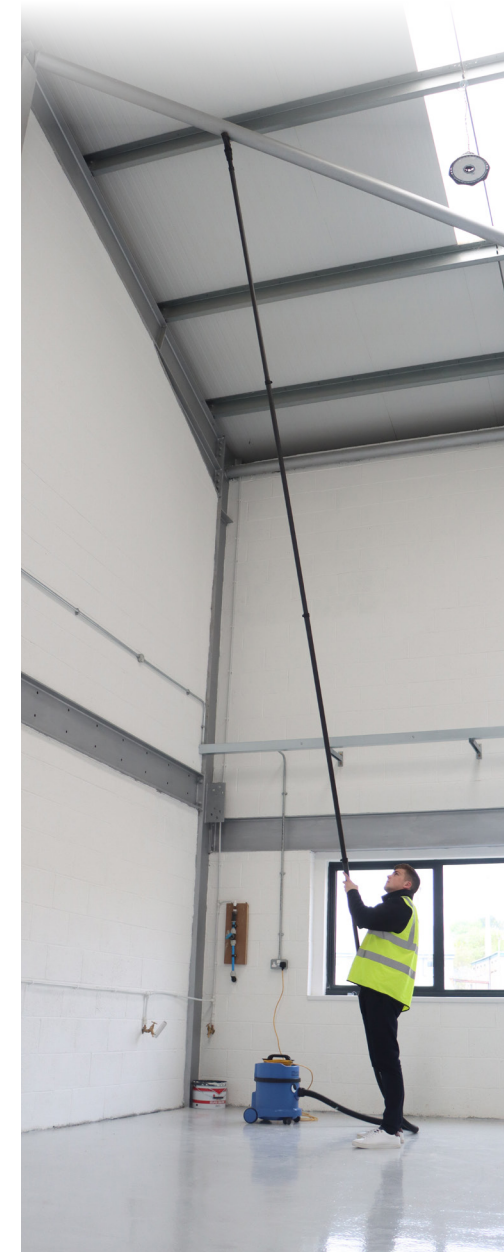

3 Streamline® Warranty

Streamline® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If Steamline® receives notice of such defects during the warranty period, Steamline® will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by Steamline®.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by Steamline®.

The customer is responsible for the cost of return of the defective part. If warranty is approved, Steamline® will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of Steamline®.

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by Steamline®, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to Steamline®.

This warranty constitutes the exclusive remedy of any purchaser of a Steamline® unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and Steamline® shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Why Steamline®?

Flexibility

- Steamline® systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the Steamline® name
- All Steamline® products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all Steamline® products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- Steamline® is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



Manufactured In
The United Kingdom



Checked & Tested
By Quality Control

 STREAMLINE®
STREAMVAC™

INSTR-DV370-032-ES

