

⚠ WARNINGS AND CAUTIONS

Released Date: 2022-04-08

READ AND SAVE THESE INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, install or operate the product.

 
WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- RISK OF FIRE - Use bulbs specified by the markings and/or labels on the fixture.
- RISK OF PERSONAL INJURY - DO NOT bend the blades when installing the fan, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY - mount to outlet box marked (acceptable for fan support of 22.7kg(50lbs) or less) and use mounting screws provided with the outlet box.
- All set screws must be checked, and re-tightened where necessary, before installation.
- After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- Suitable for use with solid-state speed controls.
- use only with light kits marked suitable for use in damp locations.
- This unit weighs 14.5 kg (31.9 lbs).

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Disconnect fixture from the power source before replacing bulbs or cleaning. Make sure the bulbs are given sufficient time to cool before removing.

TOOLS REQUIRED

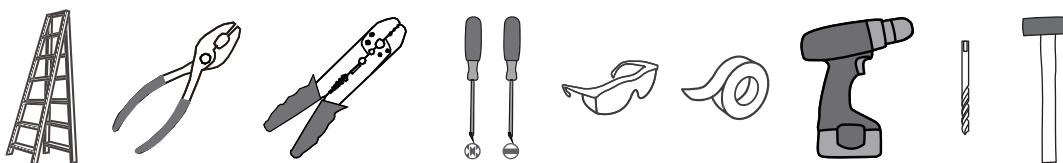


CARE AND MAINTENANCE

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quoizel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quoizel.com.

 PACKAGE CONTENTS

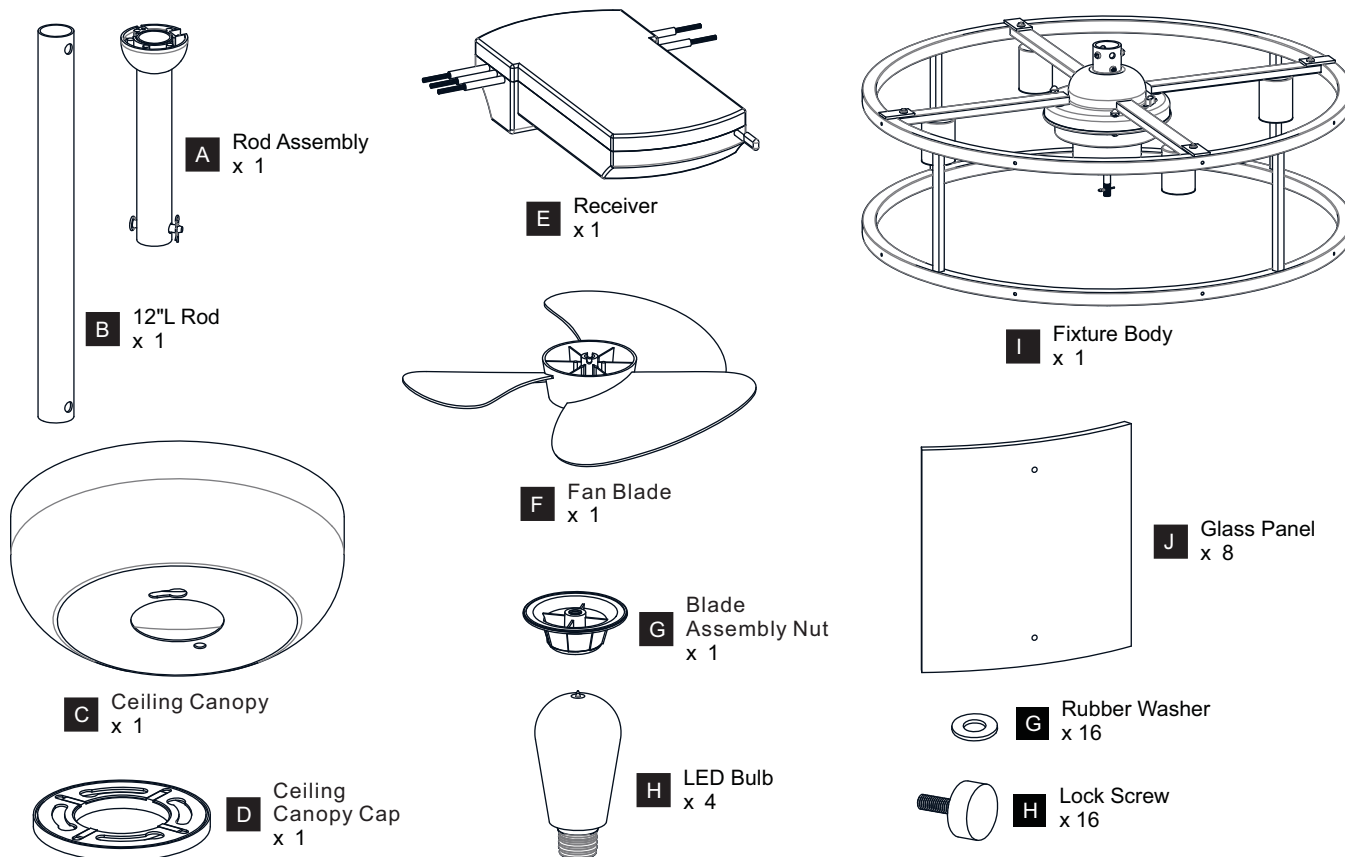

PACKAGE CONTENTS (PARTS BAG 1)



AA Lock Washer
x 4



BB Spring Washer
x 4



CC Flat Washer
x 4



 
DD Wire Connector
[1pc replacement
connector included]
x 7



EE Screw
x 2



FF Mechanical Screw
x 2

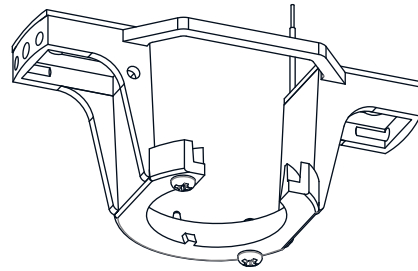

GG Hanger Frame
x 1

PACKAGE CONTENTS (PARTS BAG 2)



HH Spring Washer
x 1



 
II Flat Washer
x 1



JJ Wall Anchor
x 1




KK Screw
x 1



LL Fastener with
Set Screw
x 1

 
PACKAGE CONTENTS (PARTS BAG 3)

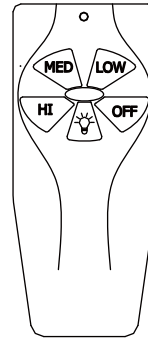

MM Remote Control
Transmitter
x 1



 NN 9V Battery
x 1




OO Wall Bracket
x 1




PP Screw
x 2

INSTALLATION

 1 Install Glass Panels

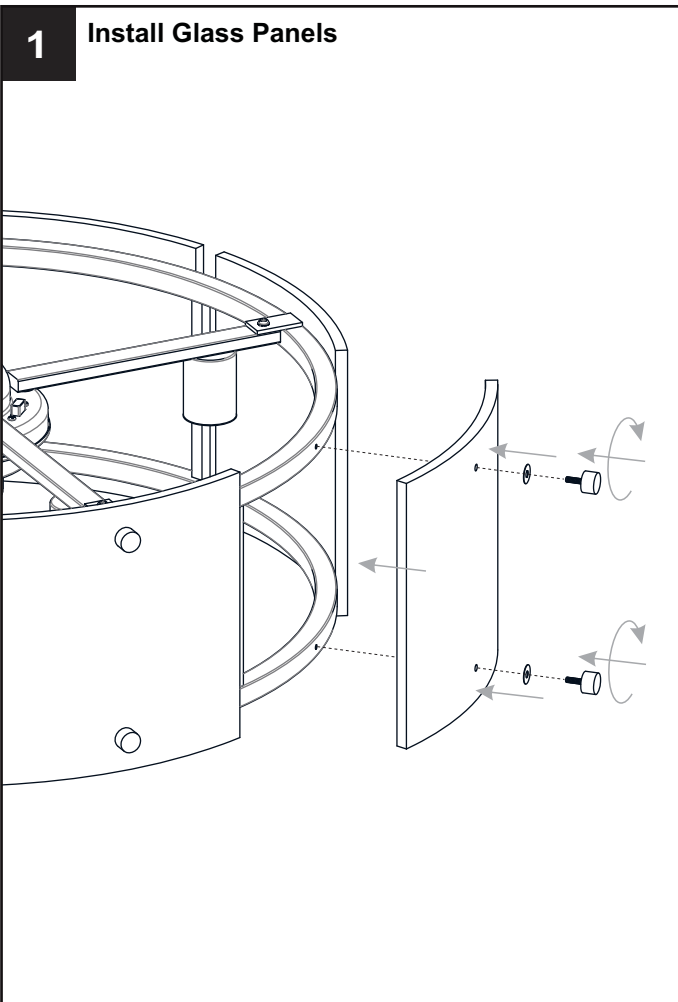


2 Install Hanger Frame

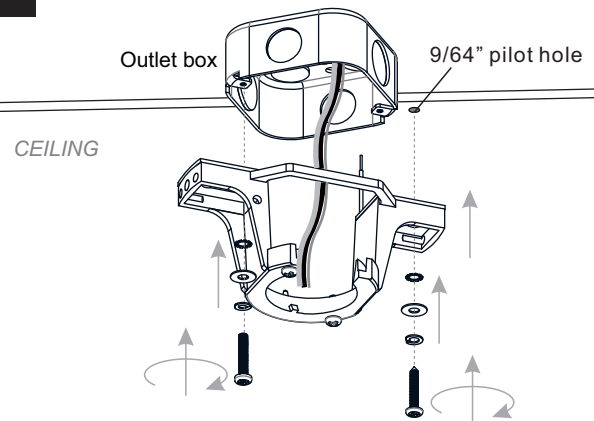 

Use machine screws
when securing to existing
ceiling fan-rated outlet box.
that supports of 50 lbs
(22.72 kg) or less.

 Use wood screws
When securing to support
structure with approved
electrical outlet box. Drill
9/64" pilot holes.

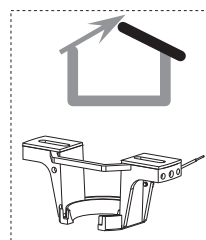


**This fan cannot be used for the
ceiling which angle is greater
than 10 degree.**

For angled ceilings, point
opening toward peak.

3

 Choose Rod



OPTION 1

Standard Downrod
(Included -
Pre-assembled)
for ceilings 11 Feet high



OPTION 2

Longer Downrod
(Included)
for angled ceilings or
ceilings 12 Feet or higher

 
 
SKIP TO NEXT STEP

1

2

3

Steps 1-3 to remove standard downrod

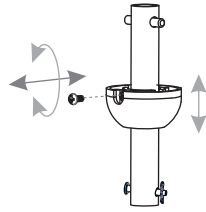

4

Steps 4-6 to assemble longer downrod

6

5

4

Install Rod to Fixture Body

1

2

 
 
 
3

4


Steps 1-2 to remove pin

Install ceiling canopy &
ceiling canopy cap


Remove set screws on
fixture body

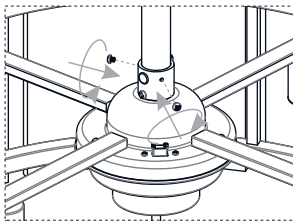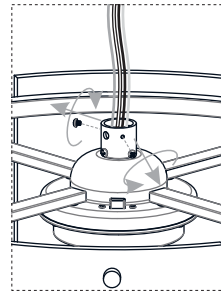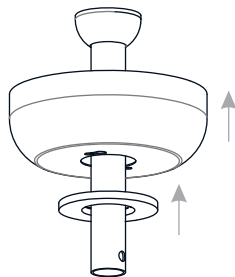

Install set screws

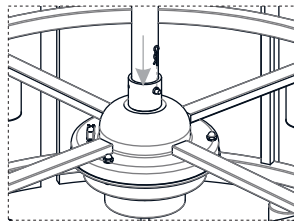 

Install pin

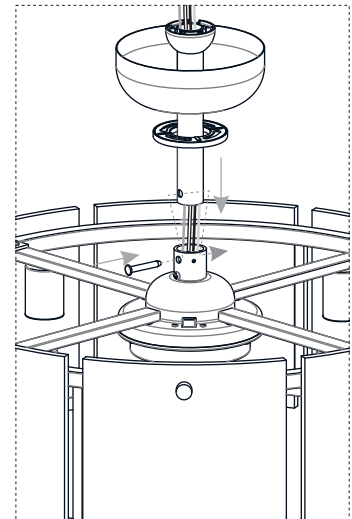 


Install rod

7


6

5

 
5 Install Rod to Hanger Frame

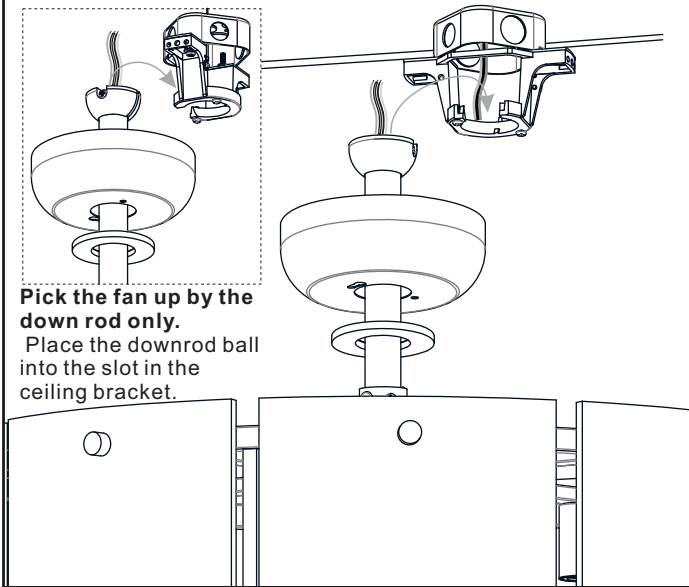


6 Install Safety Cable

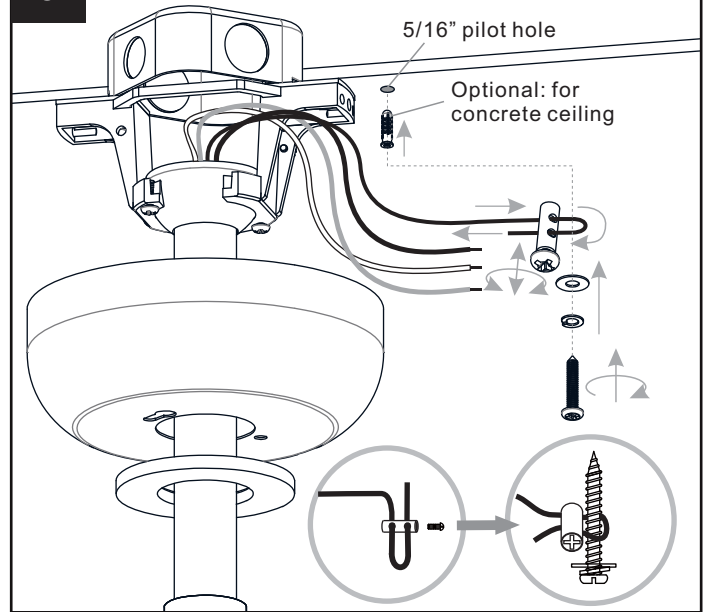 


7 Wiring

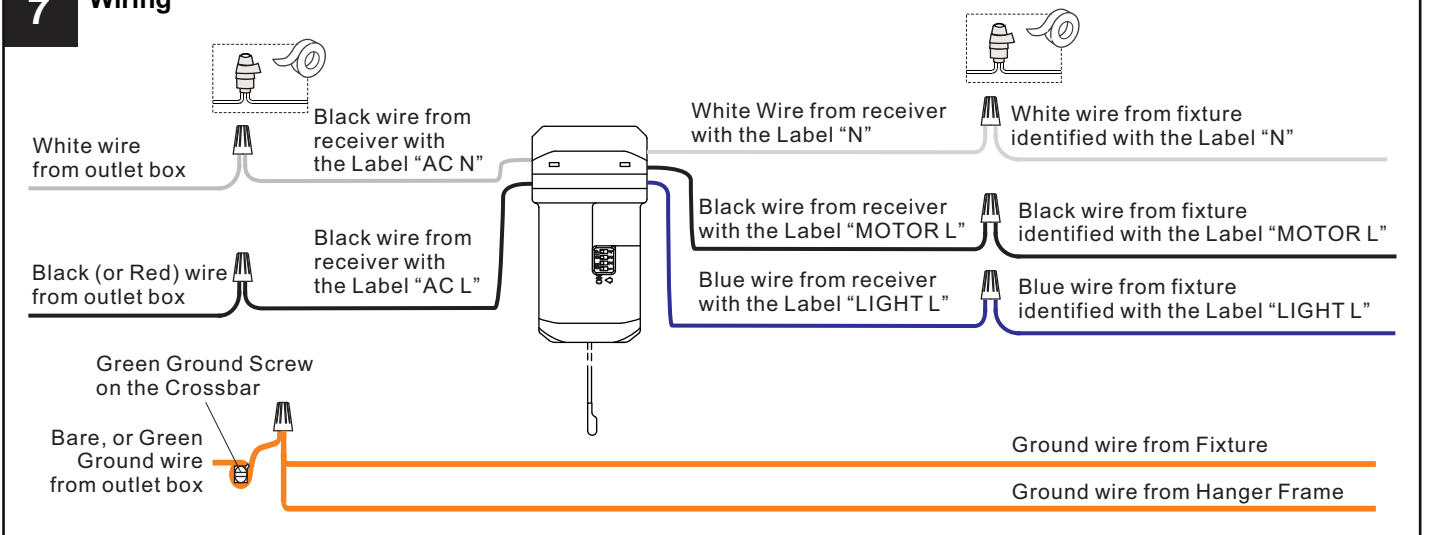 


8 Place Controller to Hanger Frame

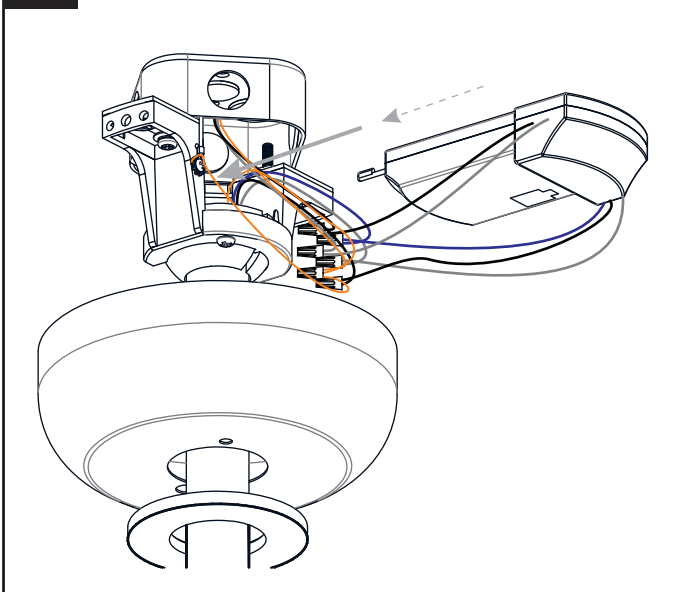 


9 Install Ceiling Canopy and Cap

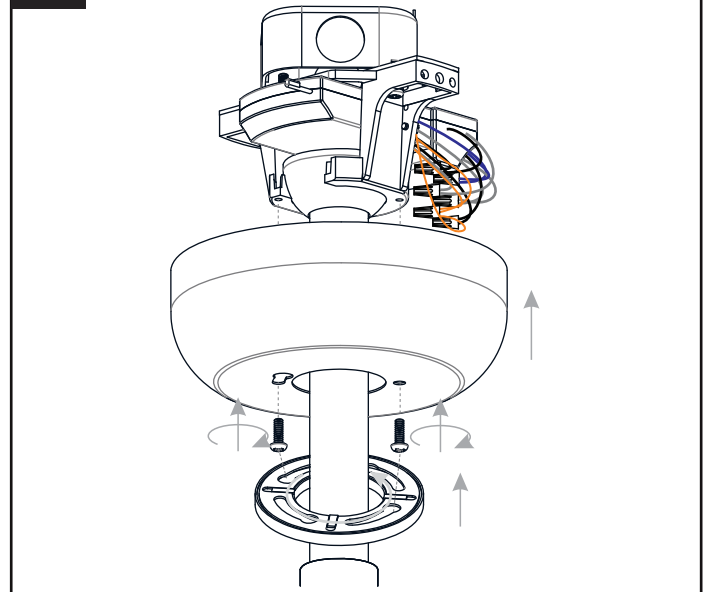 


10 Install Fan Blade

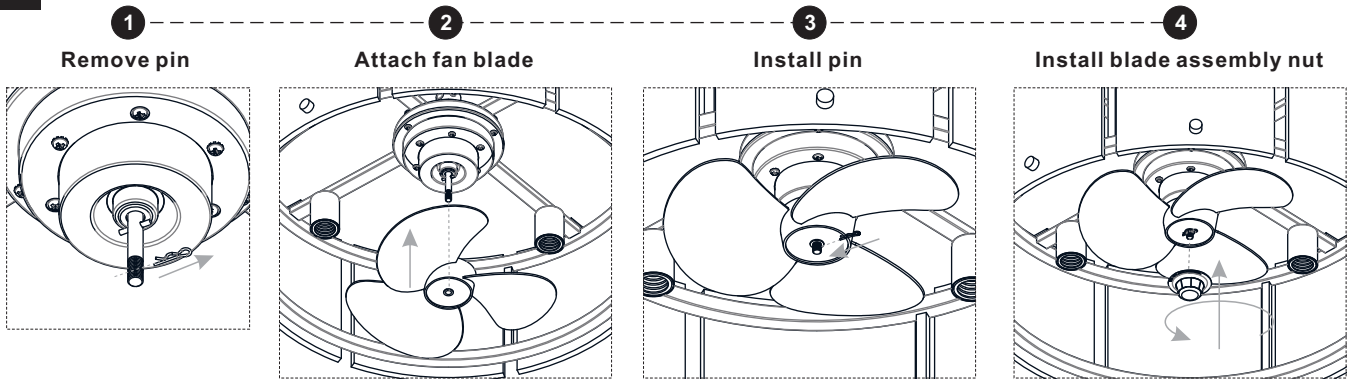 


11 Install Bulbs

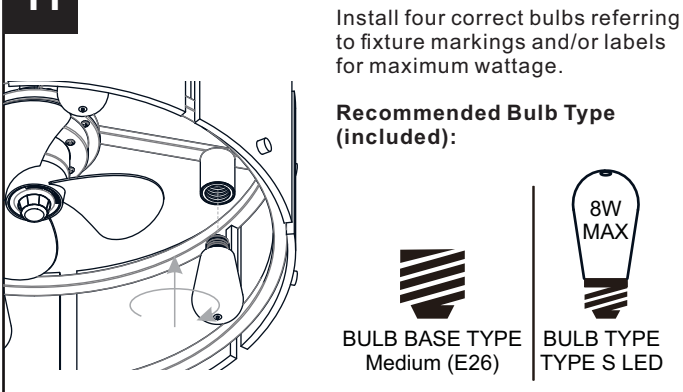 


12 Install Wall Bracket

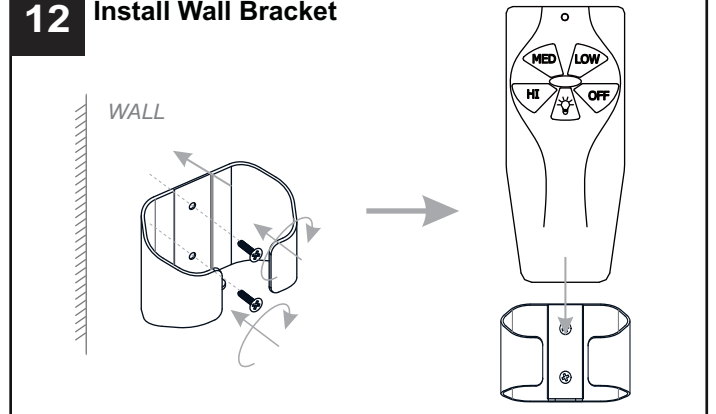 

 13 Install Battery to Remote Control Transmitter

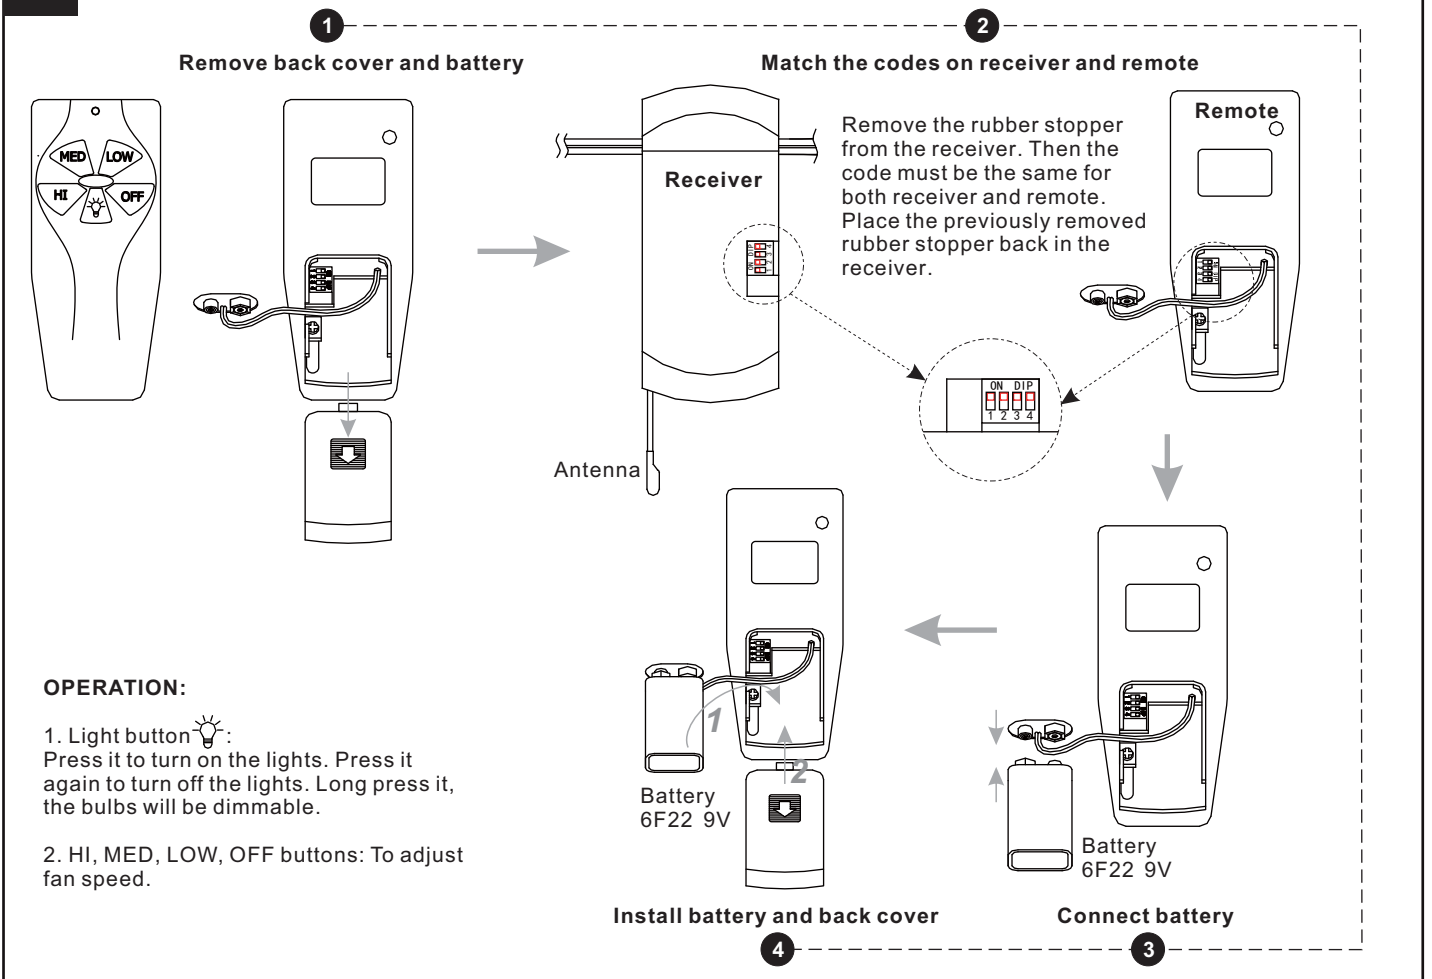

14 Reverse Fan Blade (Optional)

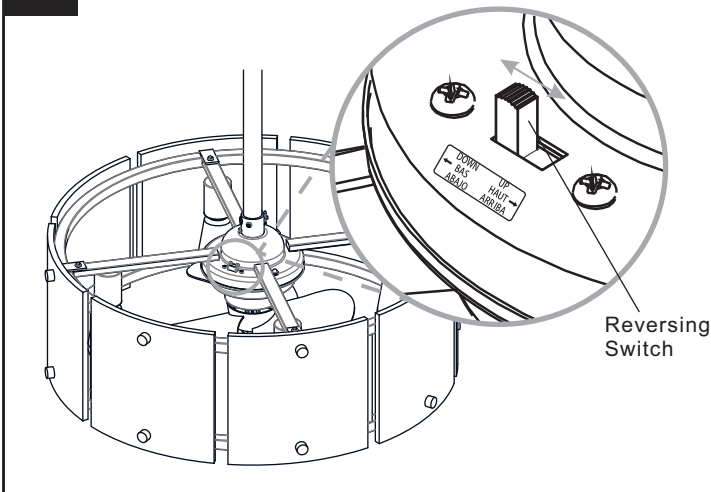 

Reverse Switch Information		
Season	Rotation Direction	Switch Position
Summer	Counterclockwise	Left
Winter	Clockwise	Right

- Note:**
1. If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning.
 2. Push the reverse switch to Left or Right completely.

Your installation is now complete! Restore electricity and save this sheet for future reference.

