

E114R GLASS Access Instructions

- Before any maintenance and/or cleaning the exterior of the fire, disconnect the unit from the power supply and leave it until cooled off.
1. Turn off the fire and unplug from the mains.
 2. Unscrew the decorative brackets that hold the fire to the mantle, carefully remove the fire and sit on the floor.
 3. Unscrew the front frame by unscrewing the 4 screws holding it on, there is one at the top on the left and right side, and one at the bottom of the left and right side.
 4. This will reveal a metal strip on the top and bottom of display with four screws holding the glass in, two on the top and two on the bottom.
 5. Remove the two top screws and you can then lift the glass up and out.
 6. You will see the rubber seal, you can remove this to wipe underneath if you wish, but the glass can now be cleaned and dried.
 7. Put the glass back in the fire display and replace the two screws to the top metal strip.
 8. Replace the front frame and attach the 4 screws you removed.

