

User manual 1764 Hot Potato Baker (hot air oven)

Safety instructions:

- Do not place the device in the immediate vicinity of flammable objects.
- Place the device on a flat and horizontal surface.
- Never cover the entire device or the ventilation openings during use.
- Never leave the powered device turned on unattended.
- Make sure that the mains plug and all electrical components (if not designed for this purpose) do not come into contact with water.
- Always have electrical installations commissioned by a specialist.
- Local regulations and standards must be observed during installation.
- Do not use devices with a damaged power cord.
- Never disconnect the mains connection by pulling the cable. So always grab the plug to disconnect the mains connection.
- Some parts of the device may become hot during use.
- Only transport the device when it is switched off.

Switch on:

1. Connect the device to the power source (16A, 230V).
2. Select desired temperature by means of selector switch
3. Select the desired cooking time using selector switch (approx. 10 minutes preheating)
4. The prepared product can be kept warm above the oven space

Switch off:

1. Empty the appliance completely and let it cool down
2. Switch off the appliance and disconnect it from the power source (make sure the door is closed properly)

