

Electric fondue



Reference: DOC106
Version : 1.6
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
2. Place the appliance on a flat, dry and stable surface.
3. Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
4. Never use this appliance if it is not working properly, if it has been dropped, damaged or if it has been dropped into water. Take it to a service centre for inspection and repair.
5. Never try to dismantle the appliance yourself.
6. There is a risk of injury if the appliance is misused.
7. Do not cover the appliance during use.
8. Do not move the appliance during use or when it is hot.



Instruction Manual

9. This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children.

10. Keep the appliance and its cord out of reach of children less than 8 years.
11. Avoid contact with hot surfaces or heat sources (hotplates, near hot gas or on a hot oven etc.).
12. CAUTION: The temperature of accessible surfaces may be high when the appliance is operating.
13. CAUTION: The surface of the heating element has residual heat after use.
14. Always allow to cool down before storing or cleaning.
15. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Water must not enter the base of the appliance.
16. Never use this product with wet hands or feet.



Instruction Manual

17. Before connecting your appliance, make sure that the voltage in your home corresponds to the voltage indicated on the appliance's nameplate.
18. The appliance is not intended to be operated by means of external timer or separate remote control system.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
20. Do not pull on the power cord or the unit itself to unplug.
21. Do not let the cord hang over the table or counter or touch a hot surface.
22. The socket must always remain accessible when the appliance is plugged in.
23. Only connect the appliance to a socket with a built-in earth connection. If an extension cord is used, it must have a built-in earth connection and must be able to withstand the power of the appliance.
Make sure that no one is trapped inside.
24. Make sure the appliance has cooled down before cleaning and storing it.
25. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph "cleaning" in manual.
26. Do not leave the appliance unattended when it is plugged in or in operation
27. Always unplug the appliance in case of malfunction, after use or before cleaning.



Instruction Manual

28. Keep the manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be provided. Use the appliance only for private use and in the manner indicated in the instruction manual.
29. Do not use any accessories not recommended by the manufacturer as this may damage the appliance.
30. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
31. This type of device is not designed to be used continuously, it is not a professional device, it is necessary to stop it temporarily.
32. Never use the device outdoors and never leave it in a place exposed to bad weather and humidity.
33. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIAL MEASURES

Information:



Instruction Manual

During use the temperature light will go on and off. This indicates that the thermostat is working properly and is constantly regulating the temperature. Unplug the appliance when the heating base is no longer being used. Plug the appliance in and set the thermostat to the desired temperature. It will take several minutes for the appliance to heat up, so in the meantime you can prepare the ingredients. The temperature light will go out as soon as the heating base reaches the right temperature.

SPECIFICATIONS

Voltage: 220 - 240V ~ 50-60Hz

Puissance: 500W

BEFORE USE

Remove any stickers. Wash all parts in soapy water before use (except for heating base) and rinse thoroughly.

Do not use any sharp objects in the pans or on the baking sheet as these may damage the non-stick coating.

USING YOUR APPLIANCE

The adjustable temperature means that the fondue pan can be used for various kinds of fondue: the classic meat fondue, a cheese fondue, a chocolate fondue or a Chinese fondue (with ingredients cooked in boiling stock). Fill the pan with the desired ingredient-oil, cheese, stock or chocolate-and place it on the heating base. Make sure the pan is not too full. The contents should come between the minimum and maximum levels. Set the thermostat regulates the temperature. For the classic meat fondue the thermostat needs to be set at the maximum level. Whereas for cheese, Chinese and chocolate fondues the “medium” setting is preferable. Adjust the temperature so that the contents are just starting to boil.



Instruction Manual

Cheese and chocolate in particular need to be heated up slowly, as the pan will otherwise boil over. Stir every now and to obtain a smooth mixture. Only prick in to the ingredients, not into the pan.

KEEPING FOOD HOT

Set the temperature to “low” for this.

CLEANING AND STORAGE

FIRST UNPLUG THE APPLIANCE

The pot can be washed in soapy water or in the dishwasher. Do not use a scouring agent or scouring sponge.

Cleaning tip: put a cup of water and a squirt of washing up liquid in the pan or on the baking sheet. Switch on the lowers temperature and leave for about 10 minutes. Then switch off and rinse thoroughly.

The heating base must be kept dry. It can be wiped with a damp cloth if necessary.



Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice

