




MV400 DUAL FUNCTION BROW AND FACIAL HAIR REMOVER

QUICK START GUIDE

Brow Trimming:


1. Remove upper cap by pressing on one side of the cap
2. Slide switch upward to turn on brow trimmer.
3. Remove unwanted hair with the tip of the trimmer.

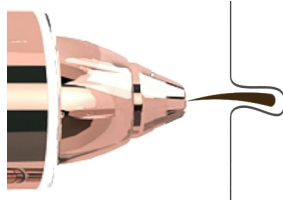

Facial Trimming:

1. Remove lower cap by pressing on one side of the cap
2. Slide switch downward to turn on facial trimmer.
3. Move in circular motion to remove hair.

For users with dry skin it is recommended to apply a light moisturizer 15 minutes before use

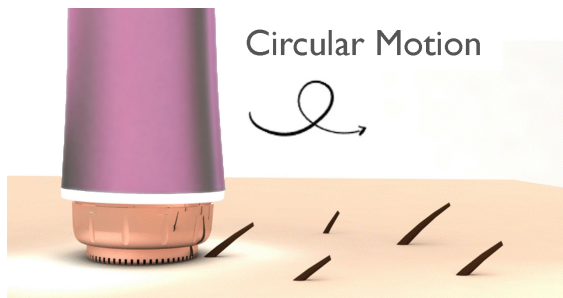

Getting Started / Charging Battery

- Prior to first use, fully charge the unit.
- Insert micro USB end of the charging cable into the USB charging port located on the back of the unit.
- The charging LED indicator light will turn RED while unit is charging.
- When charging is complete, the charging indicator light will turn OFF.



How to use the brow trimmer

- Remove the upper cap.
- Slide the switch located on the front of the unit upward into the "ON" position.
The built-in 360° LED illuminated bezel around the head will automatically turn on to allow clear visibility of fine hairs.
- Use the "Pencil-tip" of the trimmer head to delicately trim any stray, unwanted or isolated hairs that extend beyond the natural line of your brows.
- To remove entire hairs, move trimmer in the direction from the tip of the hair towards the root rotating the head with your fingers may be required to align a cutting slot with the hair. You may find it useful to practice your skill on your arm hair to build up speed and proficiency



How to use the facial trimmer

- Remove the lower cap.
- Slide the switch located on the front of the unit downward into the "ON" position.
The built-in 360° LED illuminated bezel around the head will automatically turn on to allow clear visibility of fine hairs.
- Gently press the head of the unit against your skin. The unit should not be on an angle. Proceed making small circular motions to remove unwanted hairs.



Cleaning



Your trimmer is designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmer, follow these simple cleaning tips:

- Turn the trimmer off.
 - Detach the rotating hair removal head by turning it counter-clockwise to the unlocked position and pulling it off.
 - After each use, clean the head by using a brush (included) to wipe away the accumulated hair residue.
 - Empty any hair from the body of the unit by turning it over and gently tapping the sides.
 - After cleaning, put the hair removal head back to its original position on the unit and turn clockwise to the locked position.
- (Do not rinse trimmer head nor submerge unit under water)

Caution

- Keep out of reach of children.
- Do not use on irritated skin or areas where there are pimples or acne. Discontinue use if skin irritation occurs.
- Exercise caution when using around eyes.
- Do not rinse trimmer head under water. Do not submerge unit under water.
- Store in a cool dry place when not in use. Do not dispose in fire.
- This unit contains a Lithium Ion battery. Dispose of in accordance with all applicable federal, state and local regulations.

Patent Pending. Designed in the UK. Assembled in China, Distributed by Nice Assets Limited Hong Kong. info@niceassets.hk MV400D20201027

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

iMusthav[®]

MV400 DUAL FUNCTION BROW AND FACIAL HAIR REMOVER

Brow Trimmer - Hypoallergenic 18 Karat gold plated blade tip



Facial Trimmer - Hypoallergenic 18 Karat gold plated blade tip

