




1. Package Contents

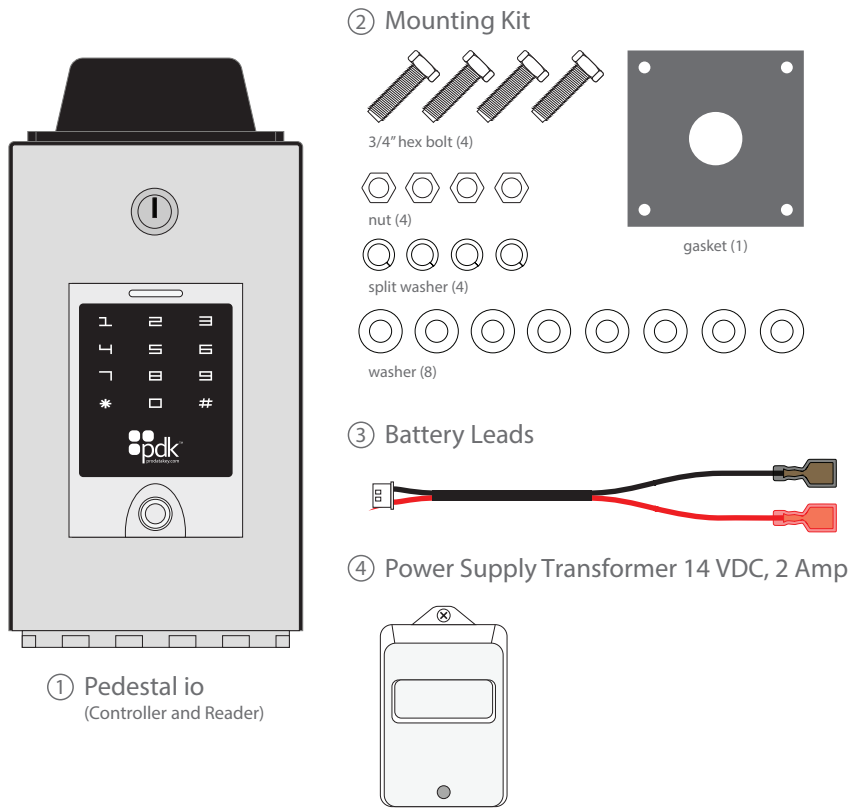


2. Mounting

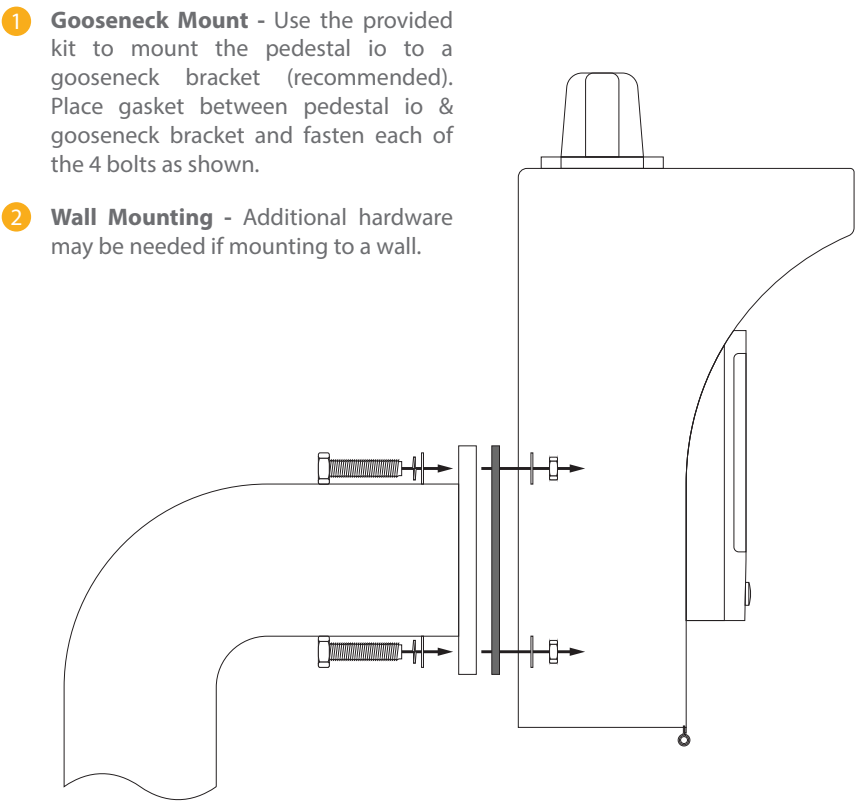


3. Reader

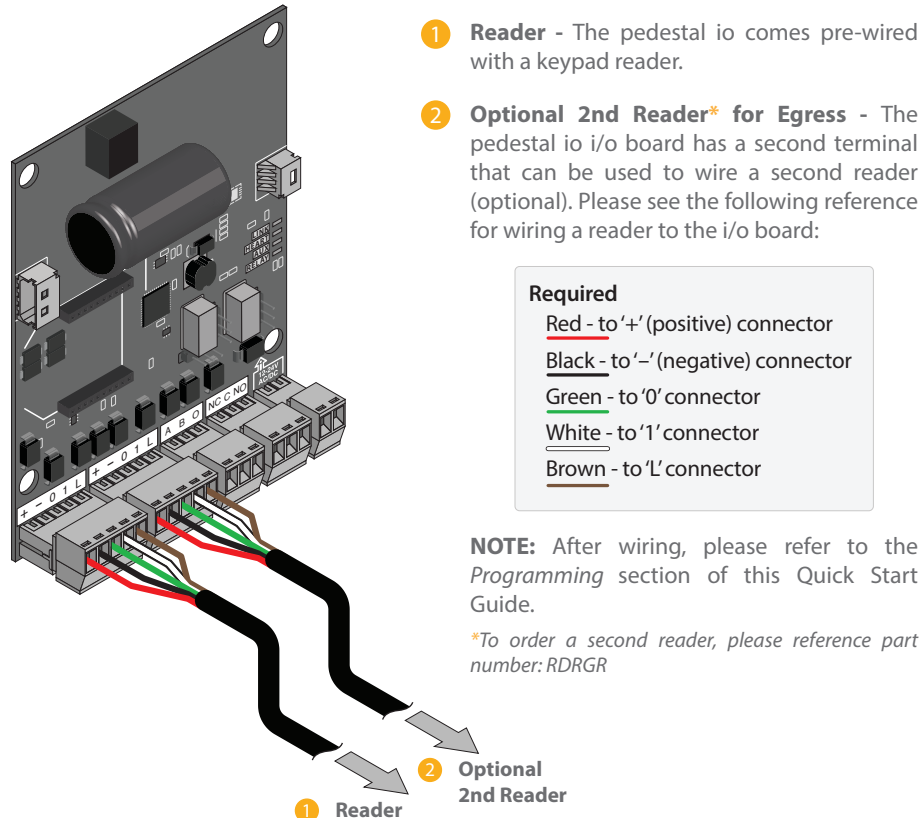


4. Input A / DPS

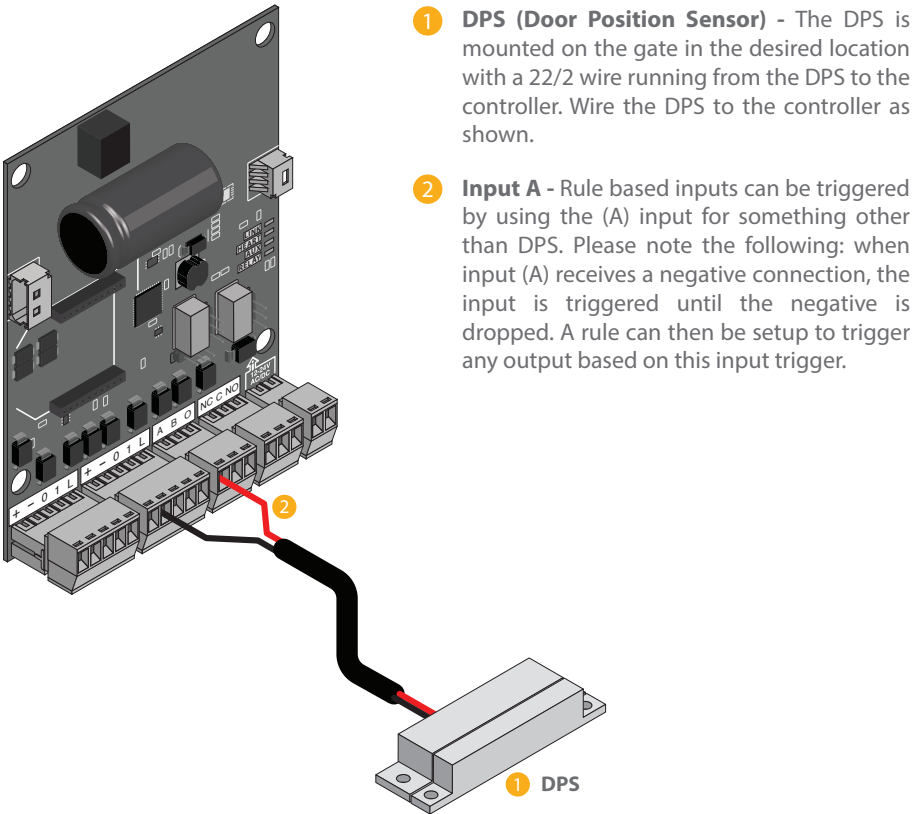


5. Input B/Gate Operator

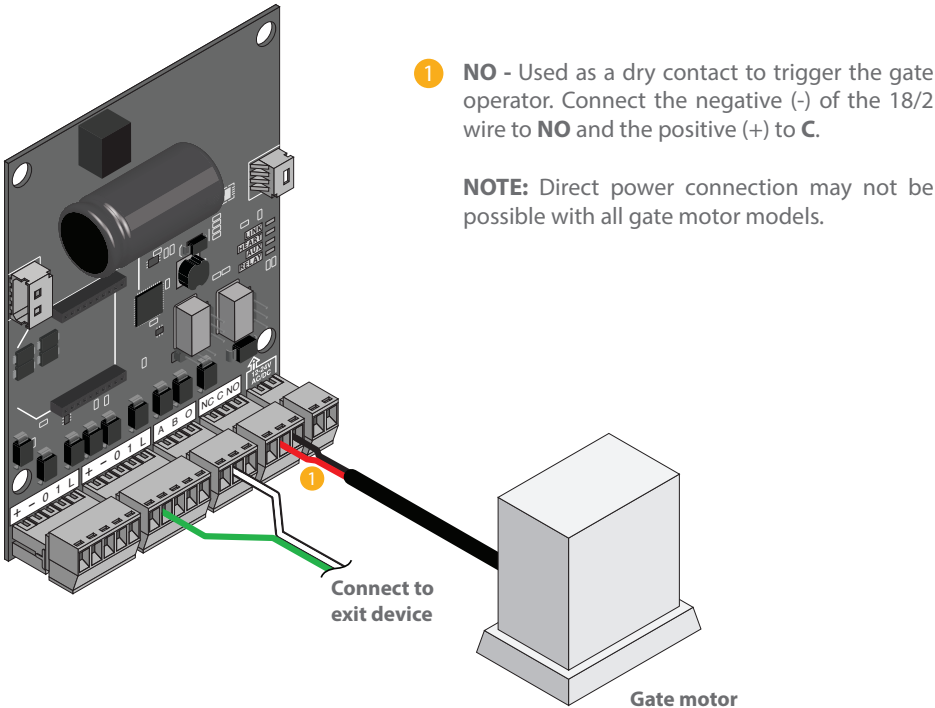


6. Output

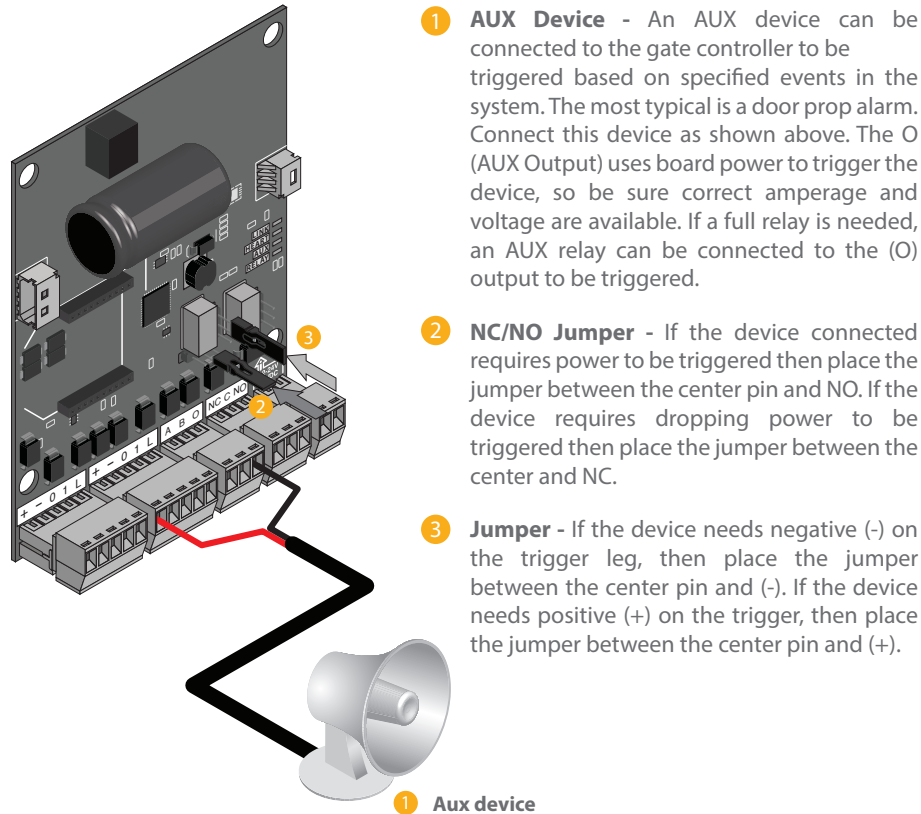


7. Maglock/ Exit Device

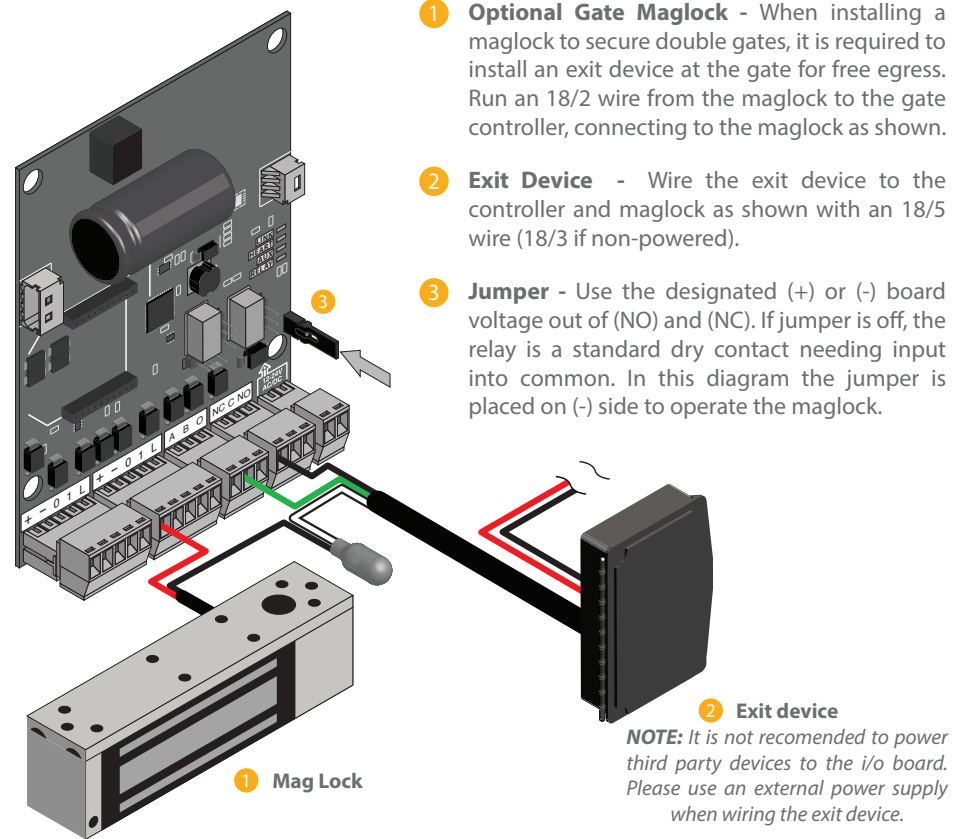

8. Communication Connection

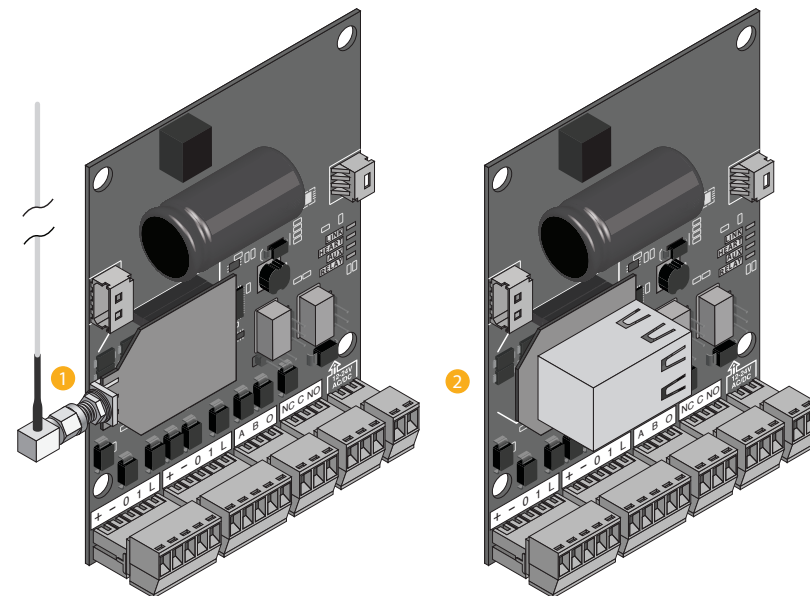

9. Power Connection

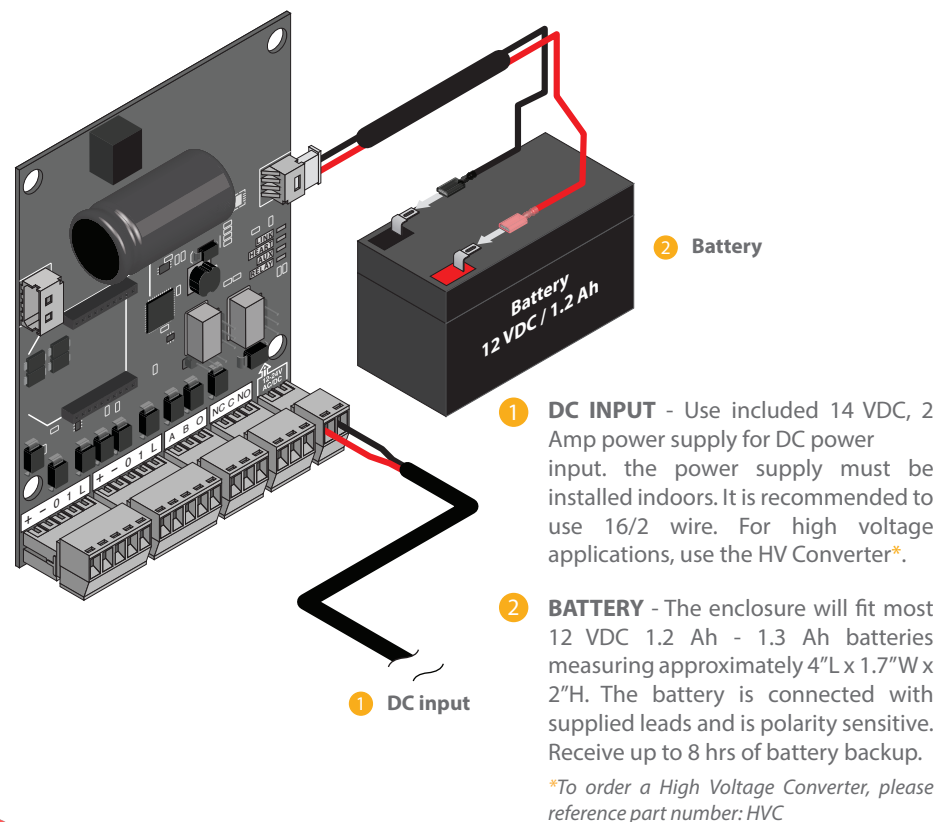

Reference

24 VDC Option - For using the pedestal io gate controller in a 24 VDC application refer to wiring diagrams in the Dealer Portal at www.prodatakey.com/resources

Programming - After the pedestal io gate controller has been connected back to the cloud node, access the configuration software as instructed in the programming manual. This manual is available for download through the Dealer Portal at www.prodatakey.com/resources

Pedestal io Part Number - Wireless with Reader: PCW, Ethernet with Reader: PCE, Wireless without Reader: PCWB, Ethernet without Reader: PCEB

Single-Gang Ruggedized Reader Part Number - RDRGR

High Voltage (HV) Converter Part Number - HVC



pedestalio
Gate Controller and Reader
Quick Start Guide



View the user manual here:
prodatakey.zendesk.com

Part Numbers:

Wireless with Reader: PCW
Ethernet with Reader: PCE
Wireless without Reader: PCWB
Ethernet without Reader: PCEB

www.prodatakey.com
801.317.8802

Copyright © 2021 ProdataKey Inc. All rights reserved. Pdk, pdk.io, and the ProdataKey logos are trademarks of ProdataKey Inc.

REV 12072021