

## 30 CM HIGH VELOCITY FAN

45 W



- 3 SPEED SETTINGS
- DYNAMIC 3 WINGED PROPELLER
- ROTARY SWITCH CONTROL
- WHISPER QUIET
- 90° AIRSTREAM ARC
- ADJUSTABLE PIVOT STAND
- SECURE SAFETY GRILL



## INDEX

|                            |       |
|----------------------------|-------|
| • IMPORTANT INSTRUCTIONS   | 3 - 4 |
| • OPERATING INSTRUCTIONS   | 5     |
| • WALL MOUNTING            | 5     |
| • CLEANING                 | 6     |
| • STORAGE INSTRUCTIONS     | 6     |
| • DESCRIPTION OF PARTS     | 7     |
| • TECHNICAL SPECIFICATIONS | 7     |
| • 2 YEAR LIMITED WARRANTY  | 8     |
| • REPAIRS PROCEDURE        | 9     |

## PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

**This product is intended for HOUSEHOLD USE ONLY and not for commercial, industrial or outside use.**

### IMPORTANT INSTRUCTIONS

**Read and save these important safety instructions before using this fan, when using electrical fans, basic safety precautions should always be followed including the following:**

**WARNING:** To reduce the risk of fire or electrical shock, do not use this product with any solid-state speed control device. To reduce the risk of fire or electric shock and injury to persons, do not use in an open window.

- Use this fan only as described in this manual. Other uses are not recommended and may cause fire or electric shock.
- This product is intended for HOUSEHOLD USE ONLY and not for commercial, industrial or outside use. To protect against electrical shock, do not place fan in an open window, immerse unit, plug or cord in water, or spray with liquids.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and/or before cleaning.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating fan.
- Avoid contact with moving fan parts.
- To disconnect the fan from the electrical power supply, grip the plug and pull it from the wall, never yank it from the cord.



## IMPORTANT INSTRUCTIONS - CONTINUED

- The use of attachments is not recommended and may cause hazards.
- Always use on a dry, level surface.
- Do not operate if the fan housing is removed or damaged.
- Do not operate any fan with a damaged cord or plug.
- Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or fans.
- Arrange cord away from traffic area and where it will not be tripped over.
- The fan is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised are not to play with the fan.
- This fan can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the fan in a safe way and understand the hazards involved.
- Children shall not play with the fan.
- Cleaning and user maintenance should not be done by children without supervision.

## OPERATING INSTRUCTIONS

1. Make sure that the fan is on a firm, level surface.
2. Making sure the speed control is at OFF position.
3. Insert the plug into the electrical power supply socket.
4. The speed of the fan can now be selected by speed knob on the control panel.  
Off (0)  
Low (1)  
Med (2)  
High (3)
5. Adjust the fan to your desired angle by moving the head up or down.



## WALL MOUNTING

1. Locate and mark the position on the wall where the fan will be mounted. Ensure the wall is sturdy enough to hold the weight of the fan.
2. Insert a 4 mm x 30 mm screw with raw plug into the wall. Note the screw and raw plug are not included.
3. Leave approximately 1.6 cm of the screw exposed.
4. Line up the opening of the base of the fan with the screw and hang the fan on the wall.

## CLEANING

1. Be sure your fan is in the OFF position.
2. Unplug the fan before cleaning.
3. To clean inlet and outlet ribs, use a common household vacuum.
4. Do not use water to clean these parts of the Fan.
5. Do not disassemble for cleaning.
6. Do not immerse the fan in water and never allow water to enter the Motor Housing.
7. Do not use gasoline, paint thinner or other chemicals to clean the fan.



## STORAGE INSTRUCTIONS

1. The product must be packaged in its original box for storage.
2. Place the fan in a storage room with low humidity.

**NOTE:** If you experience a problem, please return the fan to the place of the original purchase or see your warranty. Do not attempt to open the motor housing yourself; doing so may void your warranty and cause damage to the fan or personal injury.

## DESCRIPTION OF PARTS

1. Front grill
2. Blade
3. Speed selector knob
4. Carry handle
5. Tilt axis
6. Rear grill
7. Base
8. Wall mount

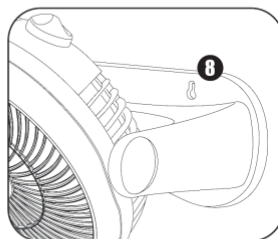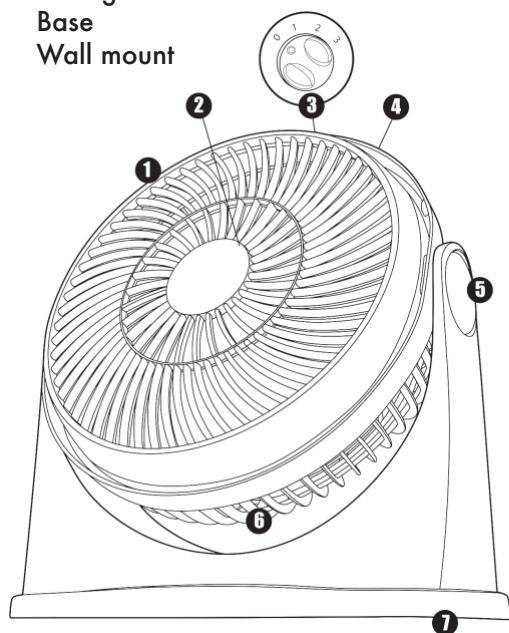

## TECHNICAL SPECIFICATIONS



**Model:** AHV30PP

**Power Supply:** 220-240V~ 50Hz

**Rated Power:** 45 W

Class II

## 2 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product ('the consumer') that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 2 year from the date of purchase.

### EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- Remote Controls do not fall under warranty.
- Insect infestation of the electrical or motor makes the claim invalid.
- Broken Glass or Customer abuse do not fall under the warranty.

### WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

### PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs and/or spares will be payable by the Consumer upon collection of the repaired product. The Consumer should **call the Pick n Pay CUSTOMER CARE** number on 0860 30 30 30 (only in South Africa). Customers residing outside South Africa can return the product back to a Pick n Pay store. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).



If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.



## REPAIRS PROCEDURE

Should you experience any faults on your Aim product, please adhere to the following procedure to have the fault rectified speedily and professionally.

You can return the product to the store.

**Call the Pick n Pay CUSTOMER CARE** number on 0860 30 30 30 (only in South Africa) to report the fault and make arrangements for the next steps.

**Note:** Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you.

### COST OF REPAIRS

#### UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to “warranties” section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer’s expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

#### OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer’s expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

We are confident about the quality of our products. If you are not 100% satisfied with our product we will gladly exchange or give you your money back.

Raymond Ackerman  
Founder of Pick n Pay

Specially packed for  
Pick n Pay Retailers (Pty) Ltd.  
Pick n Pay Office Park  
2 Allum Road, Kensington, 2094  
[www.picknpay.co.za](http://www.picknpay.co.za)

**CUSTOMER CARE**  
Sharecall: 0860 30 30 30  
**ONLY IN SOUTH AFRICA**  
[customercare@pnp.co.za](mailto:customercare@pnp.co.za)

Product of China

# AIM