

LIVING SPACES

OWNER'S MANUAL

DAPHNE DINING TABLE

LIVING SPACES SKU : 267690 / 267691

VENDOR ITEM NO. : 4HM360B / 4HM360T



Scan QR code to view assembly video

ASSEMBLY PARTS LIST

BOX 1 (SKU 267690)

Main Frame

SKU #	IMAGE	DESCRIPTION	QUANTITY
267690-1		MAIN FRAME	1
267690-2		SECONDARY FRAME	2

BOX 2 (SKU 267691)

Glass Top


SKU #	IMAGE	DESCRIPTION	QUANTITY
267691		GLASS TOP	1

HARDWARE KIT PACKED IN BOX 1

SKU: 4HZZ60HW

4HZZ60HW-1		ALLEN BOLT (5/16" x 20MM)	4
4HZZ60HW-2		LOCK WASHER (5/16")	4
4HZZ60HW-3		FLAT WASHER (5/16")	4
4HZZ60HW-4		ALLEN KEY	1

FULLY ASSEMBLED

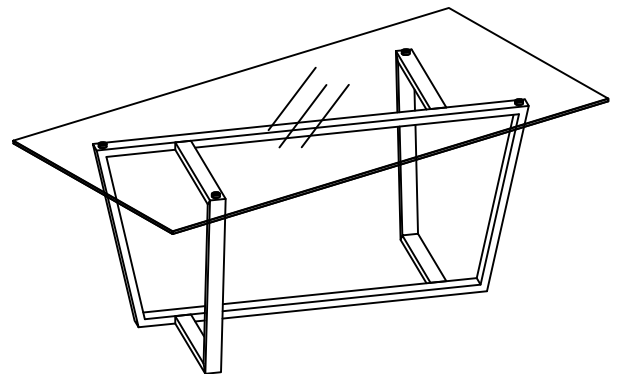

PRE-ASSEMBLED PARTS LIST

SKU #	IMAGE	DESCRIPTION	SKU #	IMAGE	DESCRIPTION
4HZZ60LV		LEG LEVELER			
4HZZ60GP		GLASS TOP PUCK			



LIVING SPACES

OWNER'S MANUAL

DAPHNE DINING TABLE

LIVING SPACES SKU : 267690 / 267691

VENDOR ITEM NO. : 4HM360B / 4HM360T




Scan QR code to view assembly video


ASSEMBLY INSTRUCTIONS



1

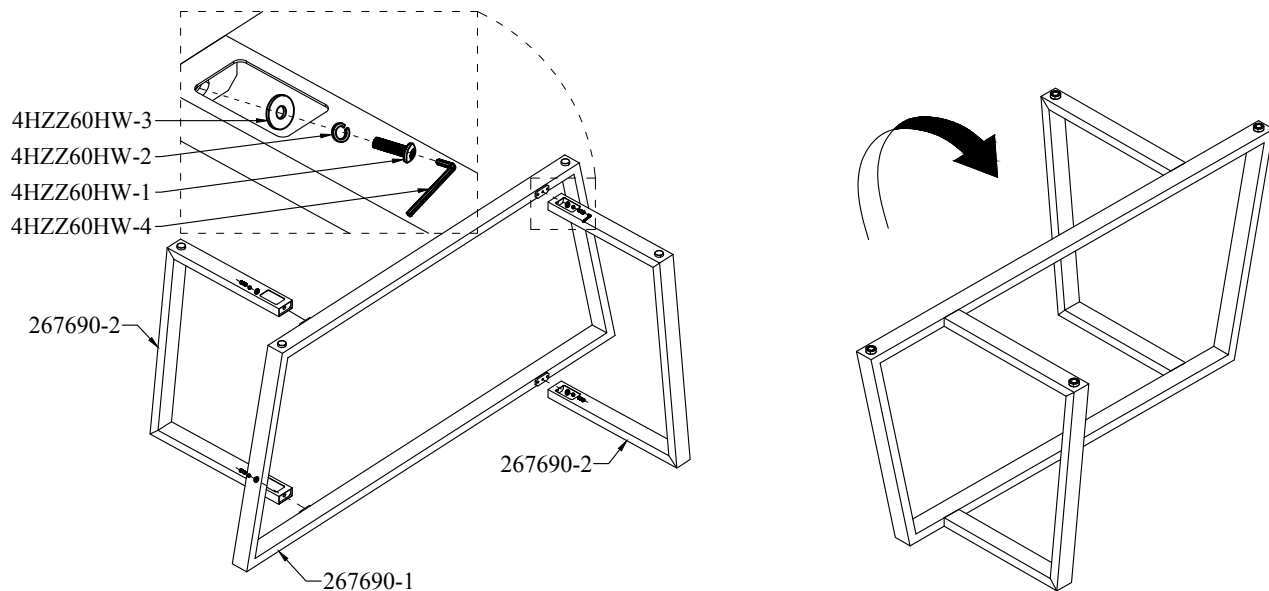

2

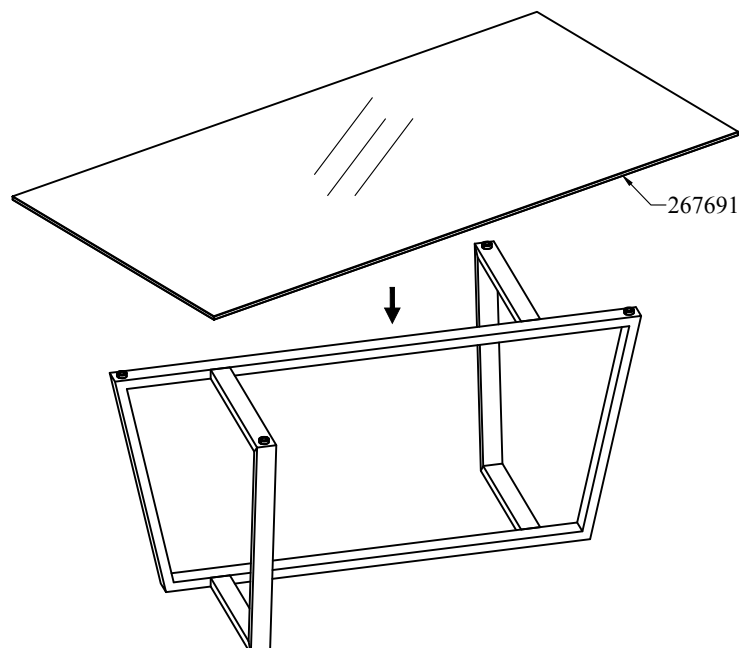

LIVING SPACES

OWNER'S MANUAL

DAAPHNE DINING TABLE

LIVING SPACES SKU : 267690 / 267691

VENDOR ITEM NO. : 4HM360B / 4HM360T



Scan QR code to view assembly video



WARNING:

- **Sitting or standing on this product may result in damage or injury**
Maximum distributed load 354 lbs (ANSI/SOHO S6.5-2008 section 5.2)
Maximum concentrated load 200 lbs (ANSI/SOHO S6.5-2008 section 5.3)
This product meets the requirements of ANSI/SOHO S6.5-2008 section 4.2
Stability Under Vertical Load but may become unstable under heavier edge loads. Use caution when placing heavy objects on this product.

ROUTINE MAINTENANCE:

Periodically tighten all fittings, which can loosen over time. If uneven, the table can be leveled by adjusting the levelers under the base.

CARE AND CLEANING:

GLASS - Clean with a slightly damp cloth and dry immediately with a lint-free cloth. Use only mild detergents and cleaning solutions which are recommended for cleaning glass. Use coasters and placemats to prevent marking on the surface of your product.

METAL - Dust frequently with a clean, damp, lint-free cloth soaked in mild soap and water. Avoid the use of chemical and abrasive cleaners, as they can damage the finish. To restore the shine to your metal, soak a cheesecloth in a nonabrasive cleaner (like liquid dish soap) and rub the chrome component lightly until the original luster reappears. Dry the component with a clean soft cloth to remove any soap residue. Iron or steel frames will rust if the finish is scratched or if your furniture is exposed to excessive humidity, particularly in coastal areas.

