



1. Always use the power adapters that came with your E5B-M-GWE3 system.
2. Do not plug your Eyedro power adapter into an Uninterruptible Power Supply (UPS) as this will result in incorrect measurements.
3. The AC power adapter must be powered via a circuit that is downstream of the panel where the current sensors are installed.

Notes:

Installation may require the cover of the main electrical panel to be removed while some wires are still electrified. Even when the main breaker has been turned 'OFF' certain areas of the panel may still be dangerous and carry the risk of shock, burn, and electrocution. Installation should be performed by a qualified electrician. **DO NOT** attempt installation unless you know where electrified areas within the panel are.



This insert provides very high level installation instructions. Complete installation instructions can be found at eyedro.com support (see Product Manual and Support videos)

Before Getting Started



Quick Start Guide

Wireless Mesh Energy Monitoring System (includes gateway) (3-Phase only)

Model: E5B-M-GWE3




Visit eyedro.com for any questions or comments. We value your feedback.

Full warranty policy details are available at eyedro.com

Limited One Year Warranty
Eyedro Green Solutions Inc. warrants this product for a period of one year from date of purchase for all defects in material and workmanship. Defective parts may be repaired or replaced at the discretion of the manufacturer during this period.



1. Verify Package Contents

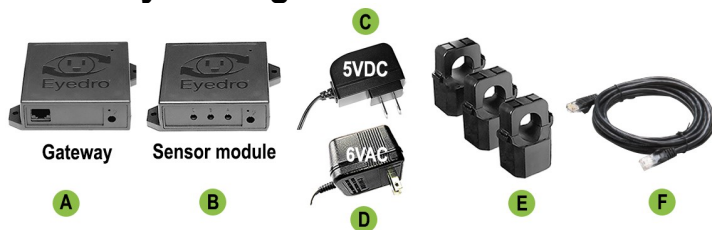

	Qty.	Description
A	1	Eyedro gateway module
B	1	Eyedro sensor module (3 port)
C	1	5VDC power adapter (gateway)
D	1	6VAC power adapter (sensor)
E	3	200A current sensor (no sensors included with –SUB systems)
F	1	Ethernet cable (3 ft.)

2. Record Serial Numbers: (located under barcode on module)

Gateway SN:	___	-	___
Sensor SN:	___	-	___

4. Create a MyEyedro User Account

- 4.1 Go to my.eyedro.com to create your online account (or log in if you have an existing account).

- 4.2 Add the devices to your user account: go to Configuration, select Devices then enter the serial numbers you recorded in Step 2.
- 4.3 ENJOY! Log into MyEyedro as often as you like to view your electricity consumption.
- 4.4 For more details about the MyEyedro cloud service, review the MyEyedro User Guide located at eyedro.com/support


3. Install Hardware

- 3.1 Install current sensors on the line¹ conductor of the circuit(s) to be monitored.

¹Line/Live/Hot conductor(s)




- 3.2 Connect one end of the supplied Ethernet cable to an open port on your router.
- 3.3 Connect current sensors and power adapter to the sensor module.
- 3.4 Connect Ethernet cable and power adapter to the gateway module.

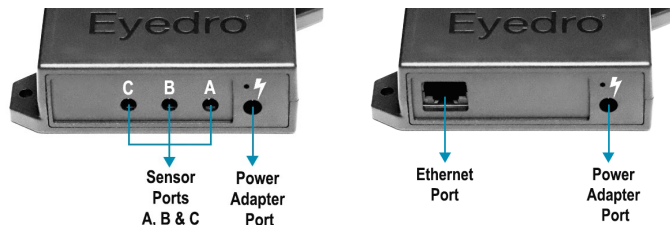

Always use the correct power adapter!

Use the 5VDC power adapter with the gateway module:

5VDC POWER ADAPTER

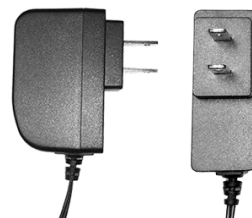

Use the 6VAC power adapter with the sensor module:

6VAC POWER ADAPTER



**Support manuals and videos:
Eyedro.com/support**