

esatto

This little Quick Start Guide is everything you need for your **EBTDWW** Benchtop Dishwasher—say goodbye to those dirty dishes piling up!



Get ready to use your new EBTDWW Benchtop Dishwasher!

The Controls

- 1 On/Off power button
- 2 Delay Start button
- 3 Delay Start indicators
2, 4, 6 & 8 hours
- 4 Rinse Aid indicator
Fill the Rinse Aid compartment
- 5 Program End indicator
Your wash program has completed
- 6 Water Failure indicator
Faucet may not be open
- 7 Program Selector button
- 8 Start/Pause button
- 9 Program indicators

For a complete guide on operating your dishwasher, refer to user manual on page 12.



Program Cycles

- **Quick 30'**
A quick 30 minute wash suitable for lightly soiled dishes—does not include a drying stage.
- **Super 90'**
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**
Suitable for lightly soiled delicate glassware.
- **ECO 50° C**
A standard program for daily use with reduced energy and water consumption.
- **Heavy**
A program suitable for heavily soiled dishes.
- **Intensive 70° C**
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.

Product Details

Dimensions (W, D, H mm) / **550 × 500 × 438**
 Energy Rating (MEPS/WELS) / **2.5 Stars / 3.5 Stars**
 Capacity / **6 Place Settings**
 Warranty / **2 Years**

Register your Esatto product online for a free additional year esatto.house/warranty

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentialgroup.com.au

Instagram [@esatto.house](https://www.instagram.com/esatto.house) Facebook [@esatto.house](https://www.facebook.com/esatto.house)

www.esatto.house