

**Do Not Discard**  
Product Key on Back



# WISeNET WAVE

## Hardware Quick Reference Guide

Thank you for selecting Wisenet WAVE Video Management System!  
For assistance or questions regarding the setup of your WAVE server or client, please contact one of our technical support specialists, or visit our website.

**Technical Support:** 877-213-1222

**Web:** [www.hanwhasecurity.com](http://www.hanwhasecurity.com)

### WAVE VIDEO TUTORIAL LIBRARY AND MOBILE APPLICATION

Use the QR codes below to visit our extensive video tutorial library and to install your WAVE Mobile app to always stay connected.

- **Setting up WAVE software**  
[https://wavevms.com/wave\\_qg\\_1](https://wavevms.com/wave_qg_1)



- **Adding devices to WAVE**  
[https://wavevms.com/wave\\_qg\\_2](https://wavevms.com/wave_qg_2)



- **Setting camera recording profiles**  
[https://wavevms.com/wave\\_qg\\_3](https://wavevms.com/wave_qg_3)



- **Playlist for WAVE tutorial videos**  
[https://wavevms.com/wave\\_qg\\_4](https://wavevms.com/wave_qg_4)



- **WAVE software may be downloaded by following this QR code or by visiting the link below:**  
<https://wavevms.com/download/>



#### Download the WAVE Mobile App for Android



#### Download the WAVE Mobile App for iOS




# CONFIGURING SYSTEM NETWORK SETTINGS


In certain cases, it may be necessary for your WAVE server to use a static IP address. Follow the steps outlined below to configure your WAVE server to use a static network IP address.

## Windows


1. Click the  icon to enter the Start menu
2. Click  to access your system Control Panel
3. Click the "Networking & Internet" icon 
4. Click "Change Adapter Options"
5. Double-click the icon for the network card used to connect to your local network to view its properties window

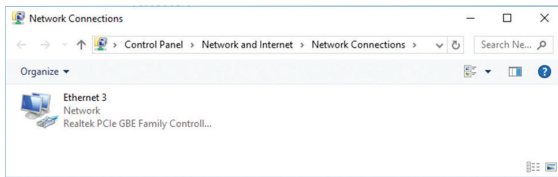


6. Click on "Properties"

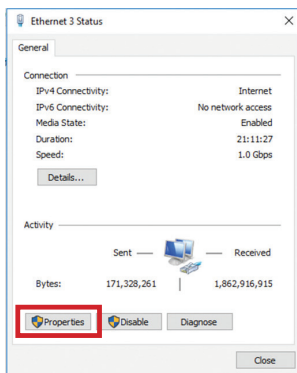

7. Double-click on the Internet Protocol Version 4 (TCP/IPv4)

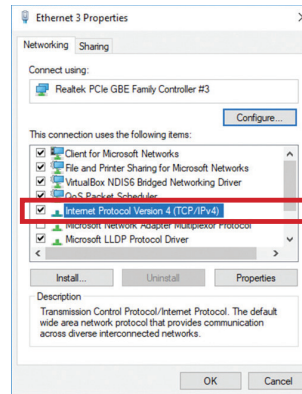


8. Set network properties according to your requirements

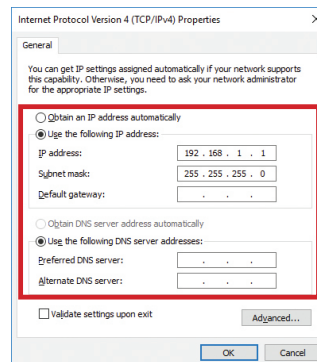


## Ubuntu

1. Click the  icon to enter the System Settings window
2. Click the  icon to enter the Network Settings window
3. Select "Wired" and click "Options..."

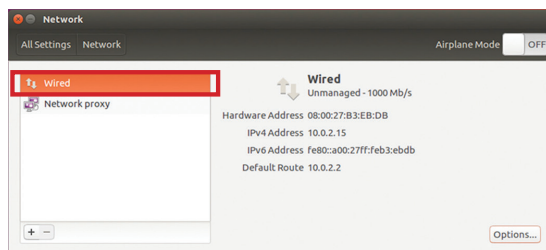

4. Go to the "IPv4 Settings" tab and input the IP configuration required for your network

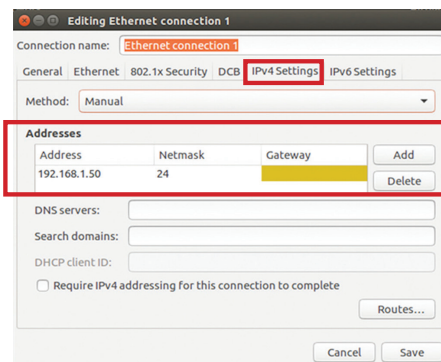

## LICENSE KEY / SERIAL NUMBER

© 2019 Hanwha Techwin Co., Ltd. All rights reserved.

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE  
Under no circumstances, this document shall be reproduced, distributed or changed,  
partially or wholly, without formal authorization of Hanwha Techwin Co., Ltd.  
REVISED 10-2019