


11. Adjustment

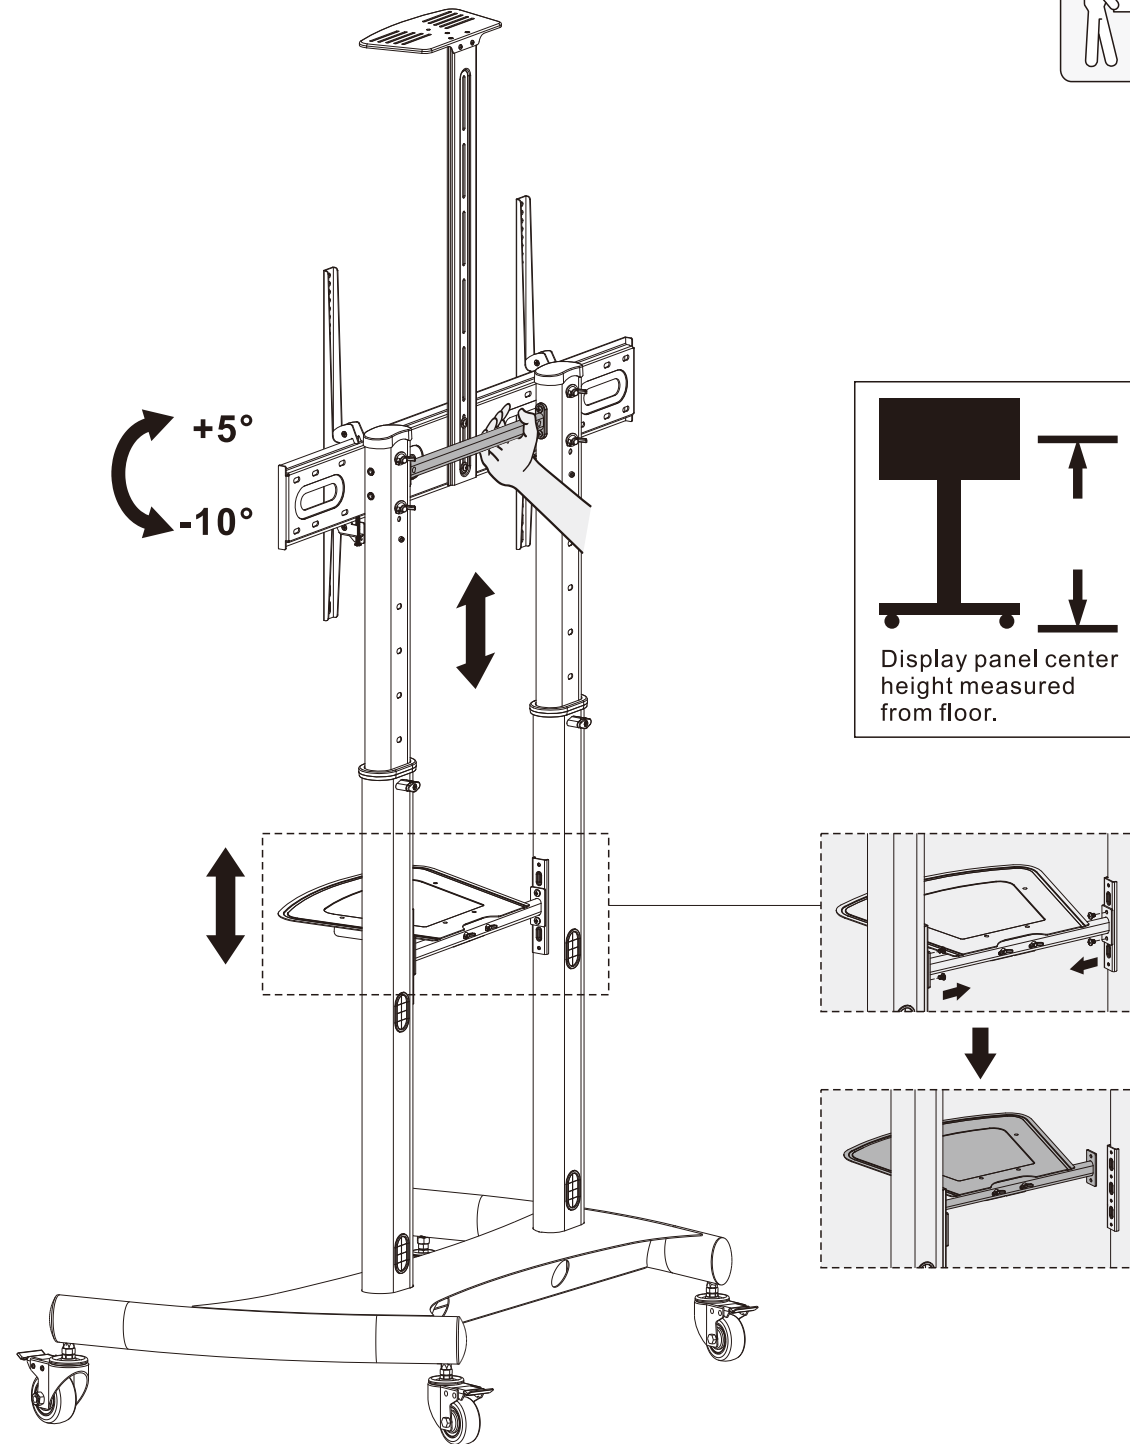


- It is recommended to adjust the columns to the desired height before installing the display.
- If you want to adjust the columns height after finishing the display installation. Please remove the DVD shelf, then adjust the columns to the desired height.

Maintenance

- Check if the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

OEMPro

TV Cart

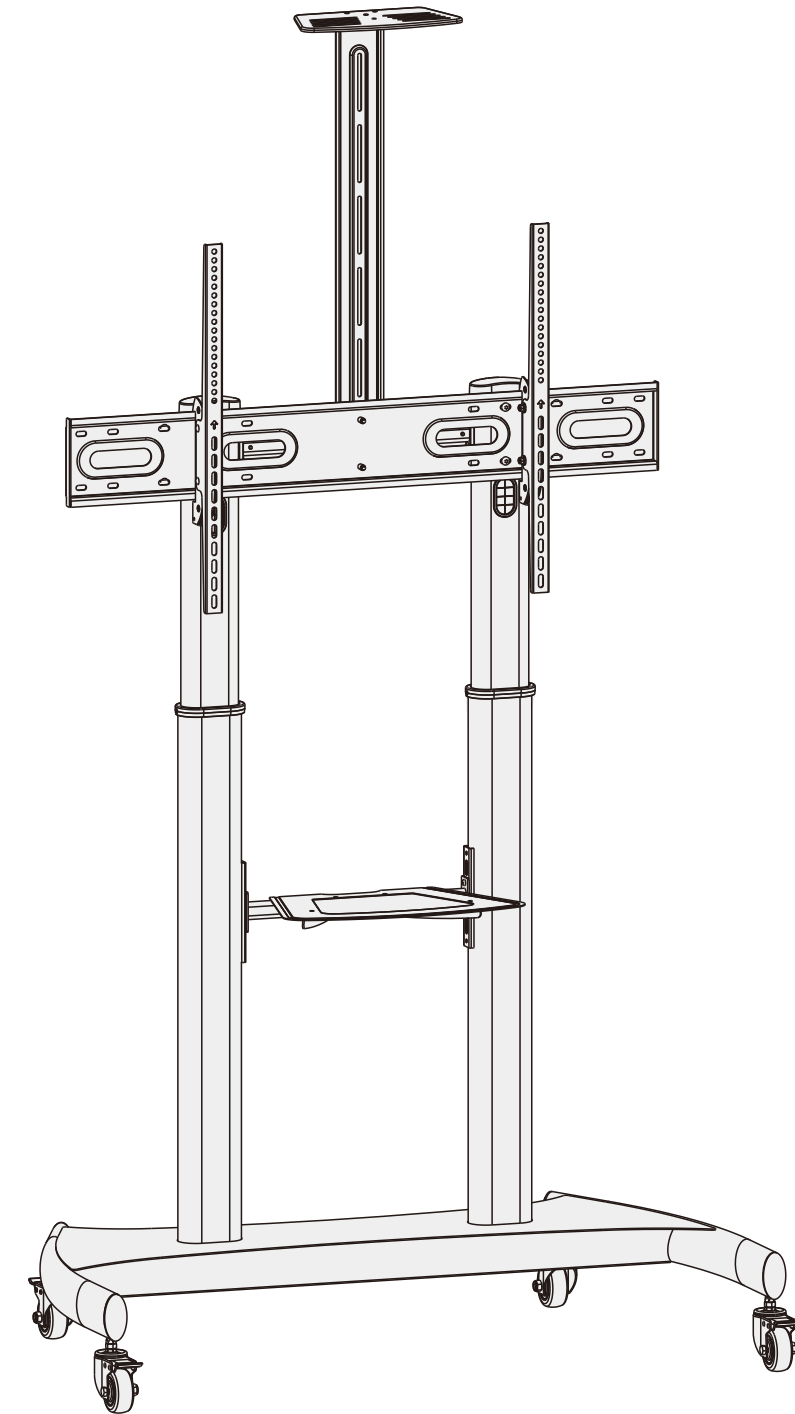

INSTALLATION MANUAL

PLEG0003
(TTL06-610TW)



400x400/600x400
800x400/800x600
900x600/1000x600



100kg/220lbs



5kg/11lbs



5kg/11lbs

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**


CAUTION

- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Requirement for Installation



Component Checklist

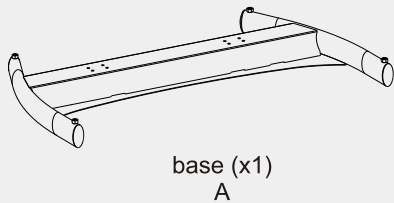


base (x1)
A



wheel caster (x4)
B




universal plate (x1)
C

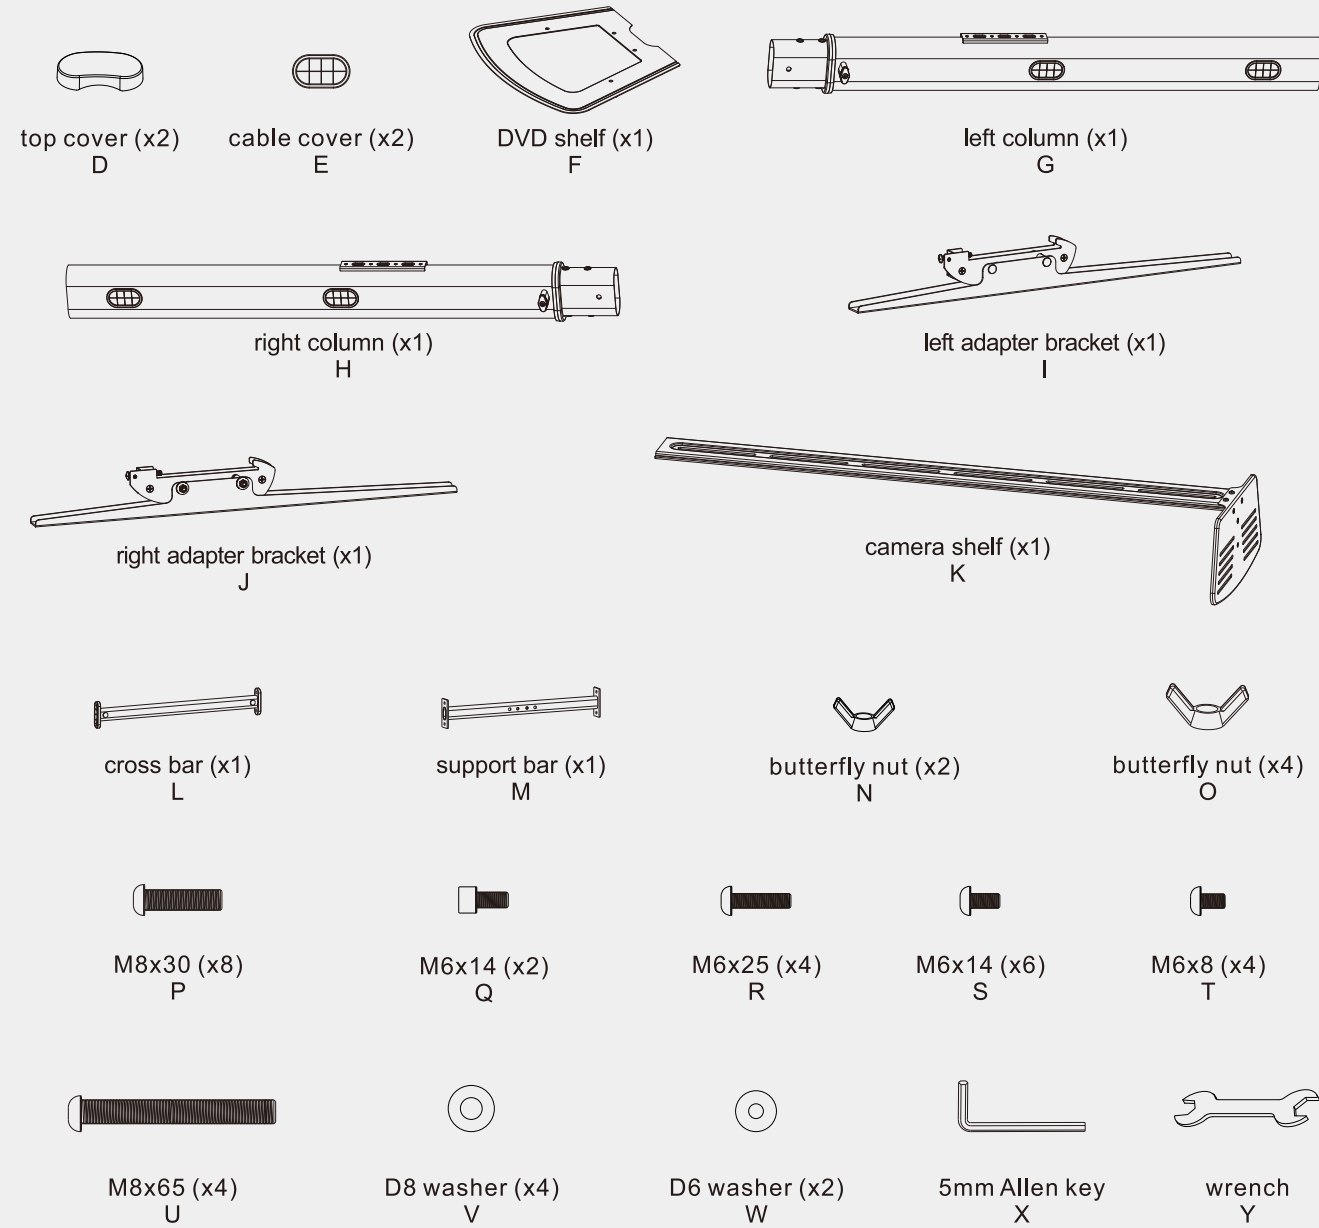


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

Package M

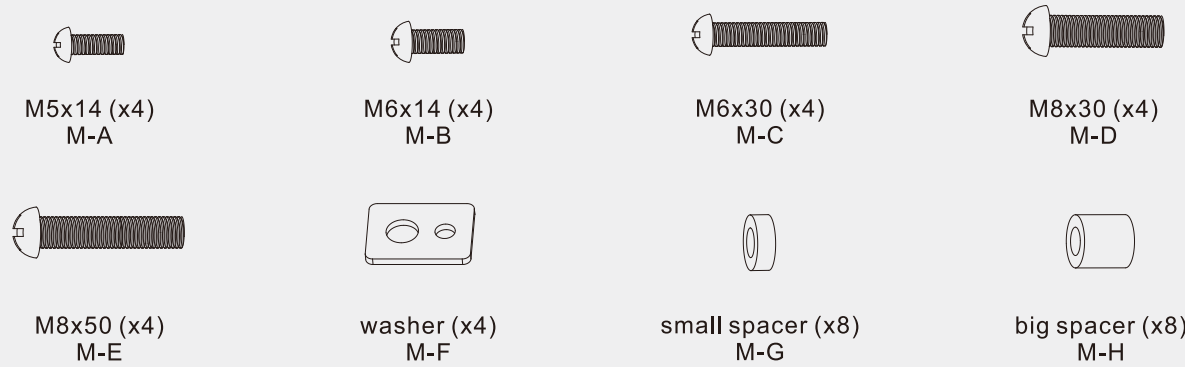


1. Installing the Wheel Caster

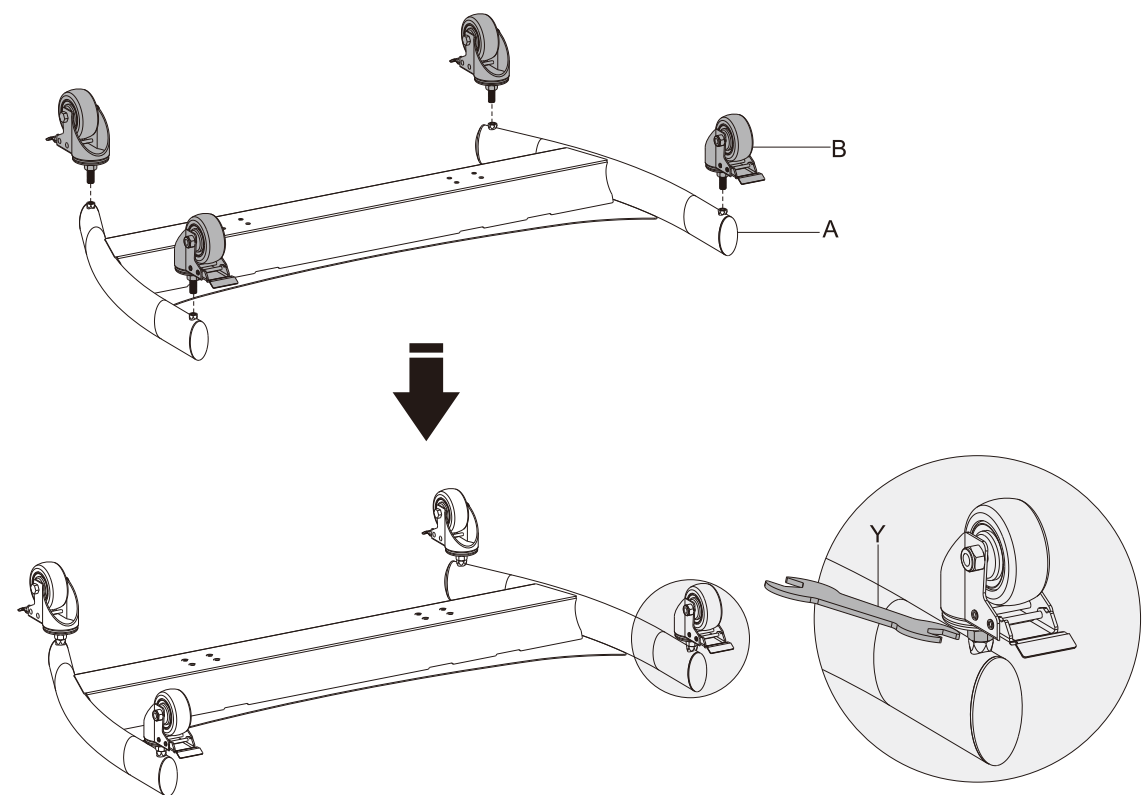

Note: Each caster can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.



2. Attaching the Columns to the Base

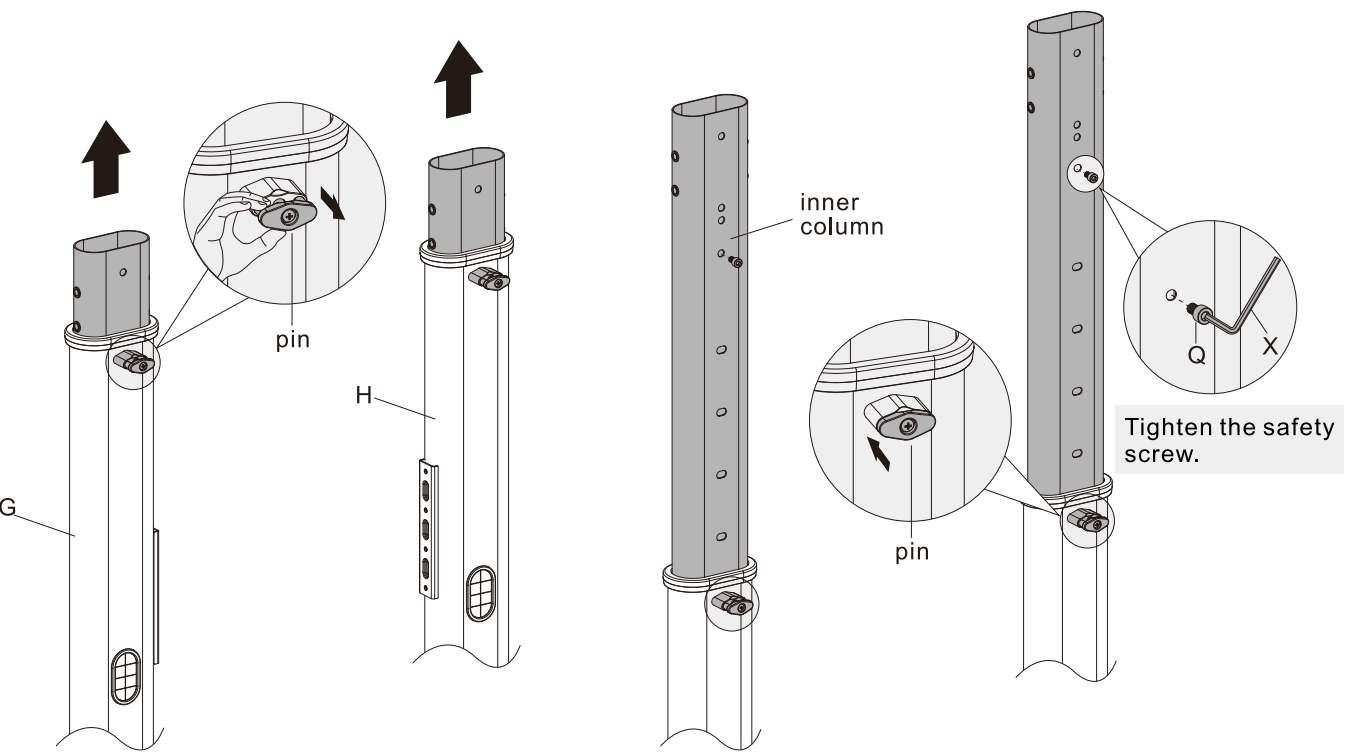

Pull the pin outwards and pull the inner column upwards at the same time, until the inner column is pulled to the desired height then release the pin to secure.

3. Installing the Cross Bar


Attach the cross bar to the columns with the appropriate screws. Tighten all screws using a proper Phillips screwdriver.

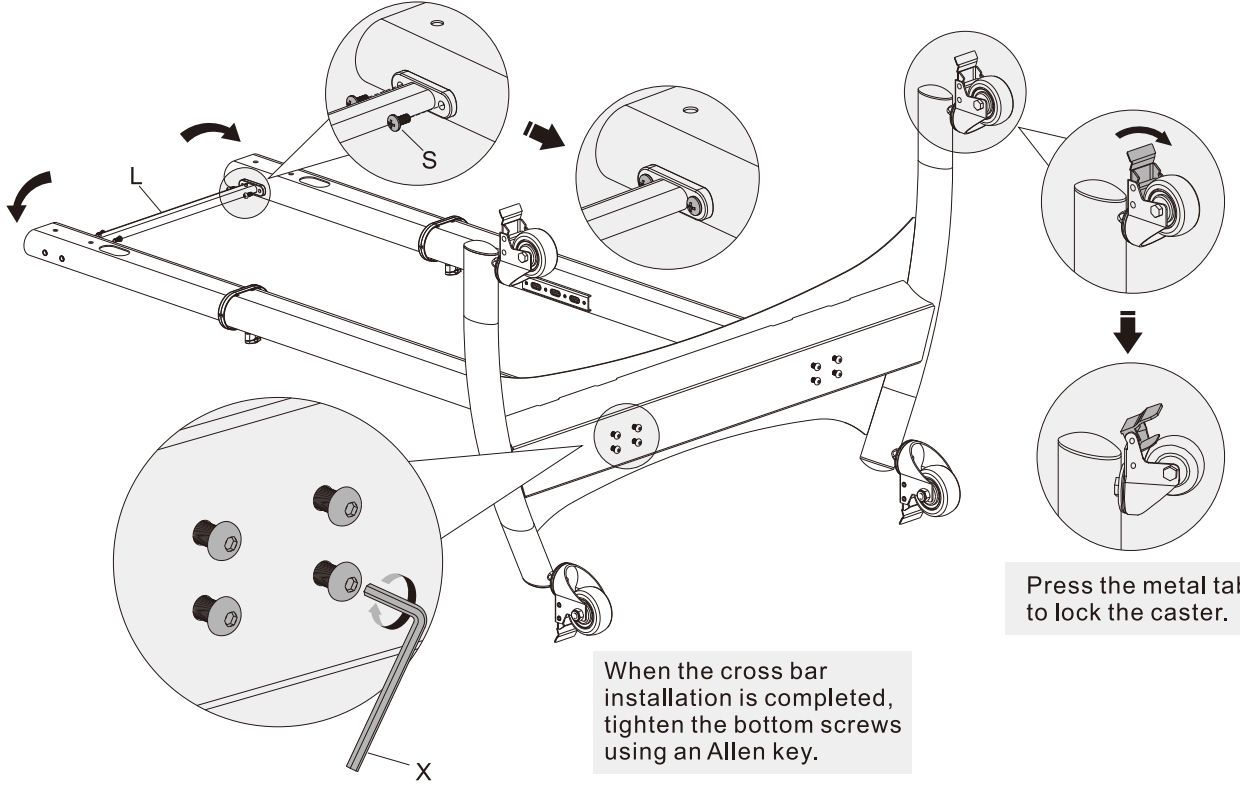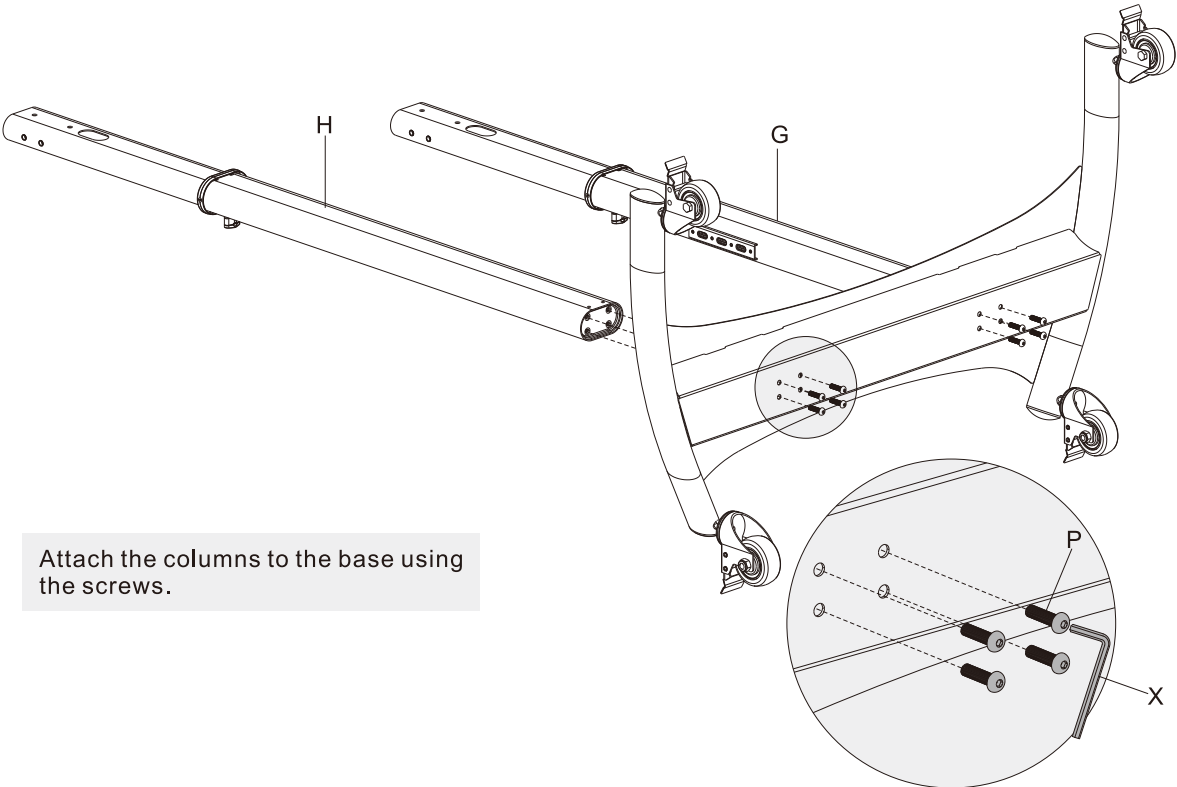


When the cross bar installation is completed, tighten the bottom screws using an Allen key.

Press the metal tab to lock the caster.


4. Installing the Cable Covers

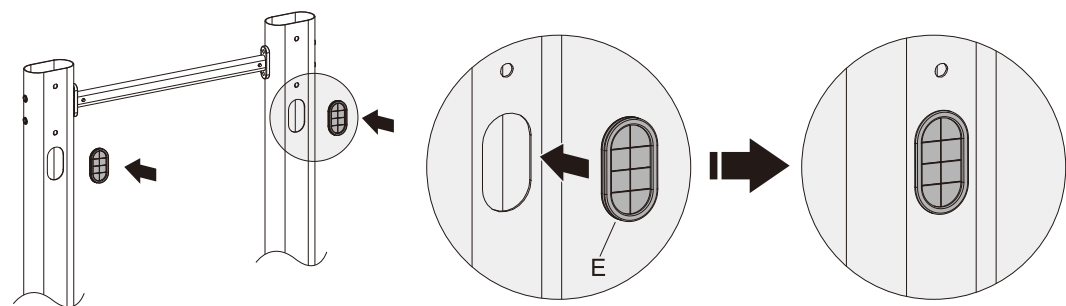


5. Installing the Universal Plate

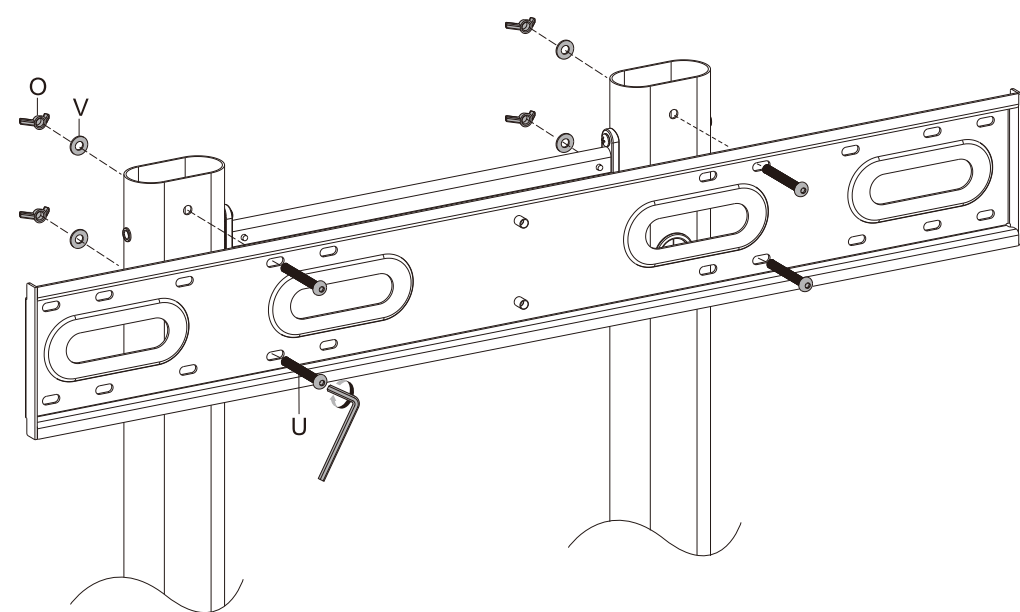



Attach the universal plate to the columns with the appropriate screws, washers and butterfly nuts. Tighten all screws and butterfly nuts.

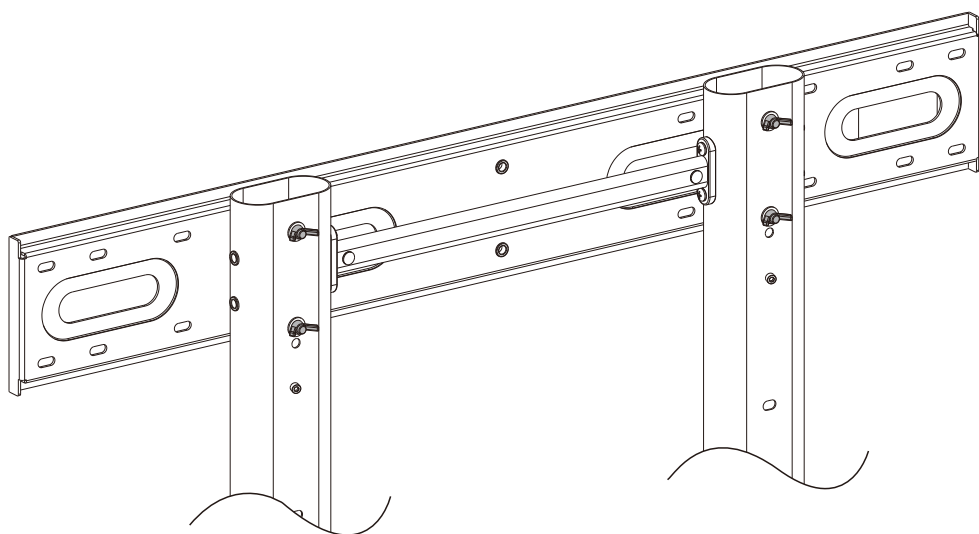

6. Installing the Adapter Brackets

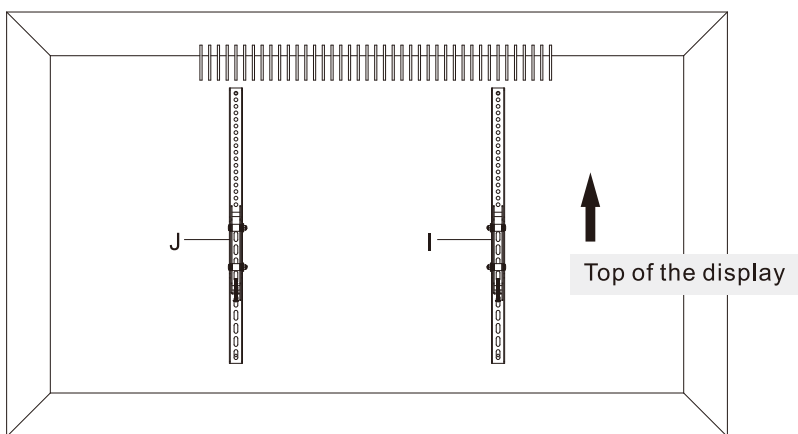


6a For Flat Back Screens

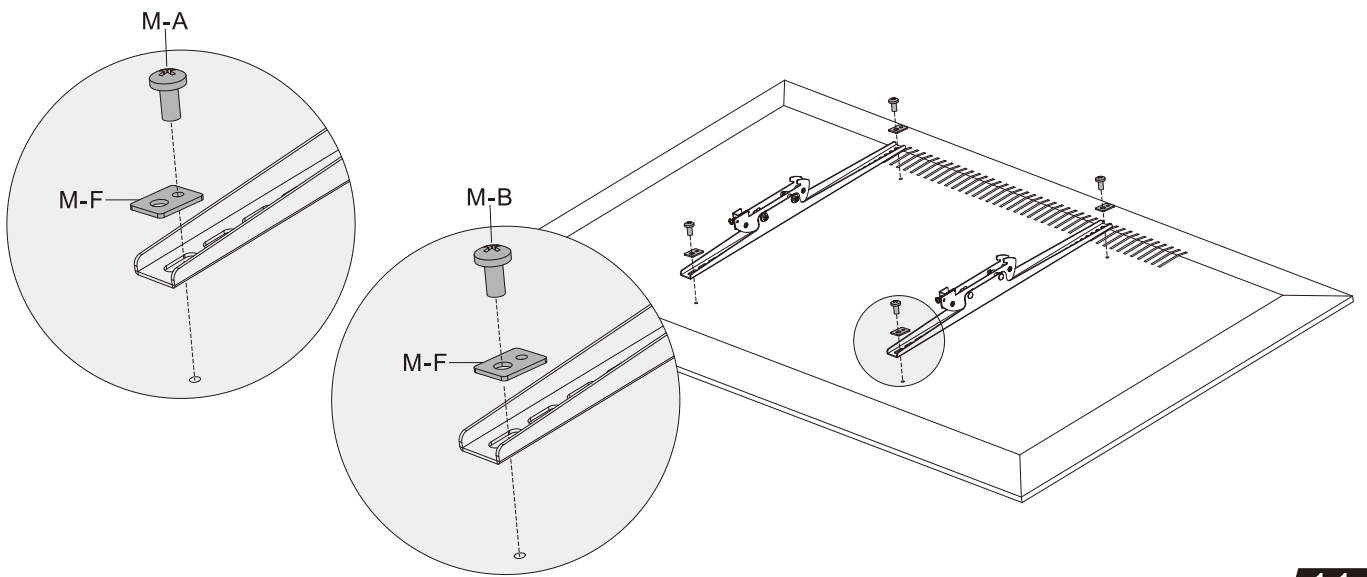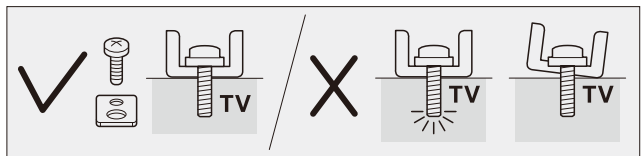

M-A		M-B	
M-F			

1:1

6b. For Screens with Irregular Back

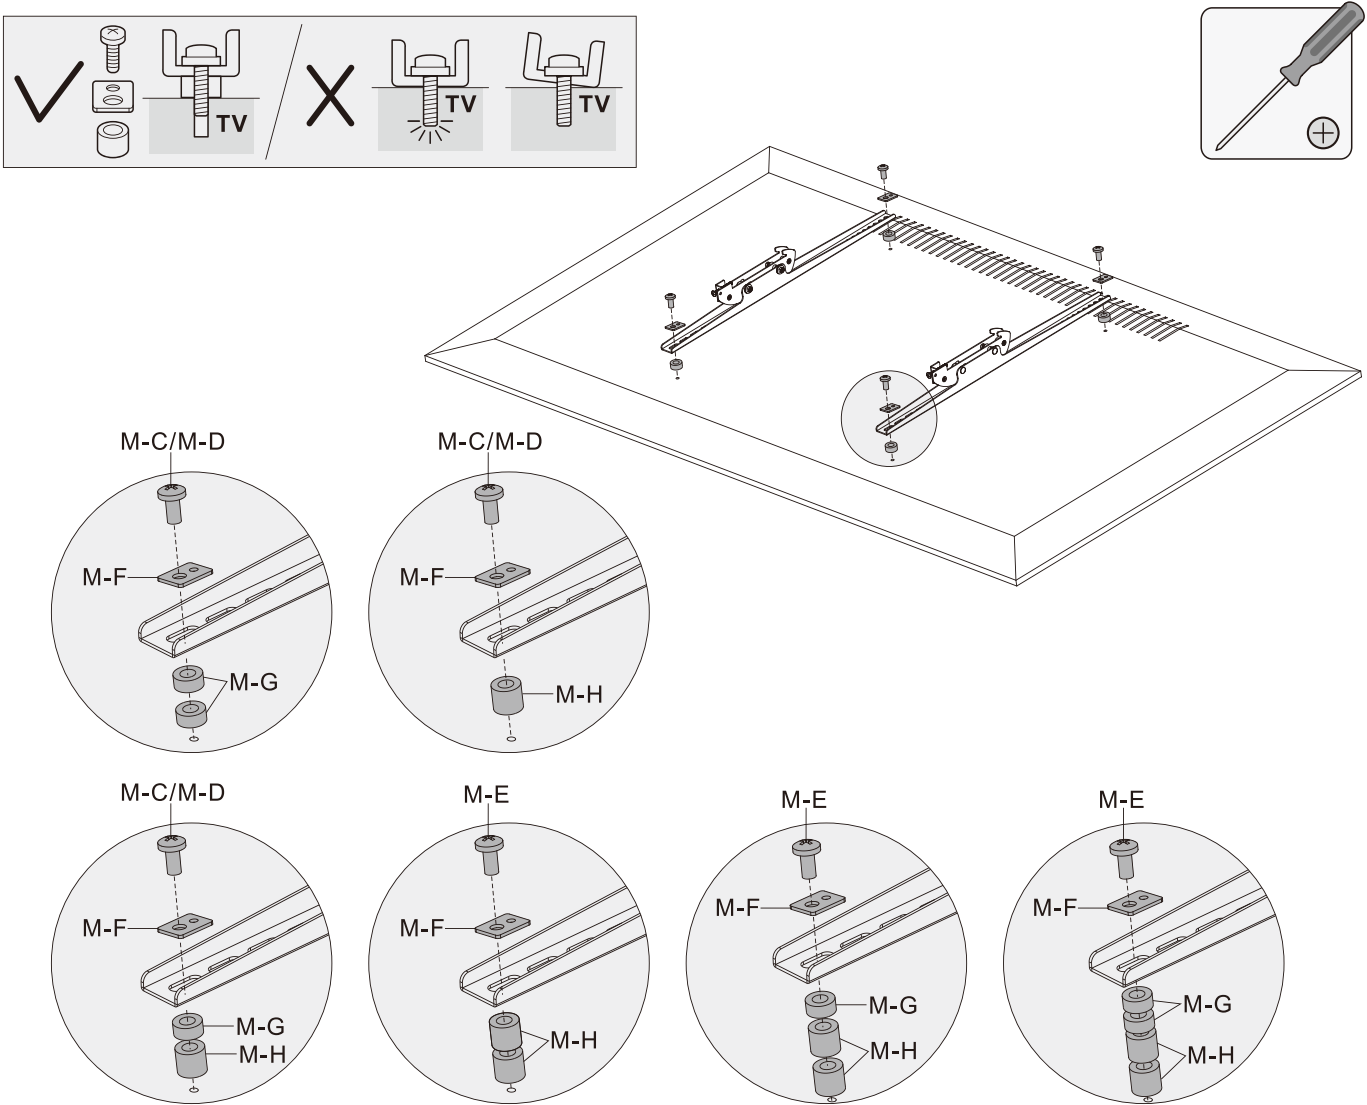


M-C		M-D	
M-E		M-F	
M-G		M-H	

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.


- Position the adapter brackets as close as possible to the center of the display.
- Screw the adapter brackets onto the display.

Tighten all screws but do not over tighten.


7. Hooking the Display onto the Universal Plate

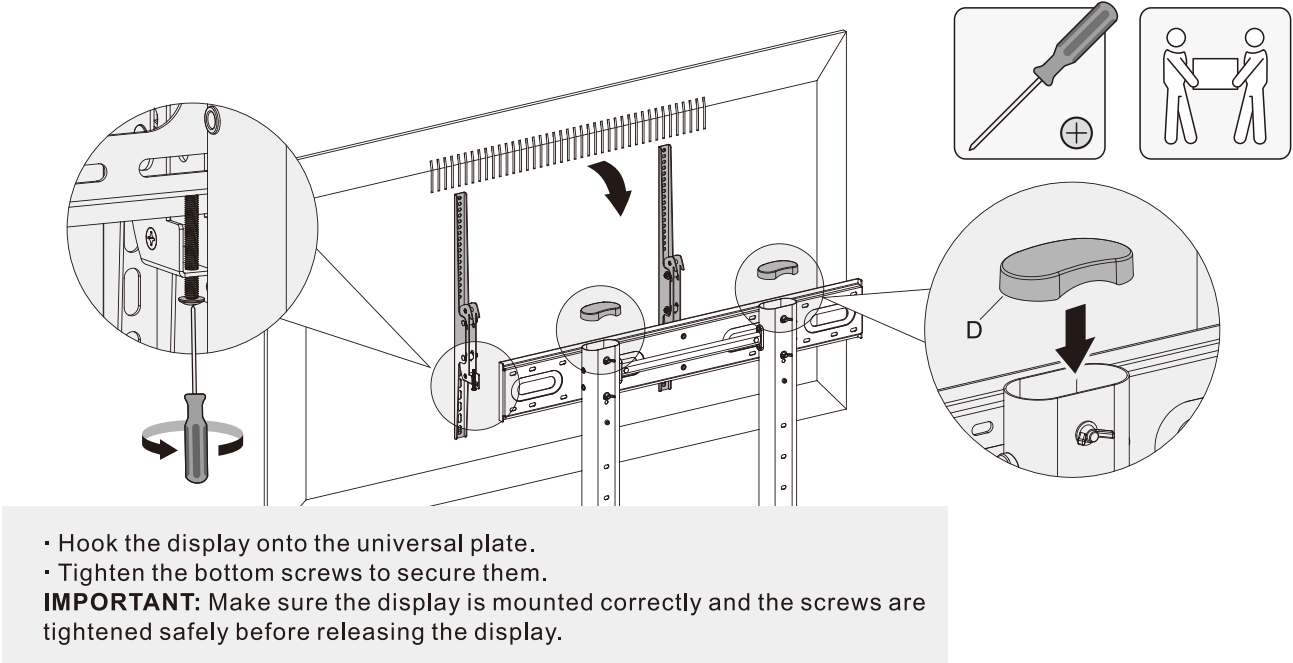


8. Installing the Camera Shelf

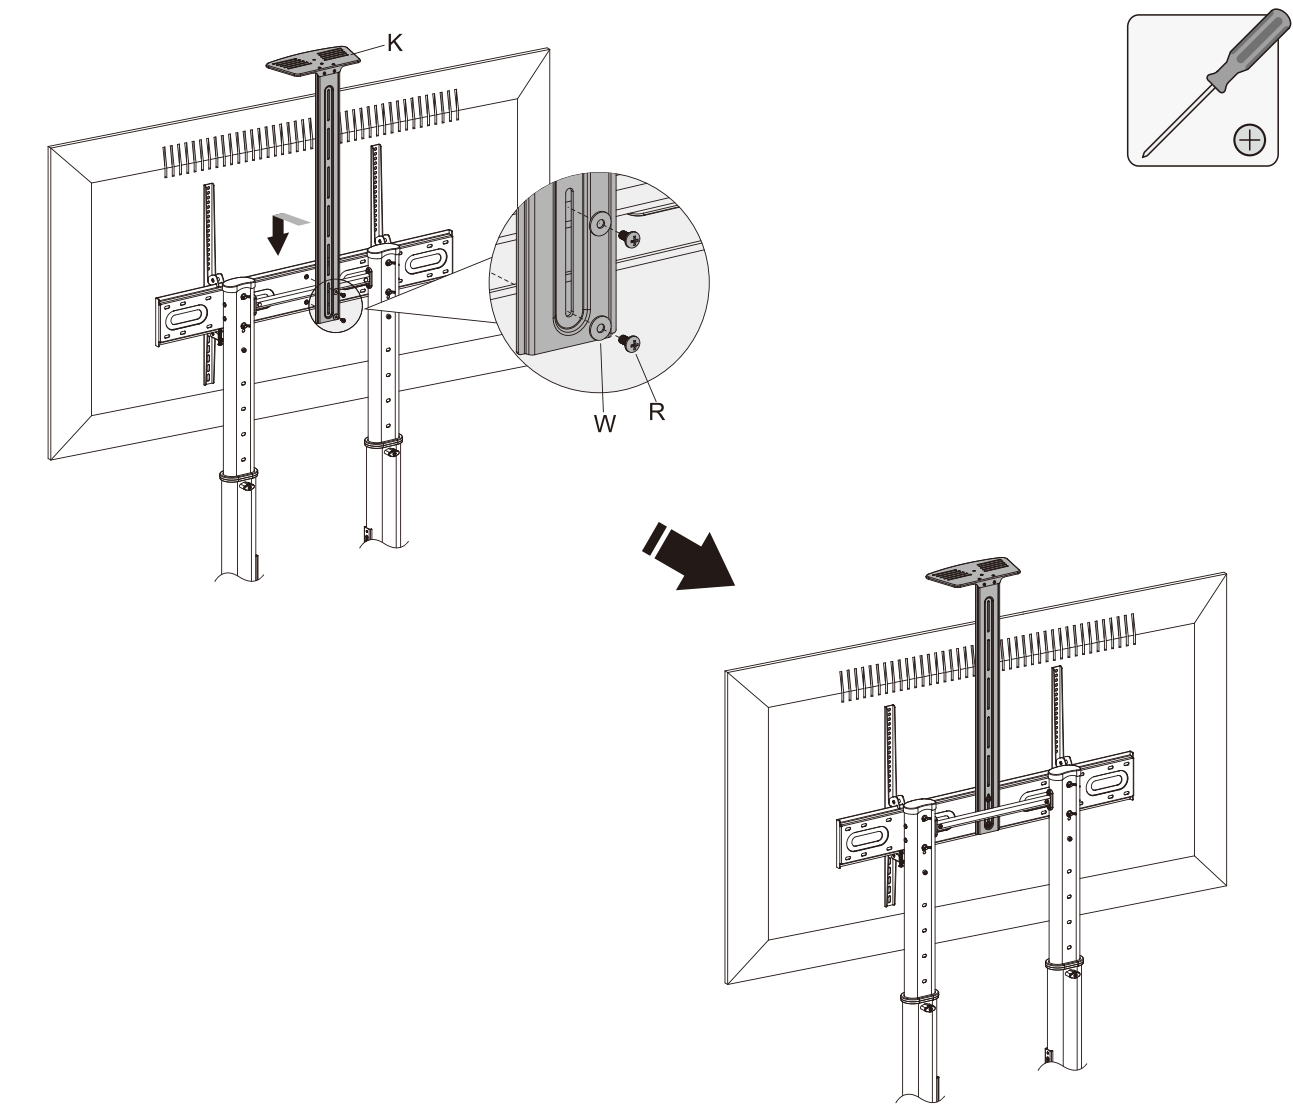

9. Installing the DVD Shelf

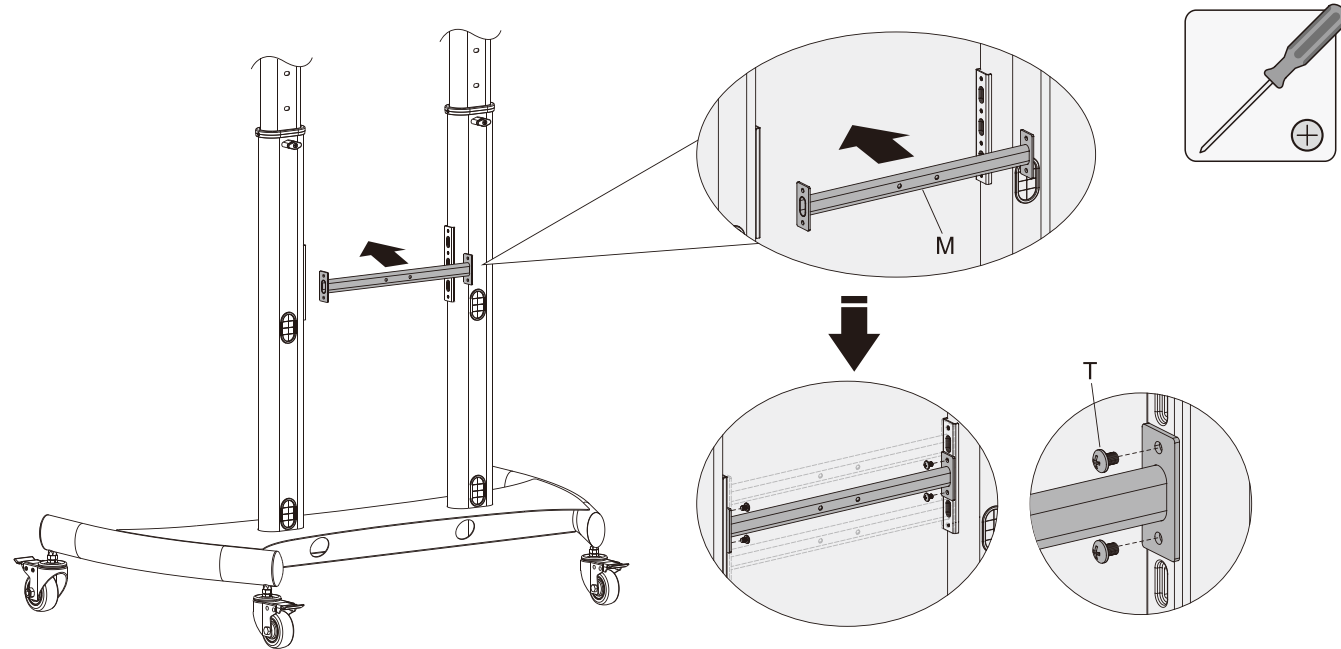


Install the support bar to the columns at the desired position and secure using the appropriate screws.

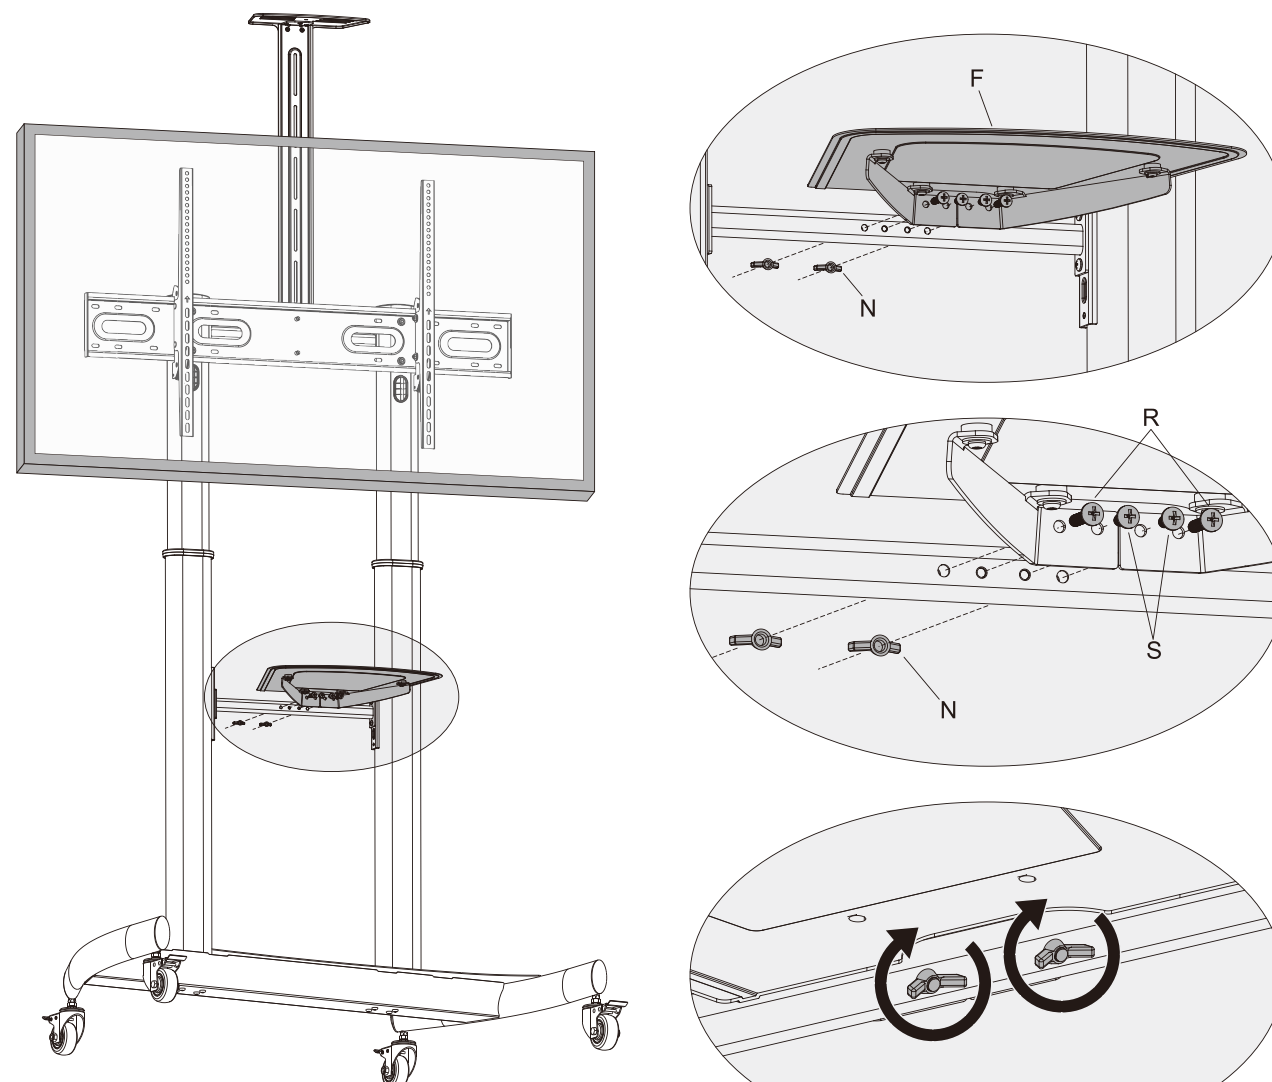

Attach the DVD shelf to the support bar with the appropriate screws and butterfly nuts. Tighten all screws and butterfly nuts to secure.

10. Cable Management

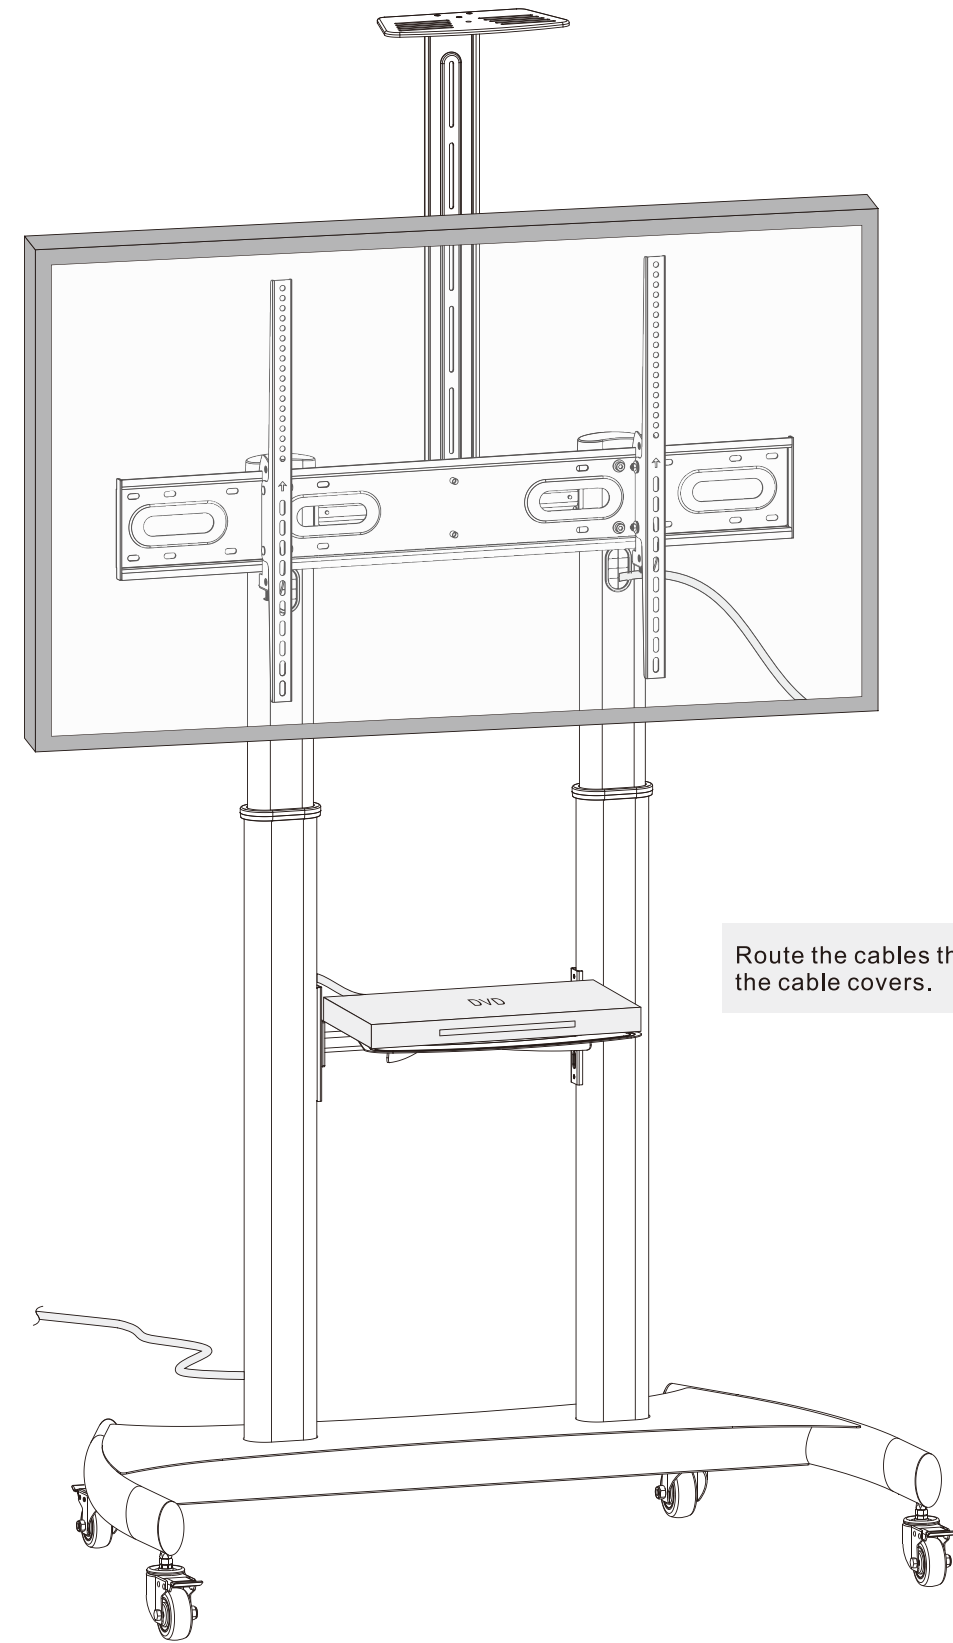

Route the cables through the cable covers.