

[illegible]

P - 1 2 5 a Quick Operation Guide

3 Metronome settings

Metronome

Voice confirmation of current Tempo value

Metronome Volume

Metronome Tempo

Metronome Beat

METRONOME

A#-1 A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

1 step down
1 step up

Default value

10 steps down
10 steps up

2
3
4
5
6
7
8
9
0

No beat
2
3
4
5
6

4 Rhythm settings

Rhythm

Voice confirmation of current Tempo value

Rhythm Volume

Rhythm Tempo

Rhythm

Bass

Intro/Ending

RHYTHM

A#-1 A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

1 step down
1 step up

Default value

10 steps down
10 steps up

2
3
4
5
6
7
8
9
0

8Beat
Shuffle1
Shuffle2
Shuffle3
Gospel
6-8SlowRock
SlowJazz
JazzWaltz
Samba
Rumba
KidsPop
Christmas3-4
ChristmasSwing

16Beat
Shuffle2

BossaNova
Salsa

On
Off

Intro On
Ending On
Intro Off
Ending Off

5 Other settings

Other settings

Operation Confirmation Sounds

Auto Power Off

Tuning

IAC

Transpose

Local Control

MIDI Transmit Channel

MIDI Receive Channel

Program Change

Aux Out volume

Control Change

Table EQ

Sound Boost

Built-in Speaker

METRONOME + RHYTHM

A#-1 A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

Off
On

Disable
Enable

440.0Hz
442.0Hz

Off
1 step down
1 step up

-6
-5
-4
-3
-2
-1

0 (Original pitch)
+1
+2
+3
+4
+5
+6

1 step down
1 step up

Ch 1 (Default value)
Off

Ch 1
Ch 1+2
ALL (Default value)

On/Off
On/Off

Variable
Fixed

Off
On

Off
On
Auto

