


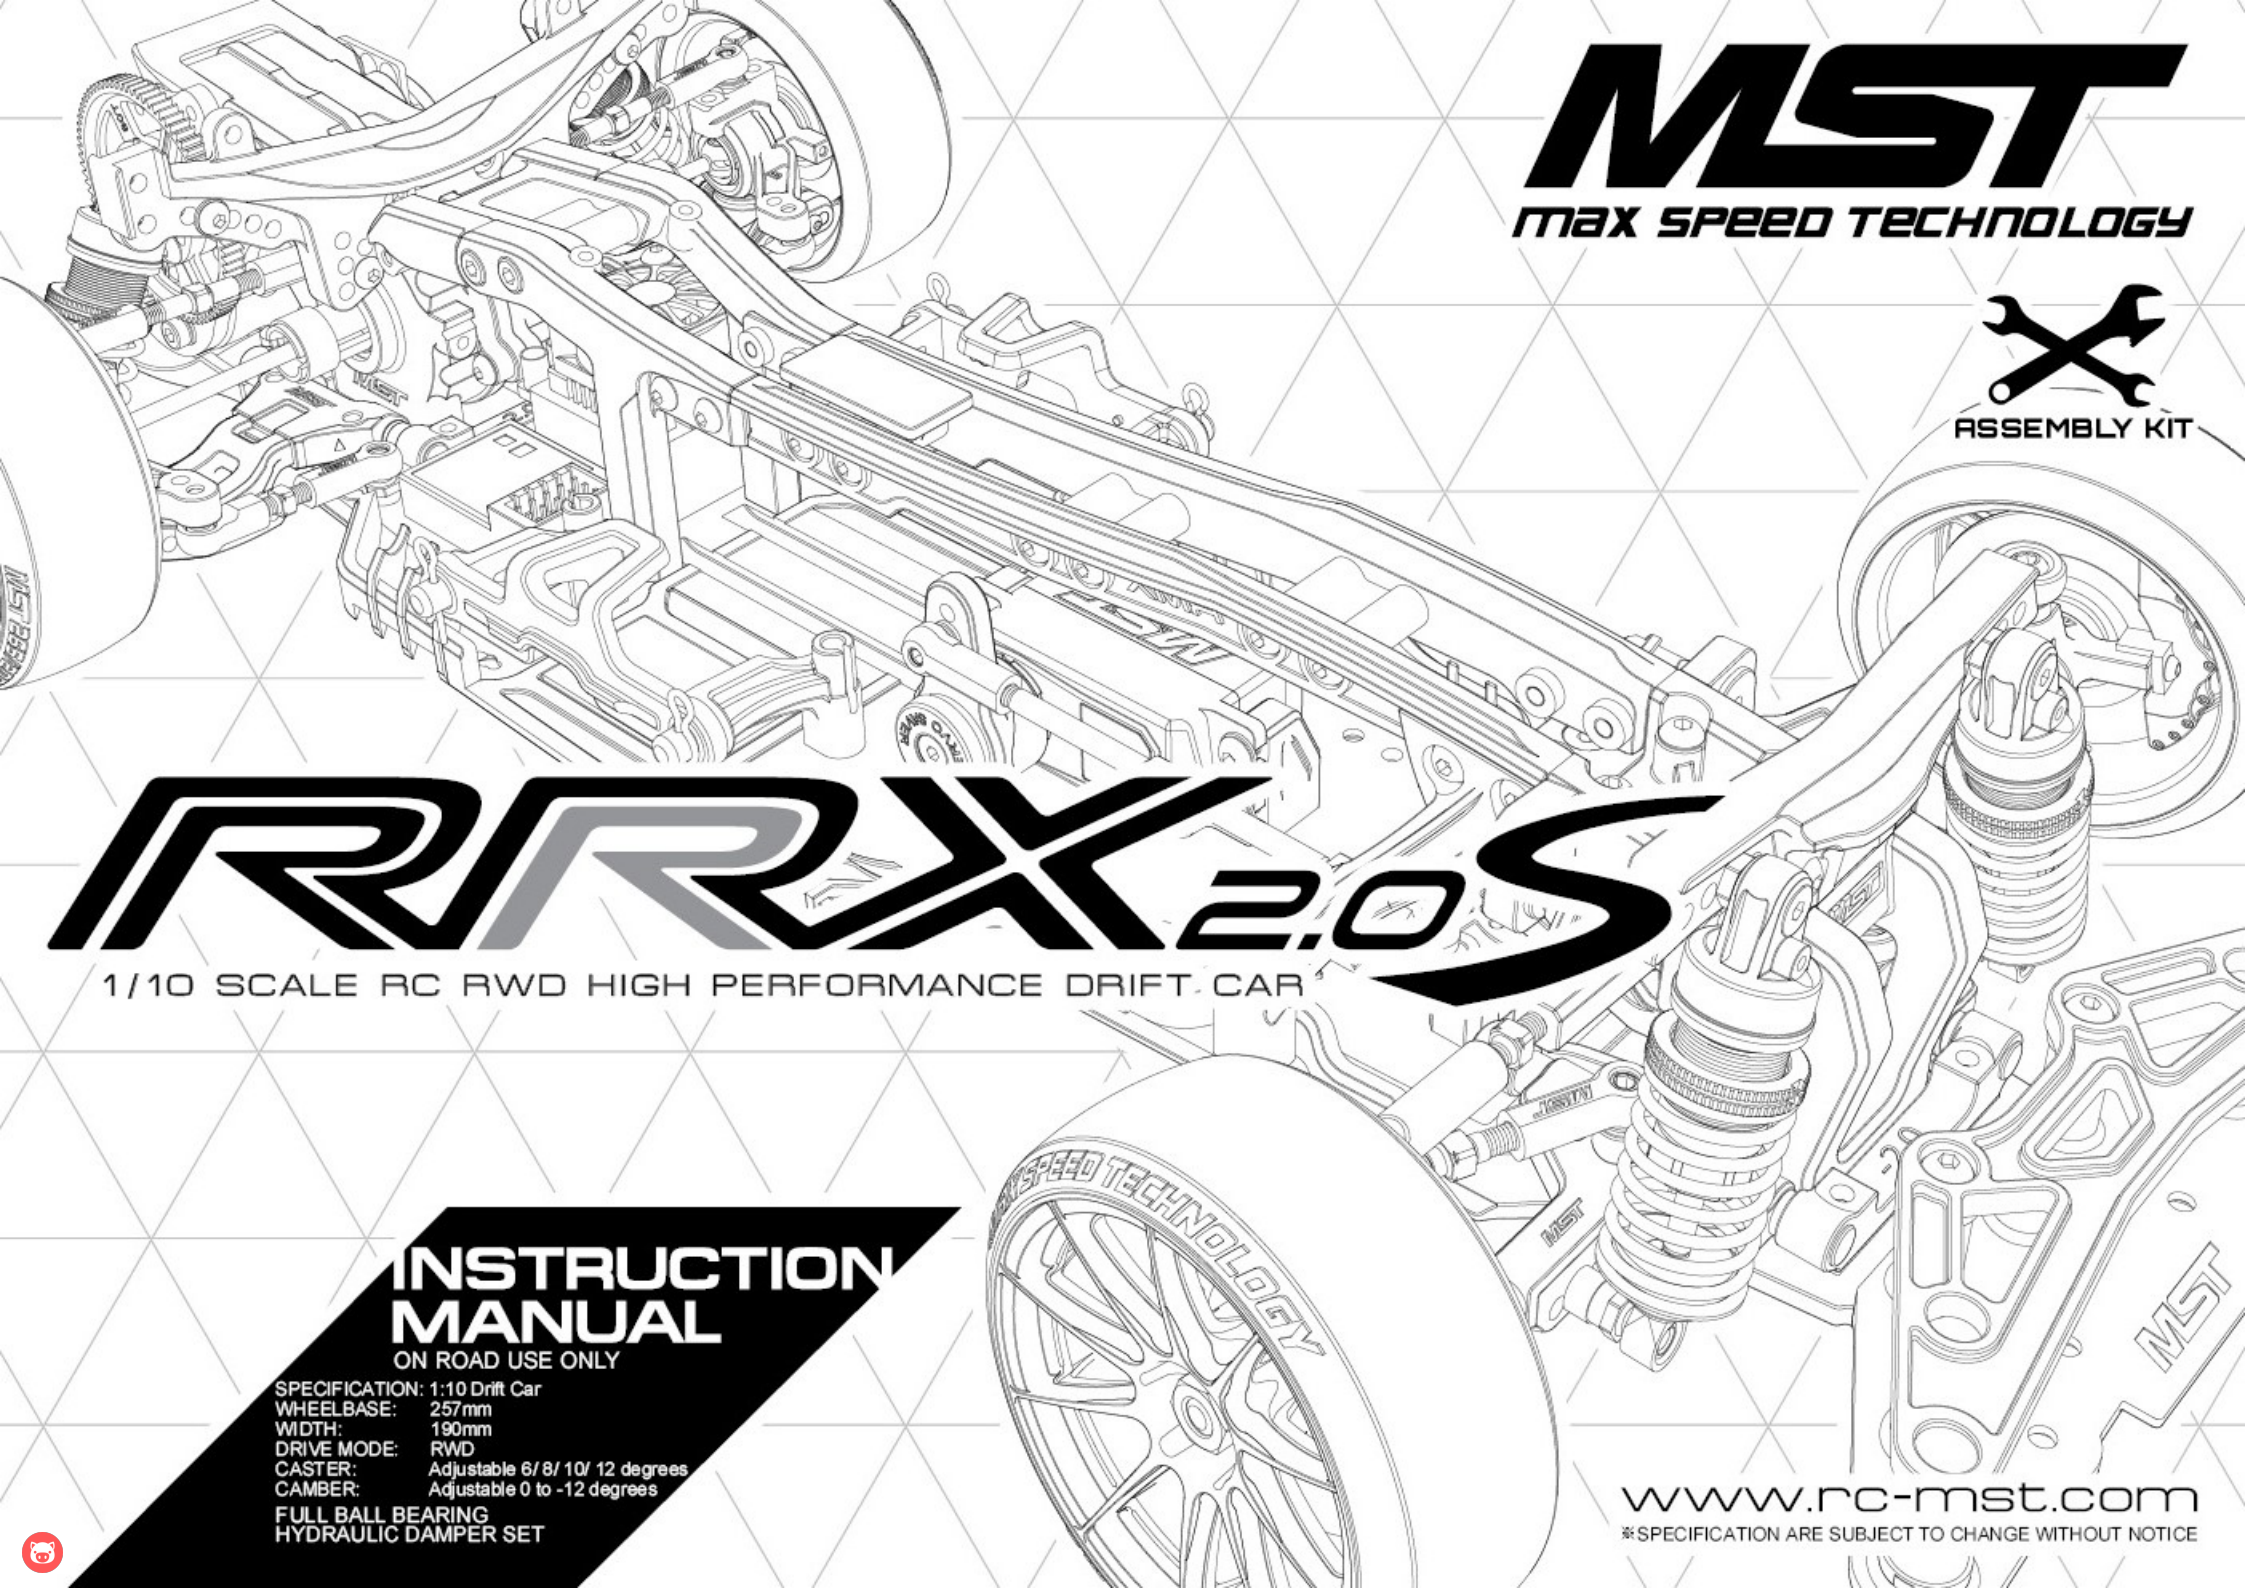

MST

MAX SPEED TECHNOLOGY



R/RX 2.0S

1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR


INSTRUCTION MANUAL

ON ROAD USE ONLY

SPECIFICATION: 1:10 Drift Car
WHEELBASE: 257mm
WIDTH: 190mm
DRIVE MODE: RWD
CASTER: Adjustable 6/ 8/ 10/ 12 degrees
CAMBER: Adjustable 0 to -12 degrees
FULL BALL BEARING
HYDRAULIC DAMPER SET


www.rc-mst.com

*SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE

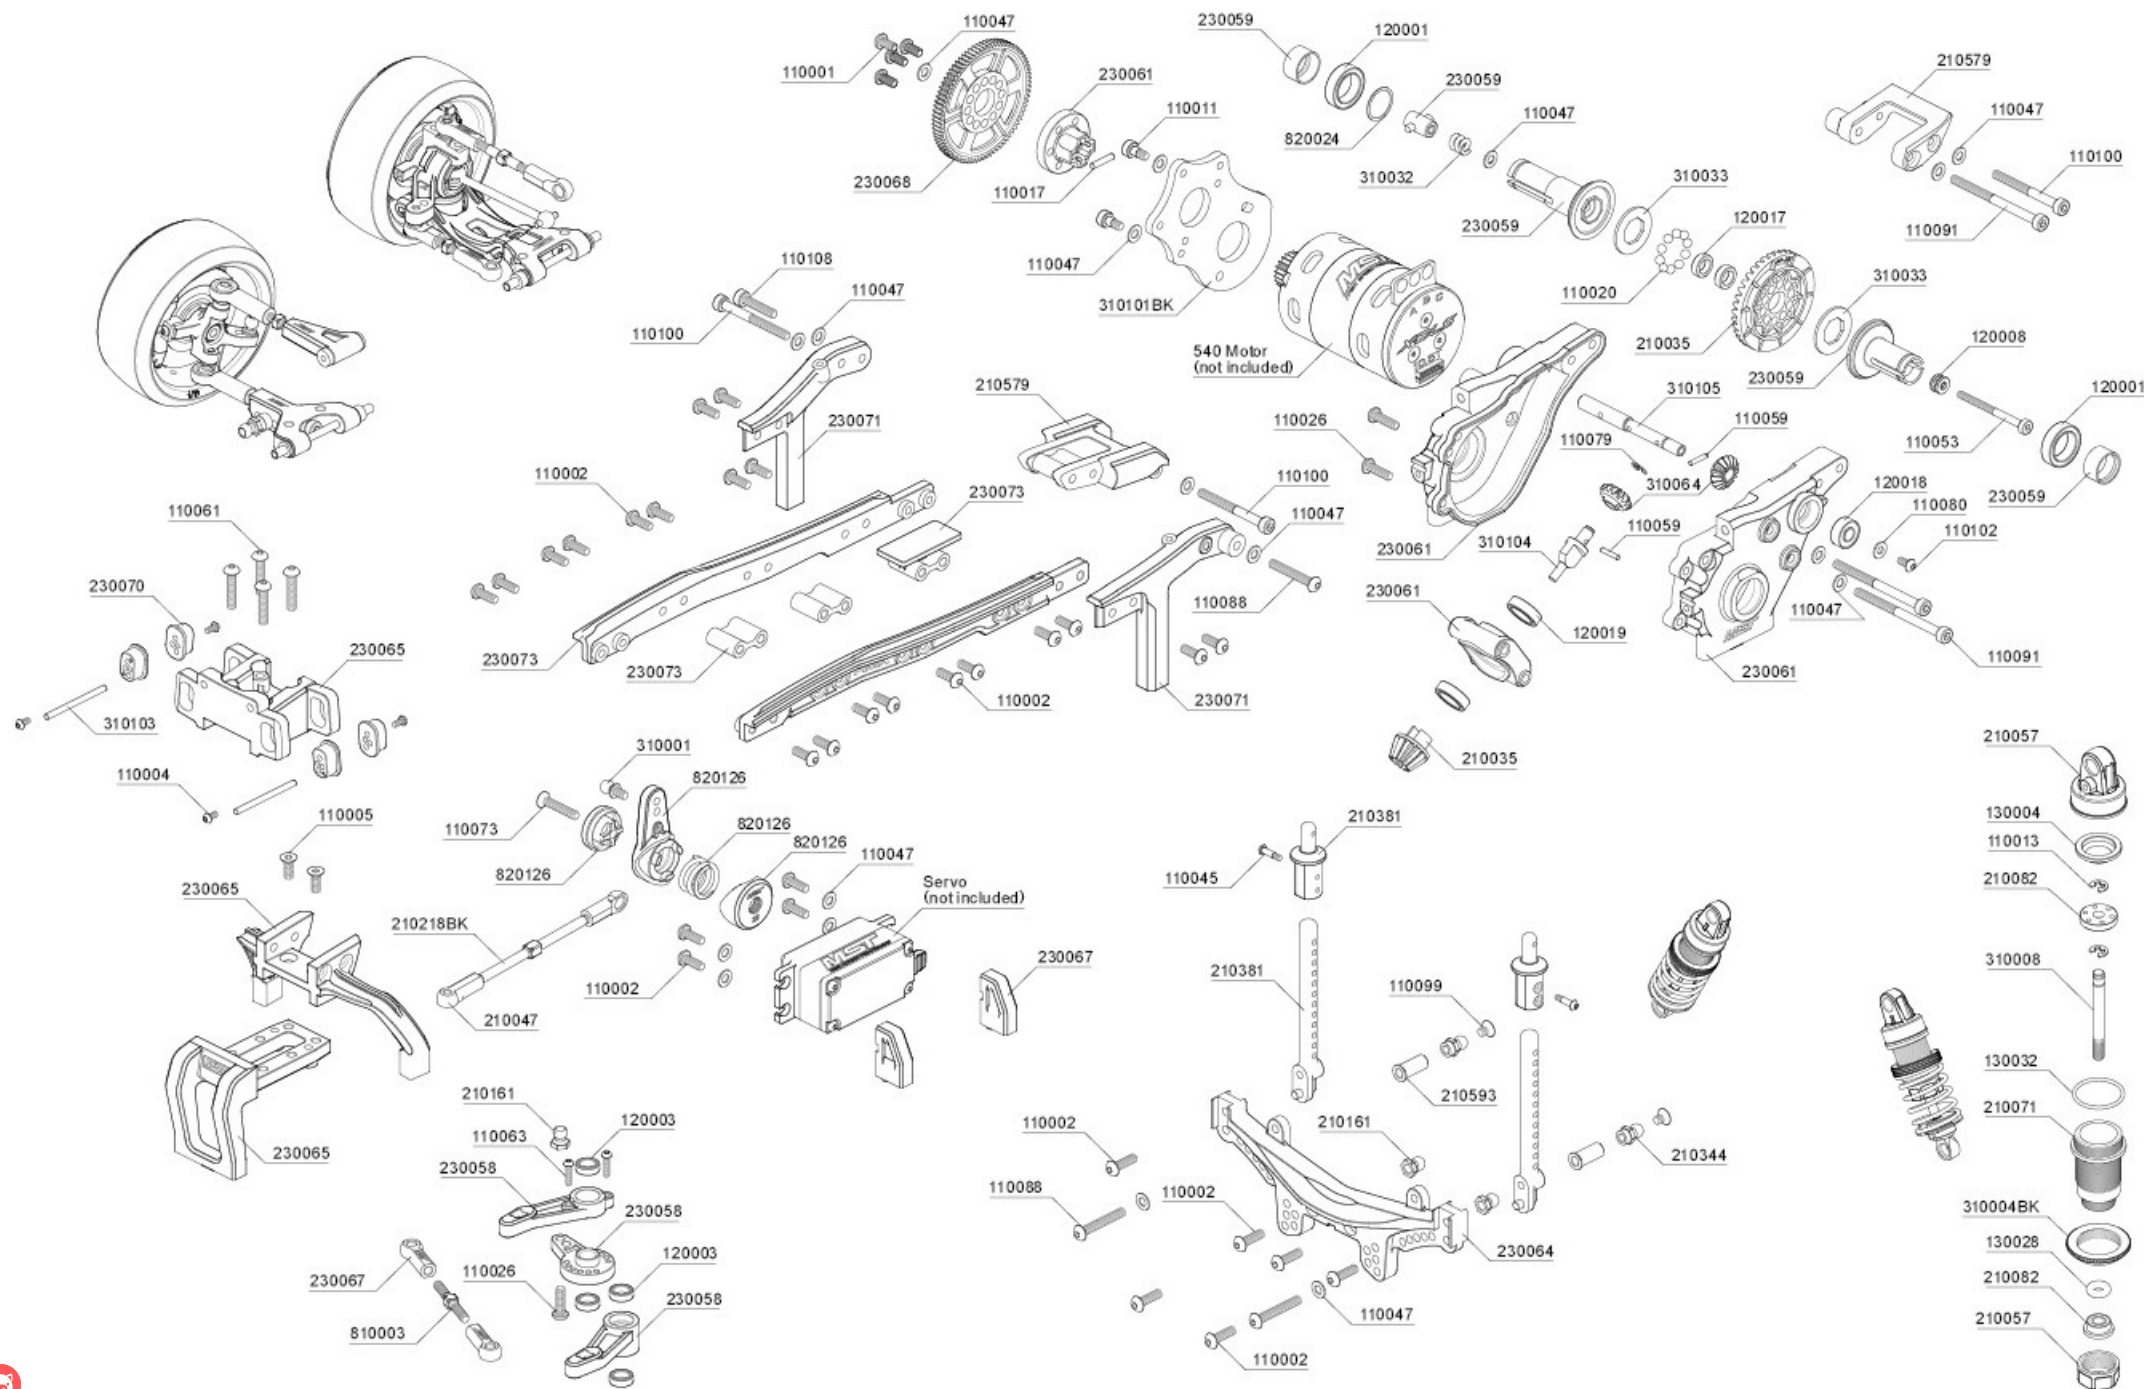




NECESSARY TOOLS FOR ASSEMBLY 工具需求 (NOT INCLUDED IN KIT) (另購)

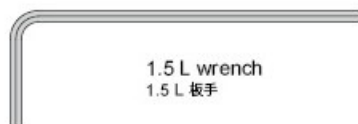

1.5 L wrench
1.5 L 板手

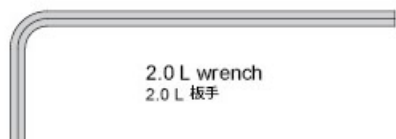

2.0 L wrench
2.0 L 板手



2.5 L wrench
2.5 L 板手



 
5.5 x 4.0 wrench
5.5 x 4.0 板手




5.5 & 7.0 alum. wrench
5.5 & 7.0 套筒板手




Hobby knife
美工刀




Screwdriver
螺絲起子

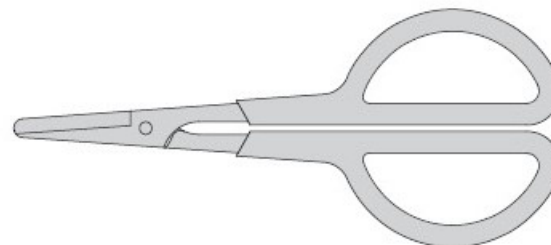

Scissors
剪刀

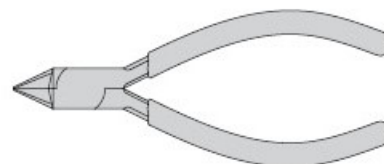

Side cutter
斜口鉗

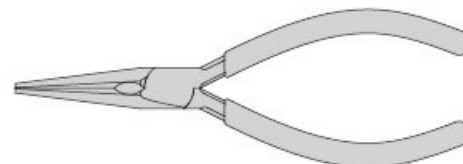


Needle nose pliers
尖嘴鉗



210272
Turnbuckle wrench
拉桿板手

Please follow the assembling figures and instructions closely
for your [RRX 2.0S] best performance!

請依照說明書圖示步驟安裝以發揮 [RRX 2.0S] 最好效能!

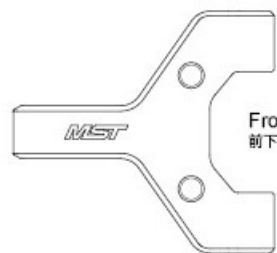

Front lower arm ×2
前下擺臂



Suspension mount (-2.0) ×2
下擺臂座 (-2.0)



Suspension mount spacer 0.5mm ×1
擺臂座墊片 0.5mm



5.8×26 Adjuster ×2
拉桿頭



2.5×3 Shaft bush ×2
軸心轉接套



2.5×1 Shaft bush ×2
軸心轉接套



3×5.5×3 Spacer ×2
墊片



3×5.5×2 Spacer ×2
墊片



2.5×46 Arm shaft ×2
擺臂插軸



M3×35 screw ×2
有頭螺絲(半牙)



M3×14 screw ×2
圓頭螺絲




M3×8 screw ×4
沉頭螺絲



4.8 Ball connector L ×2
外六角球頭(長)


STEP 1 Front lower arm assembly











前下擺臂組裝

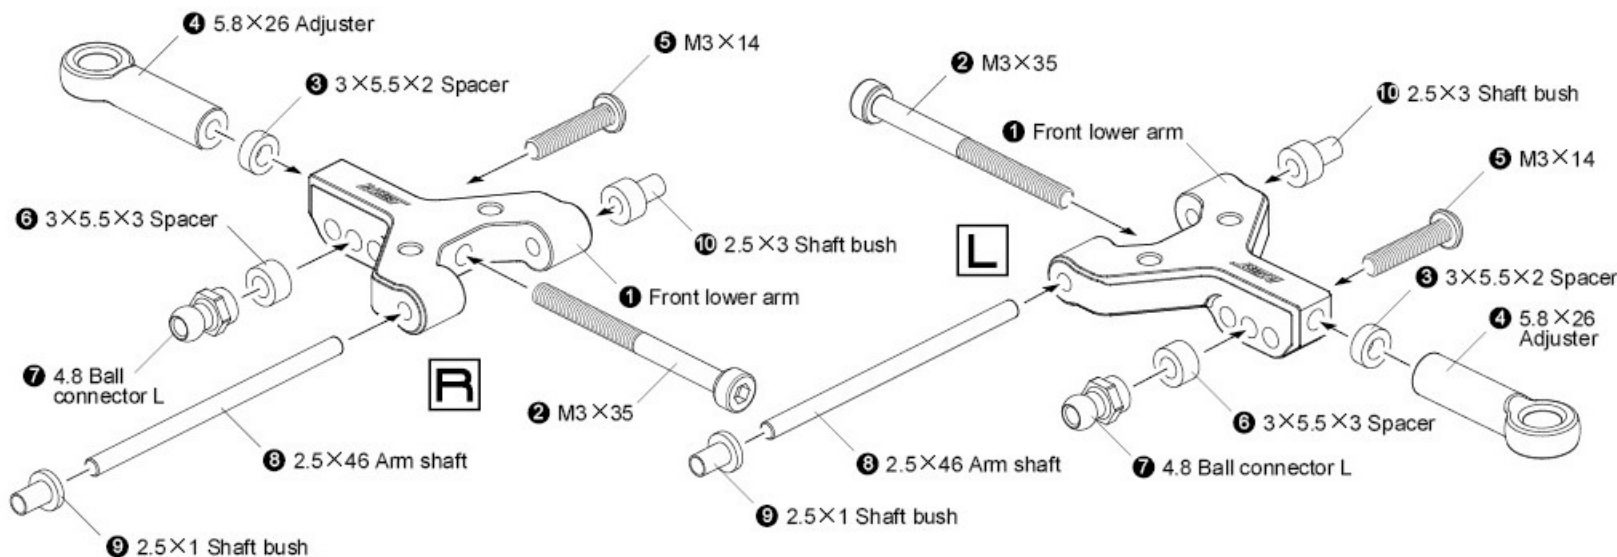

STEP 2 Attaching front lower arm

        
安裝前下擺臂

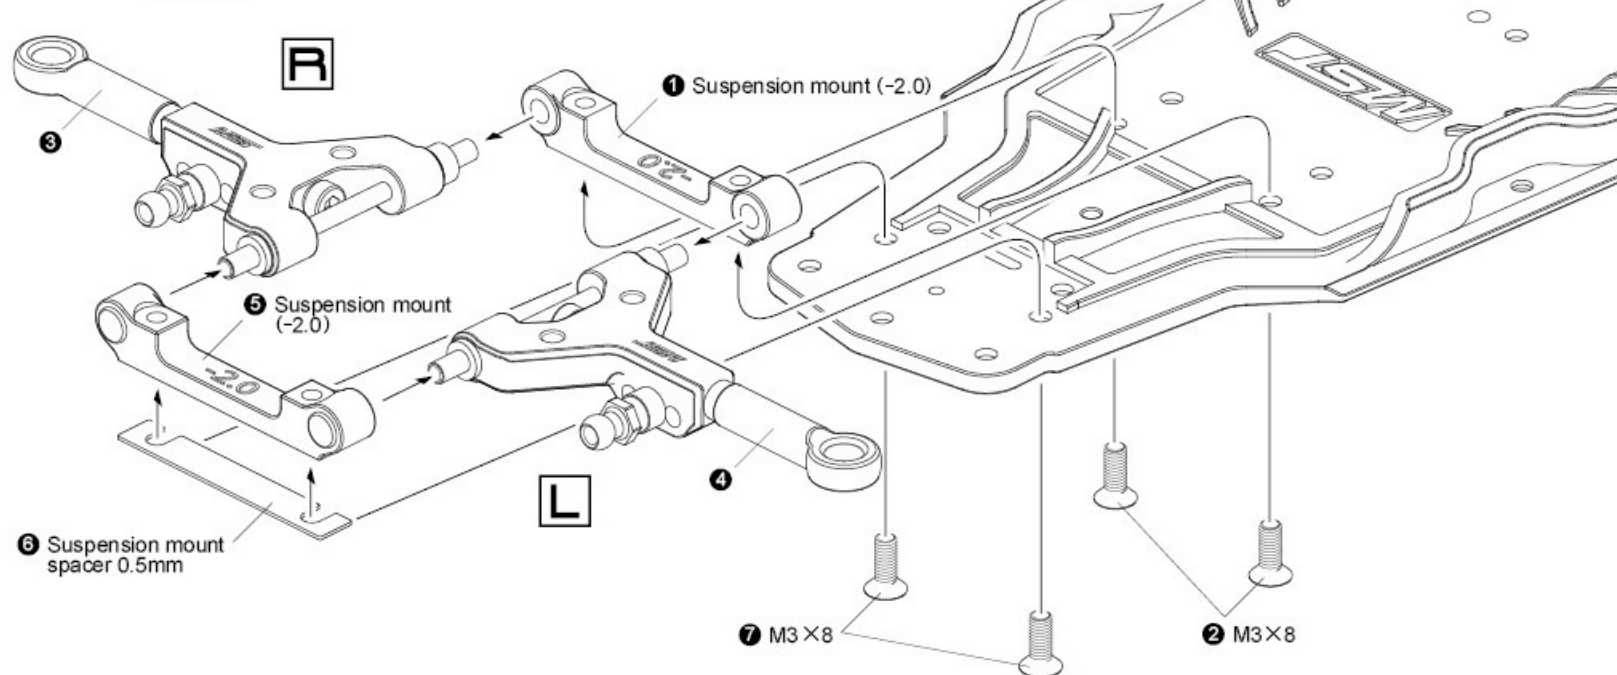

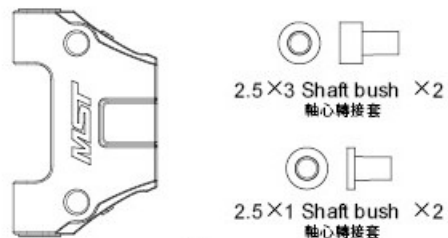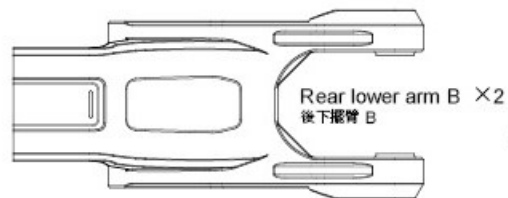


STEP 1 Rear lower arm assembly

後下擺臂組裝

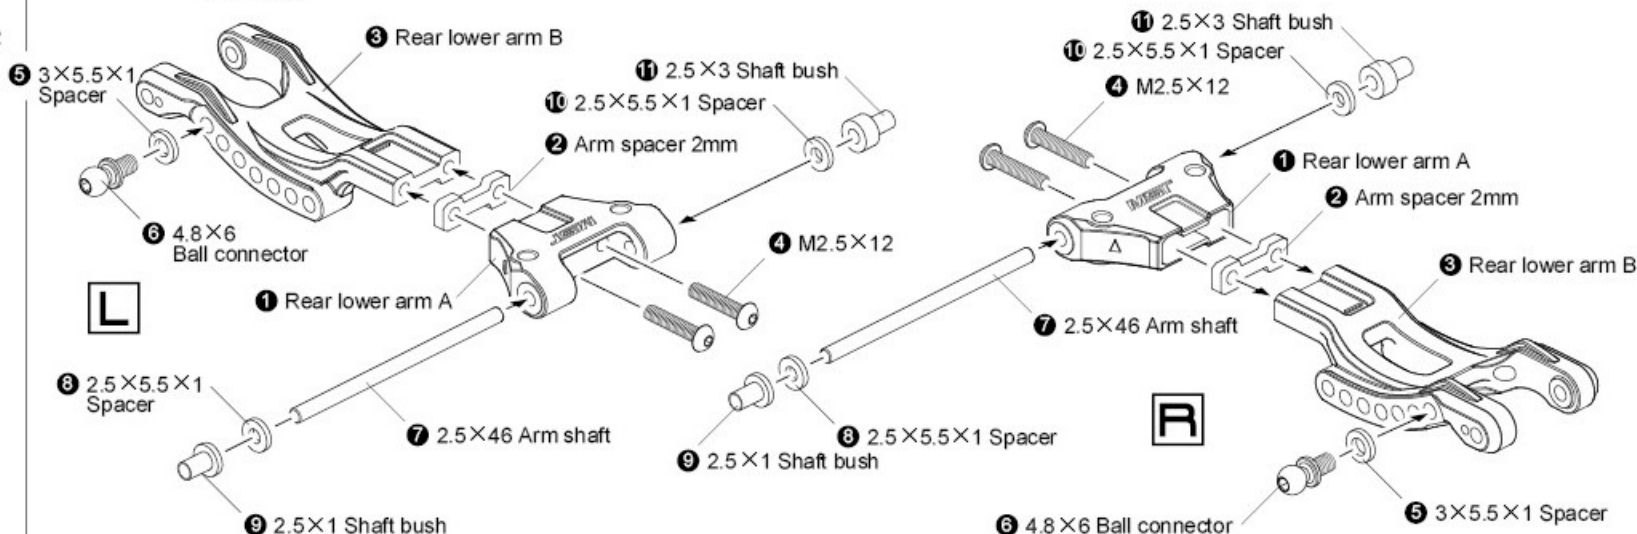


STEP 2 Attaching rear lower arm


安裝後下擺臂

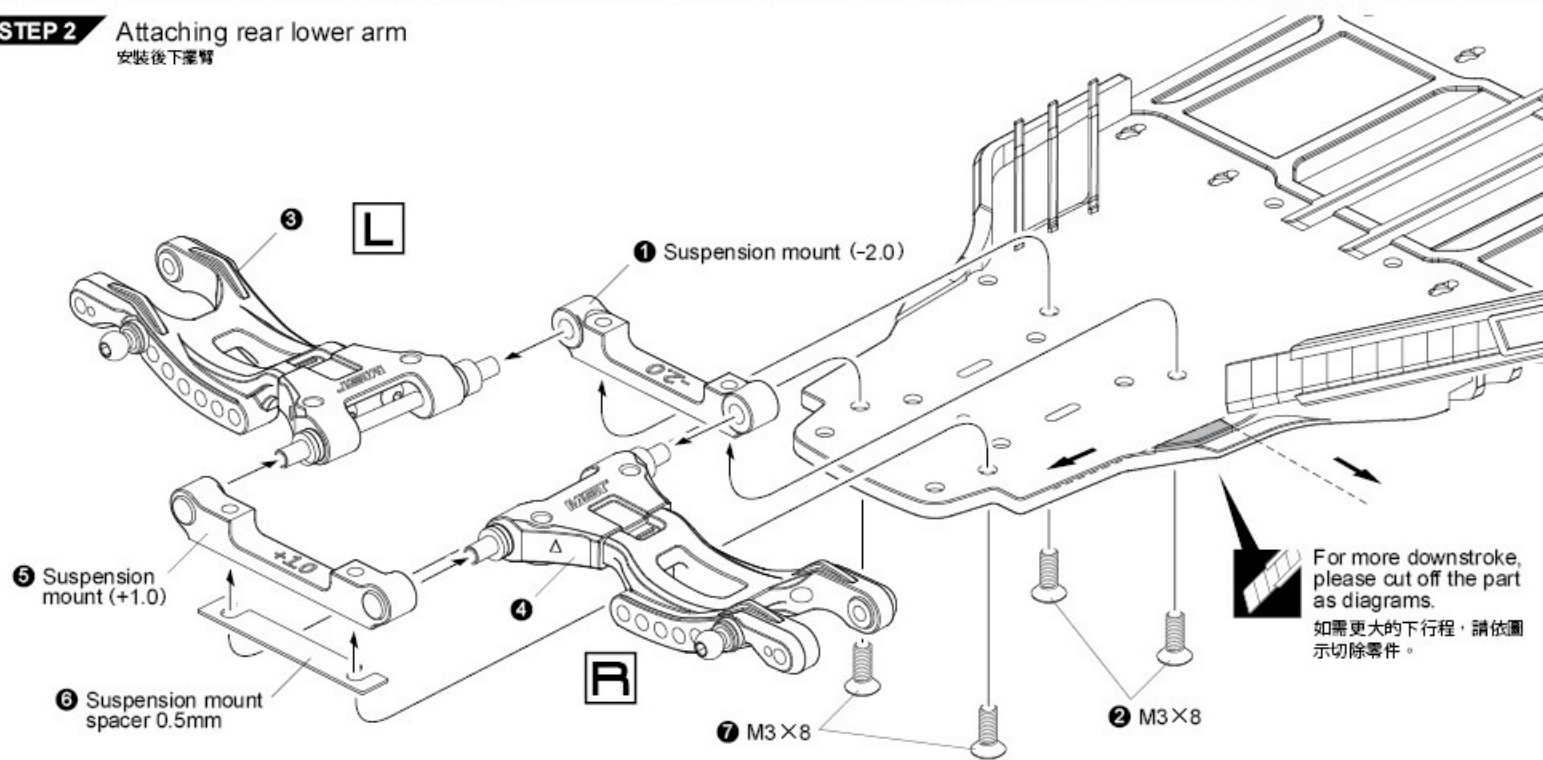


For more downstroke, please cut off the part as diagrams.
如需更大的下行程，請依圖示切除零件。

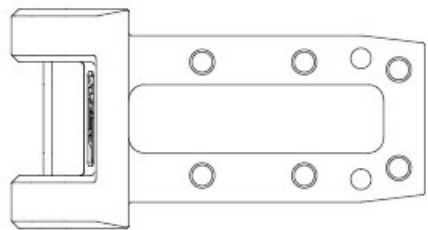

Front head mount A ×1
前擺座A

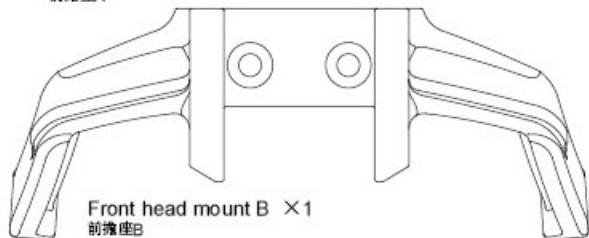


Front head mount B ×1
前擺座B

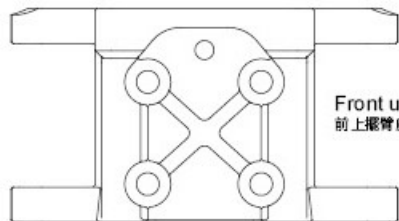


Front upper arm mount ×1
前上擺臂座



 Front upper arm ×2
前上擺臂 (Bag 1)



M2×4 screw ×4
圓頭螺絲

 


M3×8 screw ×2
沉頭螺絲



M3×14 screw ×4
圓頭螺絲



 M3×20 steel turnbuckle ×2
鋼製可調拉桿



5.8×26 Adjuster ×2
拉桿頭



Arm shaft bush A ×2
擺臂襯套 A



Arm shaft bush B ×2
擺臂襯套 B




2×6×1 Spacer ×2
墊片



2×6×2 Spacer ×2
墊片

2×28 shaft ×2
插軸

STEP 1 Front upper arm assembly
前上擺臂組裝

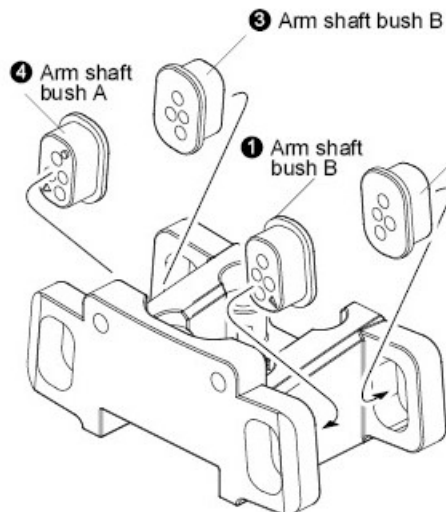

1 Front upper arm

2 M3×20 steel turnbuckle

 
2 Arm shaft bush A

3 Arm shaft bush B


1 Arm shaft bush B

3 5.8×26 Adjuster

X2
Make 2



STEP 3

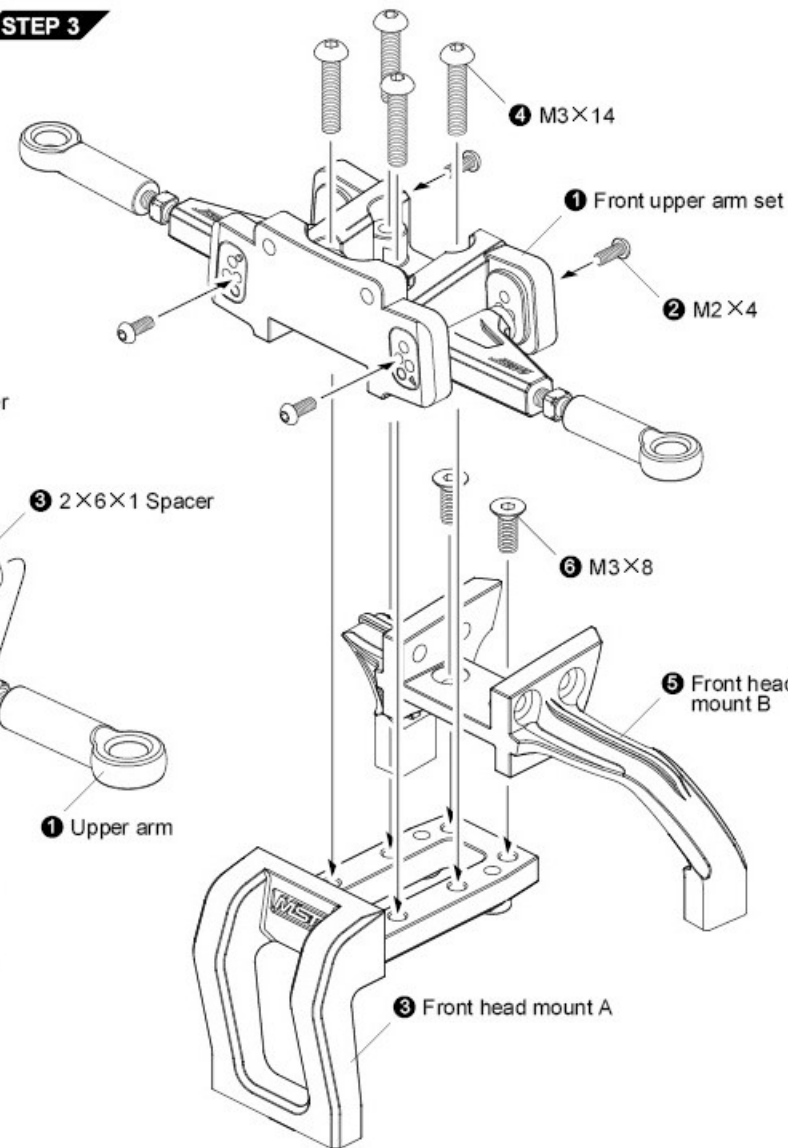

4 M3×14

1 Front upper arm set

2 M2×4

7 2×6×1 Spacer

5 Upper arm

3 2×6×1 Spacer

6 2×6×2 Spacer

2 2×6×2 Spacer

1 Upper arm

 
6 M3×8

5 Front head mount B


3 Front head mount A

8 2×28 Shaft


4 2×28 Shaft



Steering arm A ×1
轉向搖臂 A

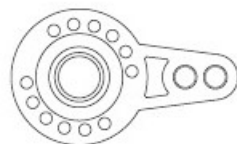


Steering arm B ×1
轉向搖臂 B

 

Steering arm C ×1
轉向搖臂 C



 Steering joint plate ×1
轉向連接板



Steering arm post ×1
轉向搖臂支柱



M3×20 screw ×2
沉頭螺絲



M3×12 screw ×2
沉頭螺絲



M3×10 screw ×1
圓頭螺絲



M2×8 screw ×2
圓頭螺絲



4.8×4.5 Ball connector ×2
球頭螺絲



4.8 Ball connector ×1
外六角球頭




5×8×2.5 Ball bearing ×4
培林




3×6×2.5 Bearing ×4
軸承

STEP 1 Steering arm assembly
轉向搖臂組裝

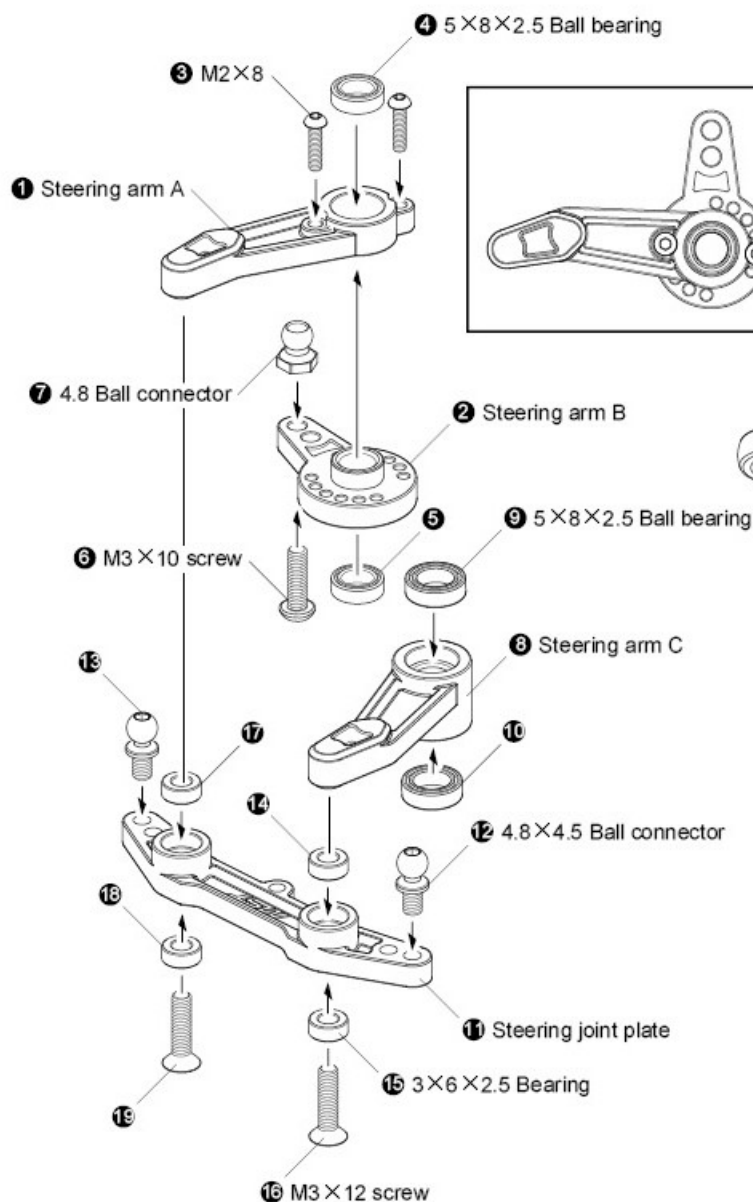


⚠ Tighten M3×12 screw first, and then loose it till the steering joint plate turning freely.
先稍微旋緊M3×12螺絲再放鬆至轉向連接板可自由轉動無阻力。

STEP 2 Attaching steering arm
安裝轉向搖臂組

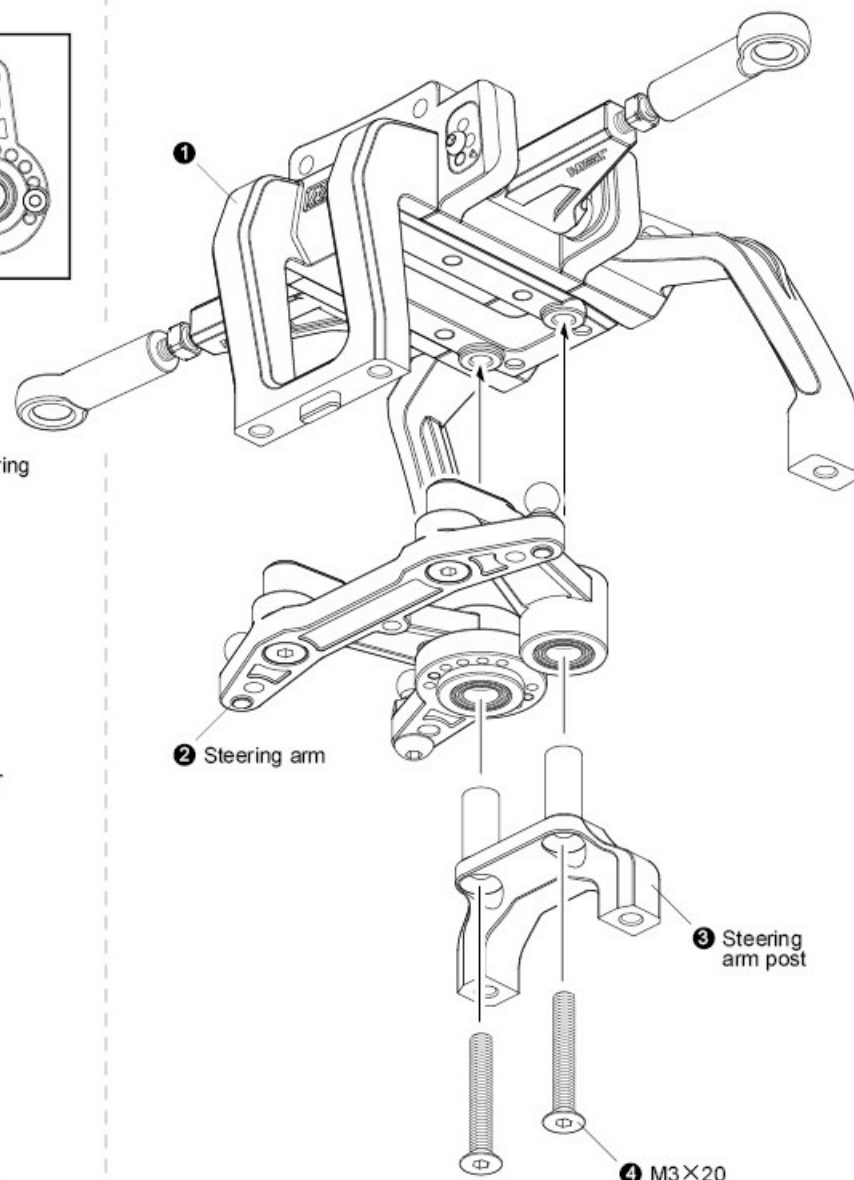


STEP 1 Steering servo assembly

轉向伺服機組裝

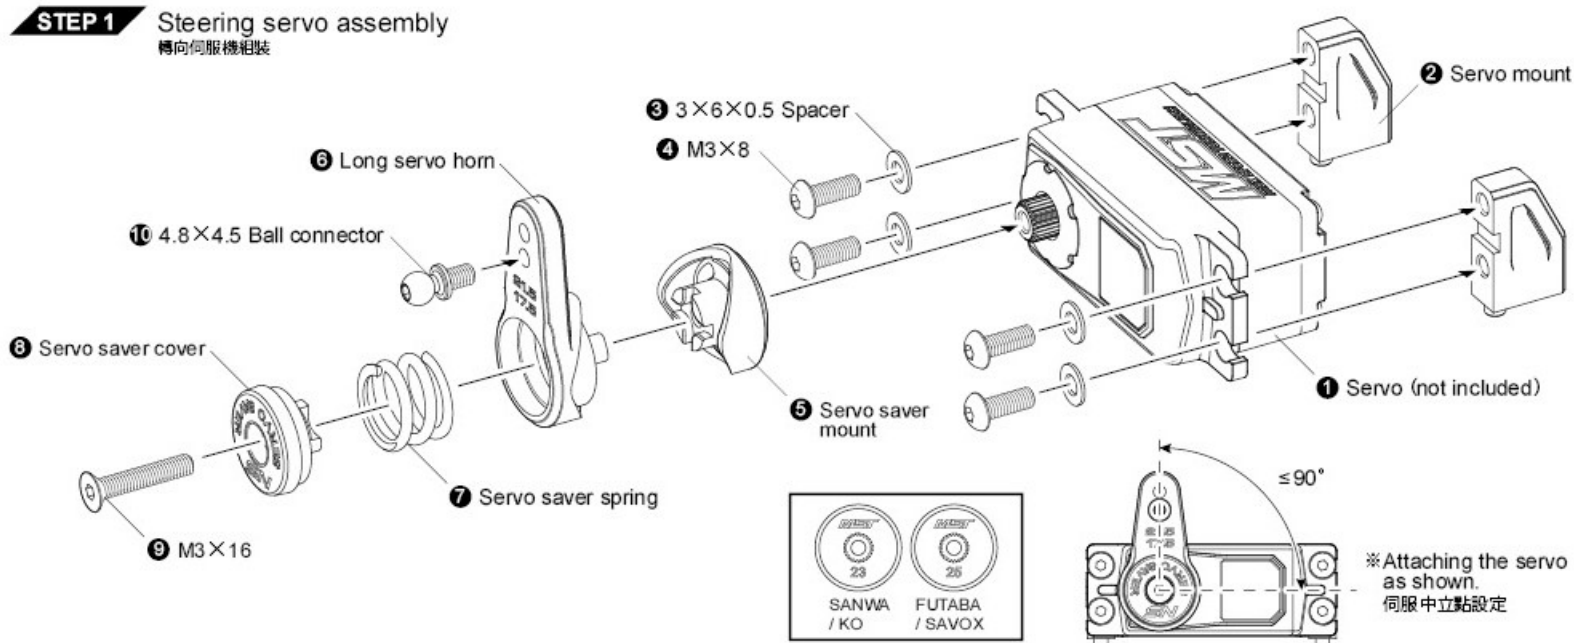


STEP 2 Servo saver turnbuckle assembly

伺服拉桿組裝

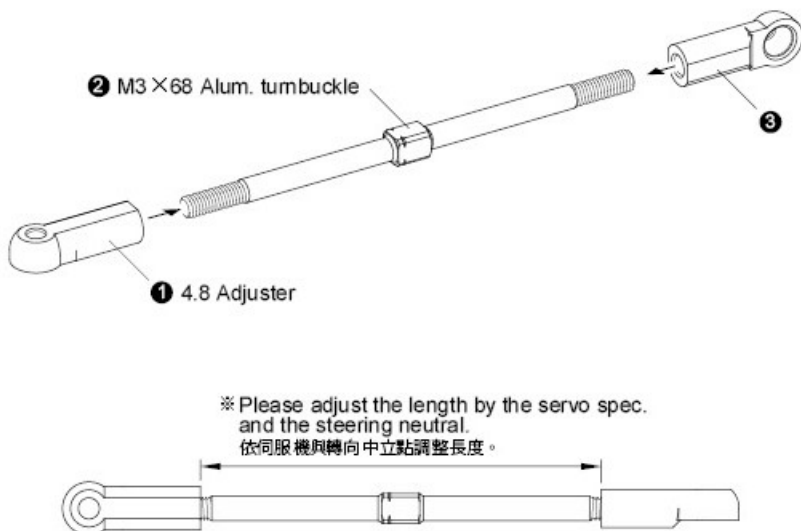

STEP 3 Steering adjuster assembly

轉向拉桿組裝

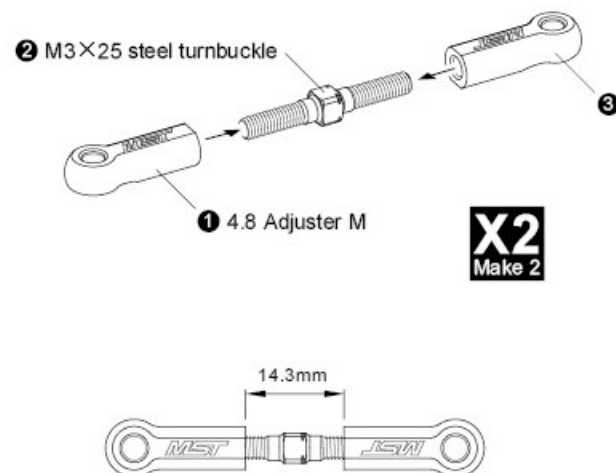

Long servo horn ×1
長伺服片



Servo saver cover ×1
伺服機蓋上蓋



Servo saver mount 23T ×1
23T 伺服機座



Servo saver mount 25T ×1
25T 伺服機座



4.8 Adjuster ×2
拉桿頭



4.8 Adjuster M ×4
拉桿頭



Servo mount ×2
伺服機座



M3x25 steel turnbuckle ×2
鋼製可調拉桿



M3x16 screw ×1
沉頭螺絲



M3x8 screw ×4
圓頭螺絲



M3x10 screw ×8
沉頭螺絲



4.8x4.5 Ball connector ×1
球頭螺絲




Servo saver spring (Gold) ×1
伺服機彈簧(金)




3x6x0.5 Spacer ×4
墊片




M3x68 Alum. turnbuckle ×1
鋁合金可調拉桿

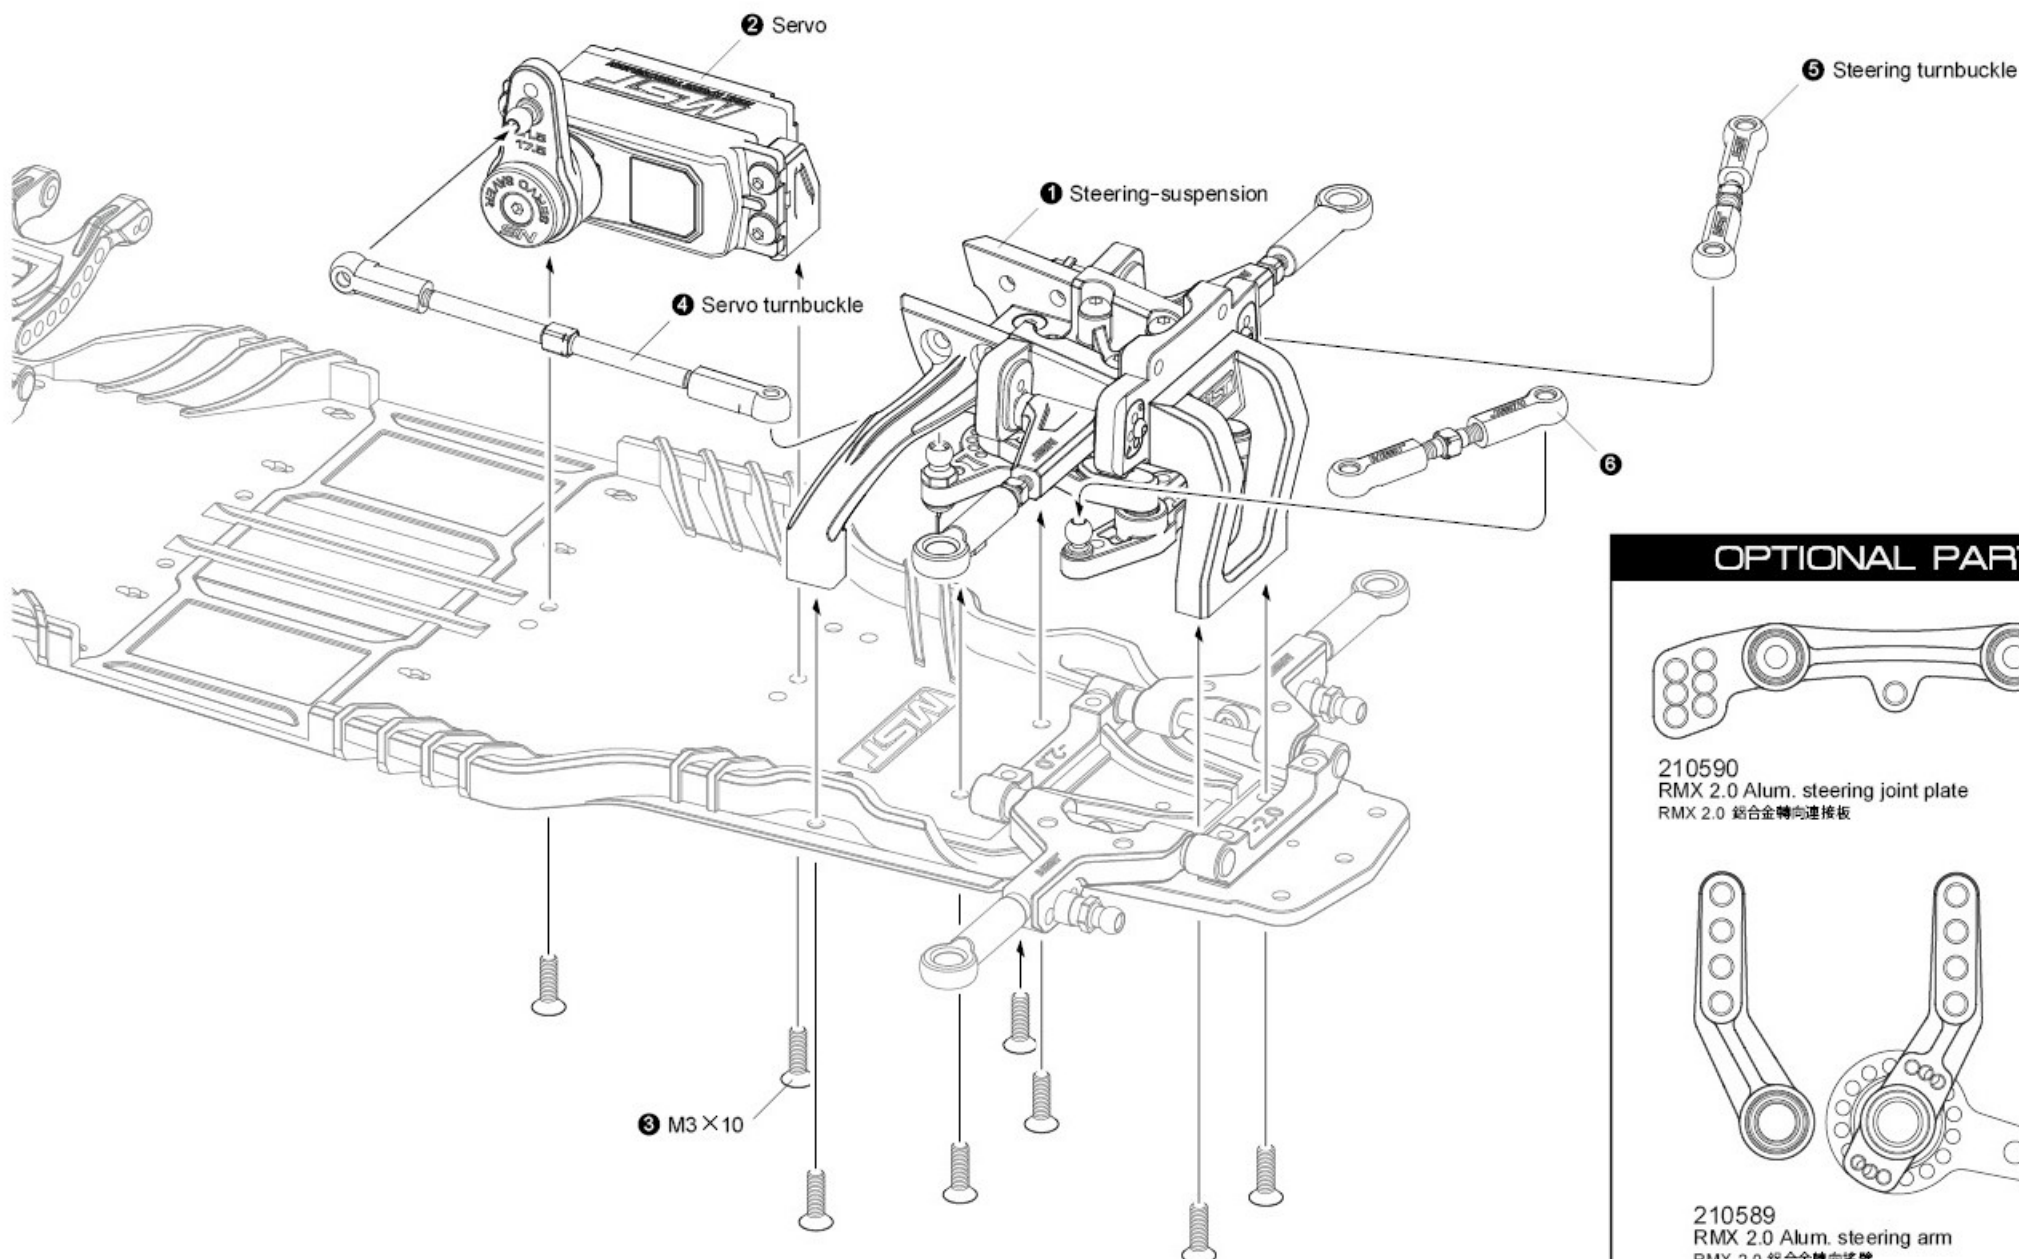STEP 1 Attaching front steering-suspension
安裝前攙組


OPTIONAL PARTS

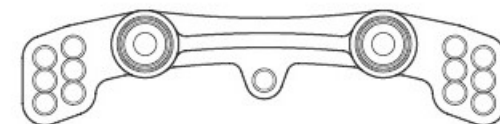


210590
RMX 2.0 Alum. steering joint plate
RMX 2.0 鋁合金轉向連接板

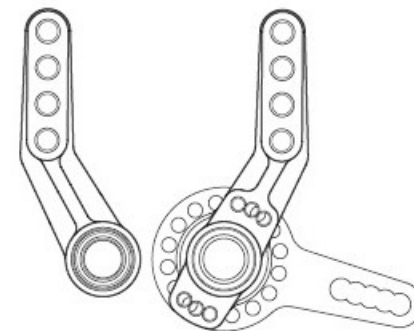


210589
RMX 2.0 Alum. steering arm
RMX 2.0 鋁合金轉向搖臂

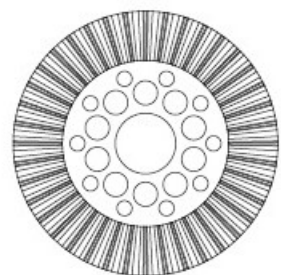

Bevel Gear 40T ×1
傘齒 40T

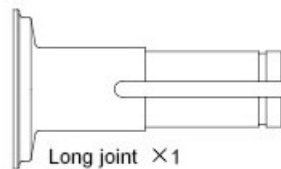


Long joint ×1
長接杆

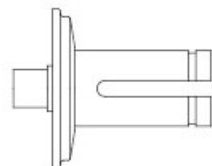

Short joint ×1
短接杆




M2.5×30 screw ×1
有頭螺絲(半牙)

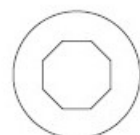

Diff. plate ×2
差壓板



 10×15 Ball bearing ×2
培林



10×10×0.3 Spacer ×1
墊片



Joint ring ×2
接杆環



 
5×8 Bearing ×2
軸承




2.5×6 Spacer ×2
鋼板




3×6×0.5 Spacer ×1
墊片




Diff. Spring ×1
差壓彈簧

 

Steel ball 3.0 ×10
鋼珠 3.0

 




Steel ball 1.5 ×8
鋼珠 1.5

 


Diff. nut ×1
差壓螺帽座

STEP 1 Rear diff. set assembly
後差組裝

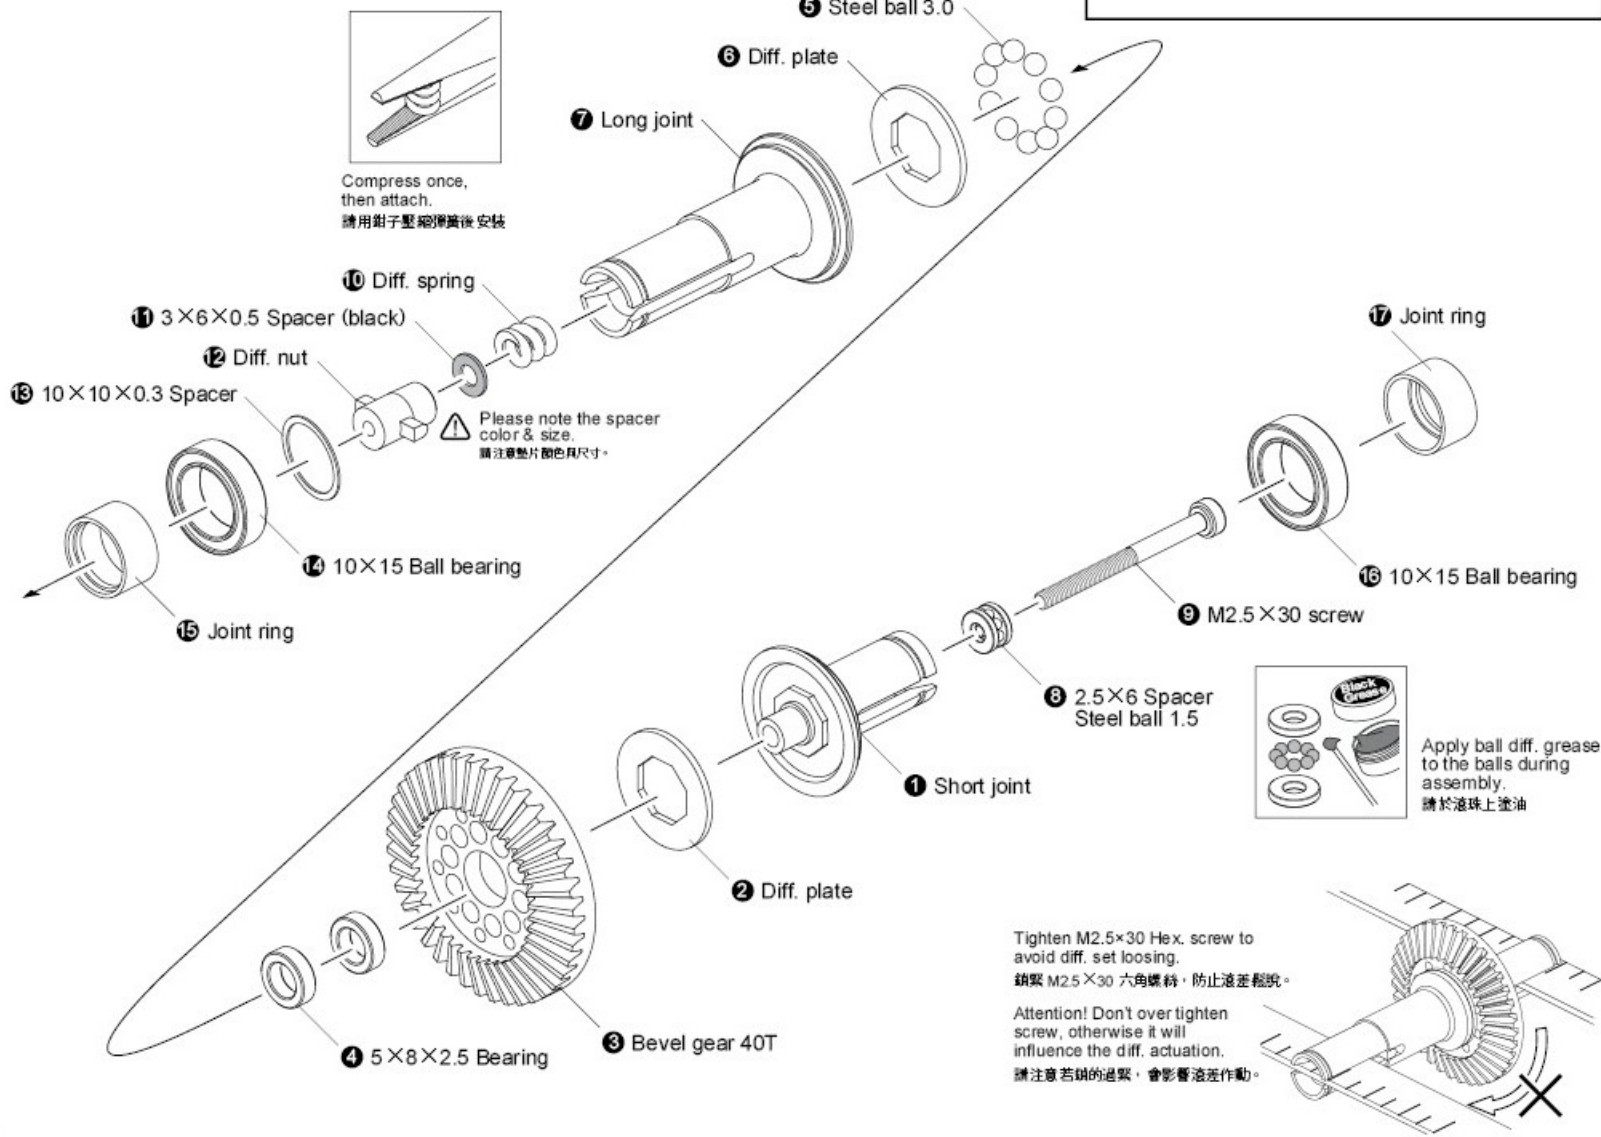


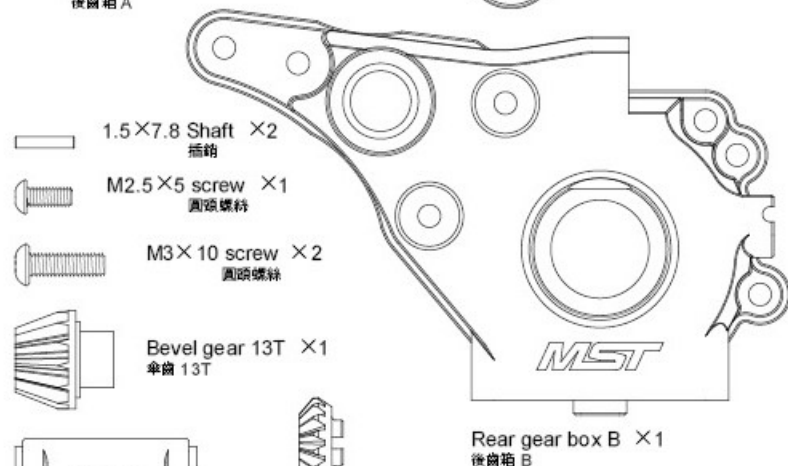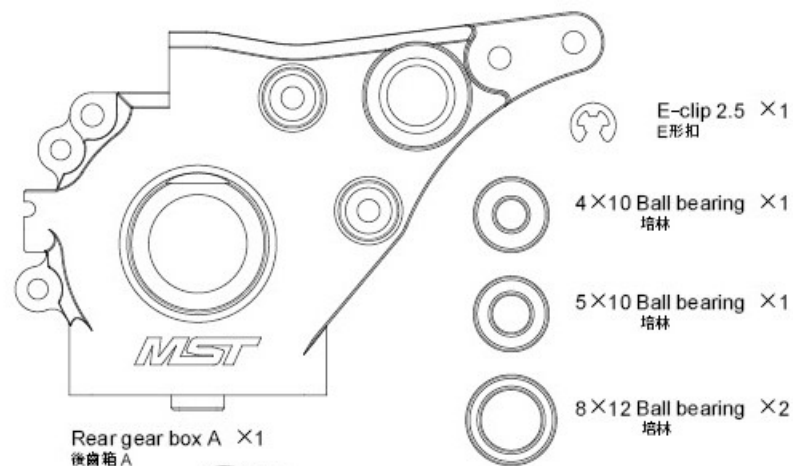


STEP 1 Main shaft assembly
主齒軸組裝

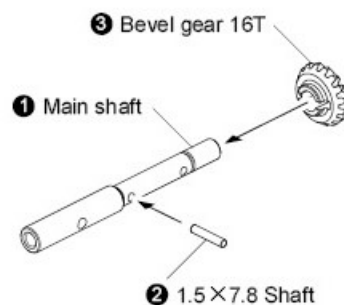


STEP 2 Bevel gear shaft assembly
傘齒軸組裝

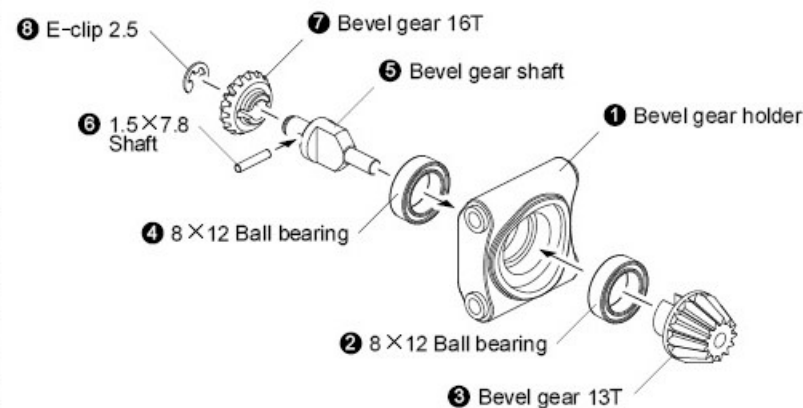


STEP 3 Rear gear box assembly
後齒箱組裝

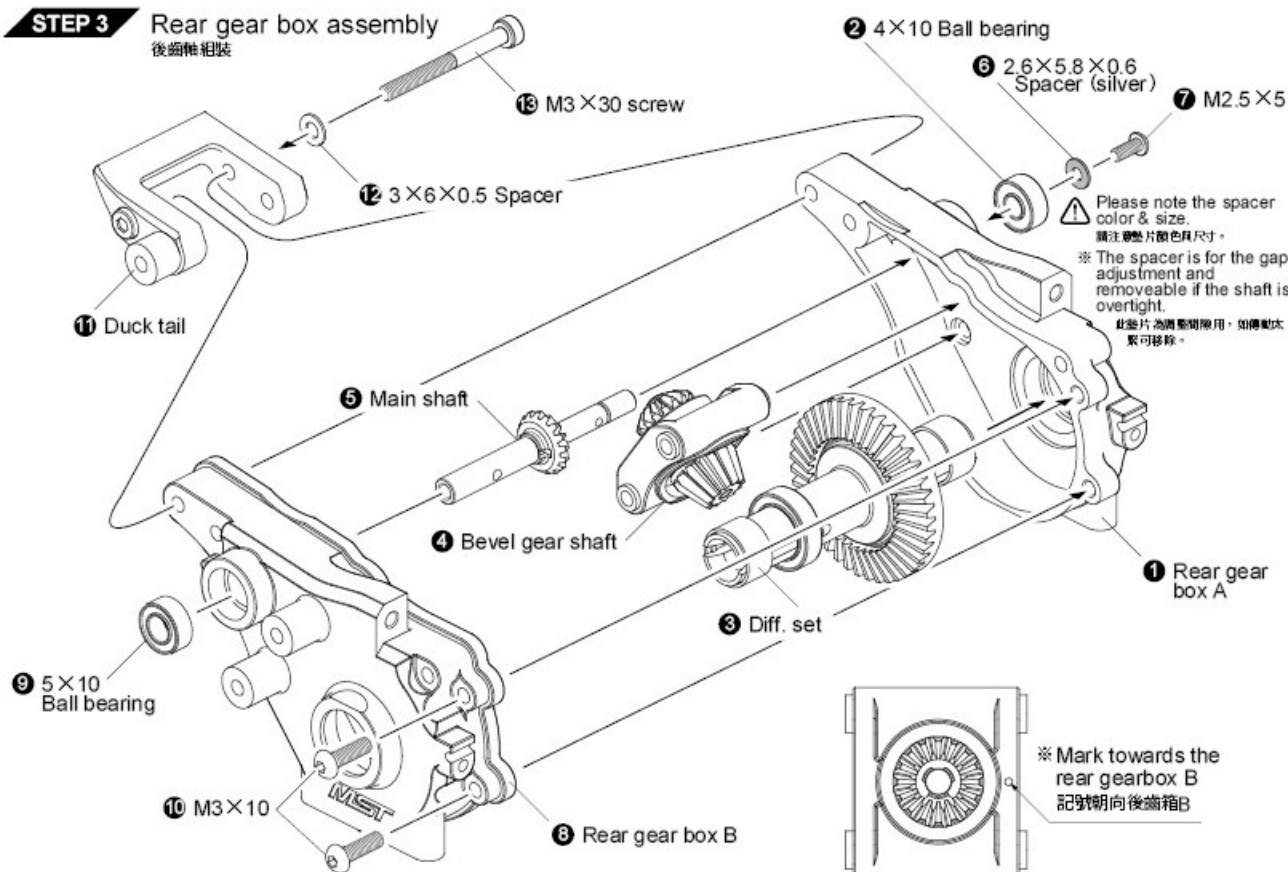

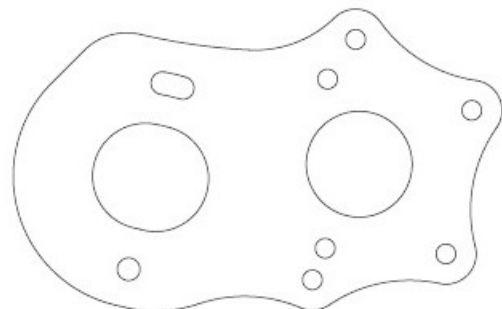

Alum. motor mount ×1
鋁合金馬達座

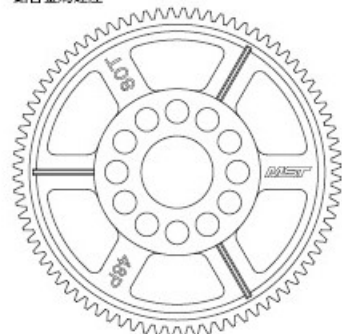

Spur gear 48P 80T ×1
大齒輪


M3×8 screw ×6
沉頭螺絲

M3×6 screw ×4
圓頭螺絲


M3×6 screw ×2
有頭螺絲(半牙)

2×9.8 Shaft ×1
插軸

3×6×0.5 Spacer ×6
墊片

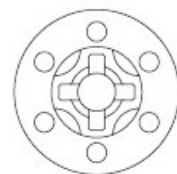

Spur gear holder ×1
大齒盤座

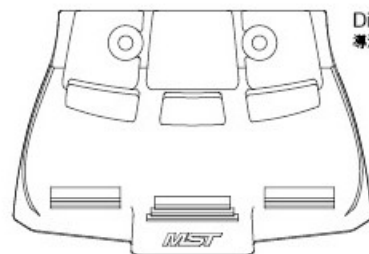


Diffuser ×1
導流板





M3×40 screw ×3
有頭螺絲(半牙)

STEP 1 Attaching spur gear
安裝大齒盤

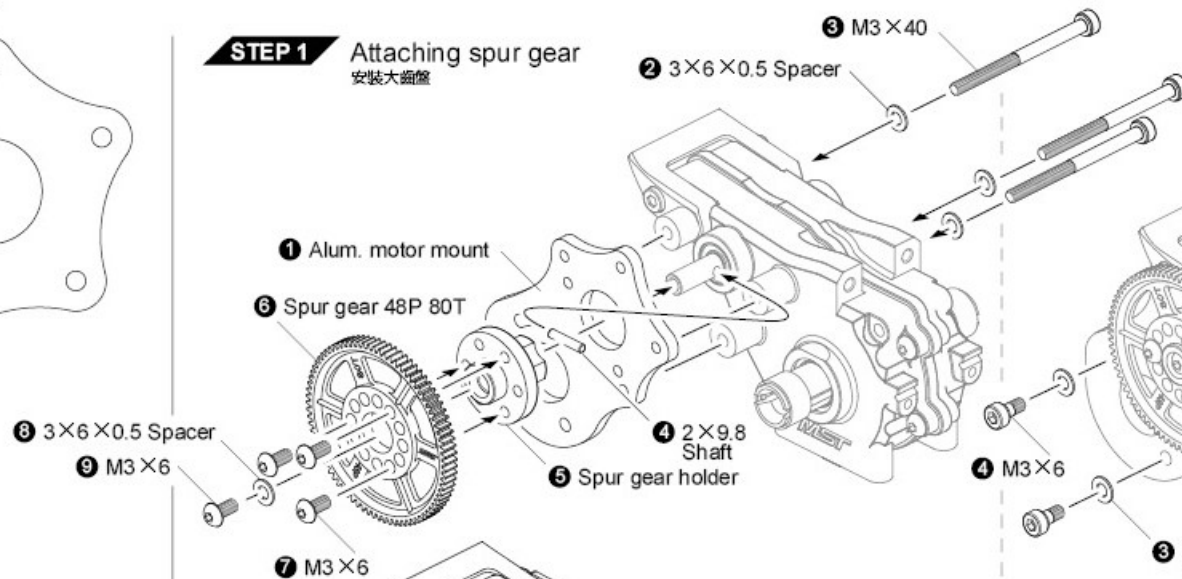


STEP 2 Attaching motor
安裝馬達

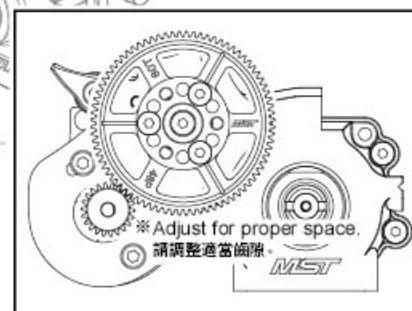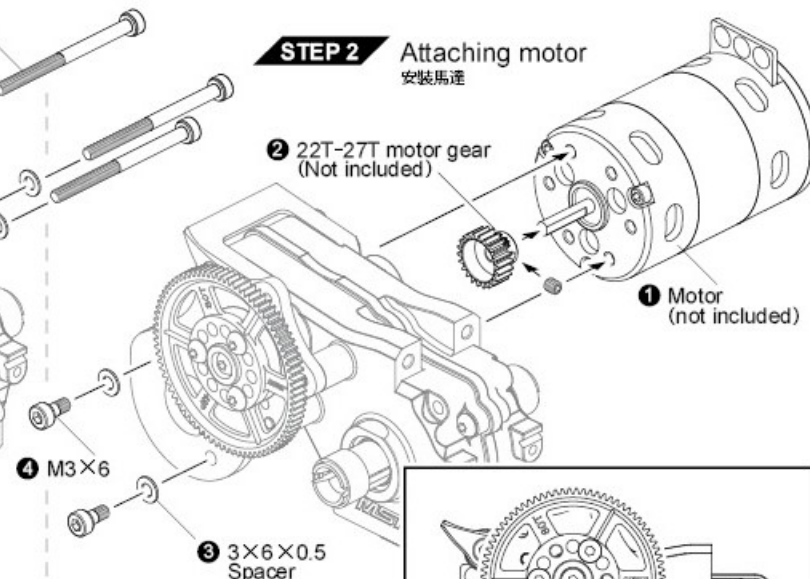

*Centered upper motor
高重心

STEP 3

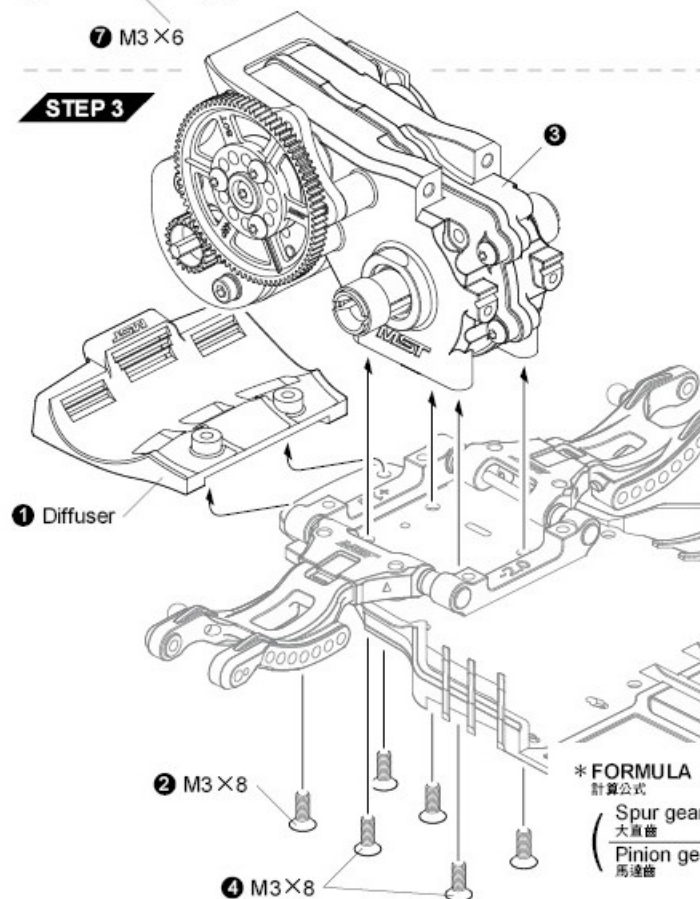


* FORMULA
計算公式

$$\left(\frac{\text{Spur gear teeth}}{\text{Pinion gear teeth}} \times \frac{\text{Diff. ring gear}}{\text{Diff. pinion gear}} \right) = \text{Gear ratio}$$

GEAR RATIO (For 80T Spur Gear)

	34T/18T <1.89> 210069	36T/17T <2.12> 210034	40T/16T <2.5> 210025	40T/13T <3.08> 210035 Original setting	42T/11T <3.82> 210036
22T	6.87	7.7	9.09	11.19	13.88
23T	6.57	7.37	8.7	10.70	13.28
24T	6.3	7.06	8.33	10.26	12.73
25T	6.04	6.78	8	9.85	12.22
26T	5.81	6.52	7.69	9.47	11.75
27T	5.6	6.27	7.41	9.12	11.31
Apply to 310102 bevel gear shaft. 適用於310102傘齒輪使用					

STEP 1 Attaching front damper stay
安裝前避震架

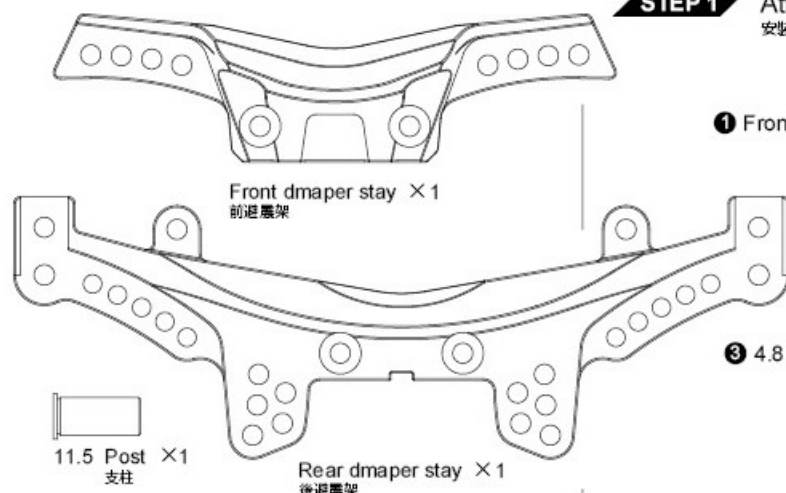

11.5 Post × 1
支柱



4.8 Adjuster M × 6
拉桿頭



4.8 Adjuster S × 2
拉桿頭



M3×32 steel turnbuckle × 2
鋼製可調拉桿



M3×20 steel turnbuckle × 2
鋼製可調拉桿



M3×20 screw × 2
圓頭螺絲



M3×10 screw × 6
圓頭螺絲



M3×8 screw × 2
圓頭螺絲



M3×8 screw × 2
沉頭螺絲



4.8 Ball connector L × 4
外六角球頭(長)



4.8 Ball connector × 4
外六角球頭



3×6×0.5 Spacer × 2
墊片


1 Front damper stay

2 M3×8

3 4.8 Ball connector

4 M3×10

STEP 2 Attaching rear damper stay
安裝後避震架

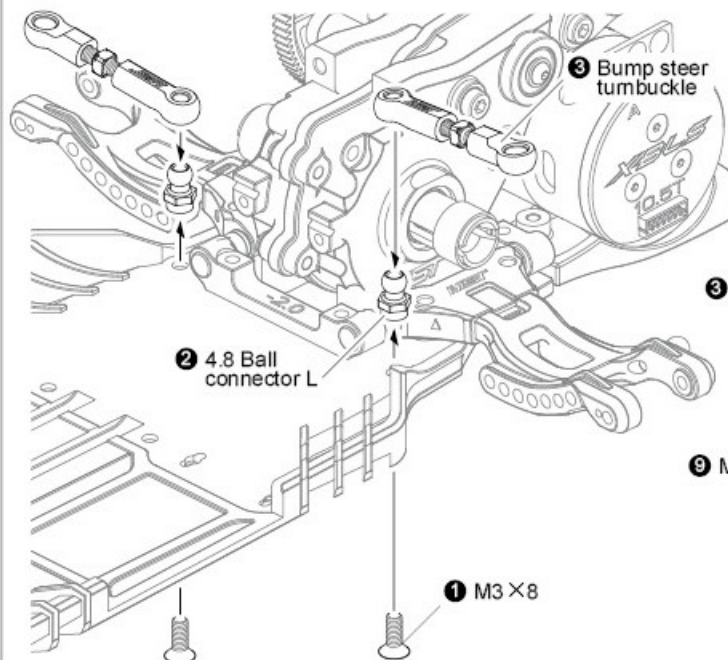

1 Rear damper stay

2 3×6×0.5
Spacer

3 M3×20

6 M3×10

9 M3×10

5 4.8 Ball connector L

4 Post 11.5

8 Rear upper
turnbuckle

7 4.8 Ball
connector

Rear upper turnbuckle assembly
後上拉桿組裝

1 4.8 Adjuster M

2 M3×32 steel
turnbuckle

3

23.30 mm

L

R

Bump steer turnbuckle assembly
轉向變化拉桿組裝





2 M3×20 steel
turnbuckle


3 4.8 Adjuster S

9 mm

1 4.8 Adjuster M

X2
Make 2

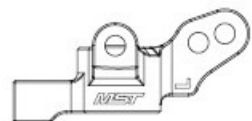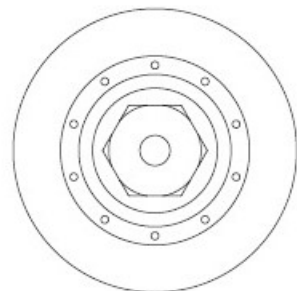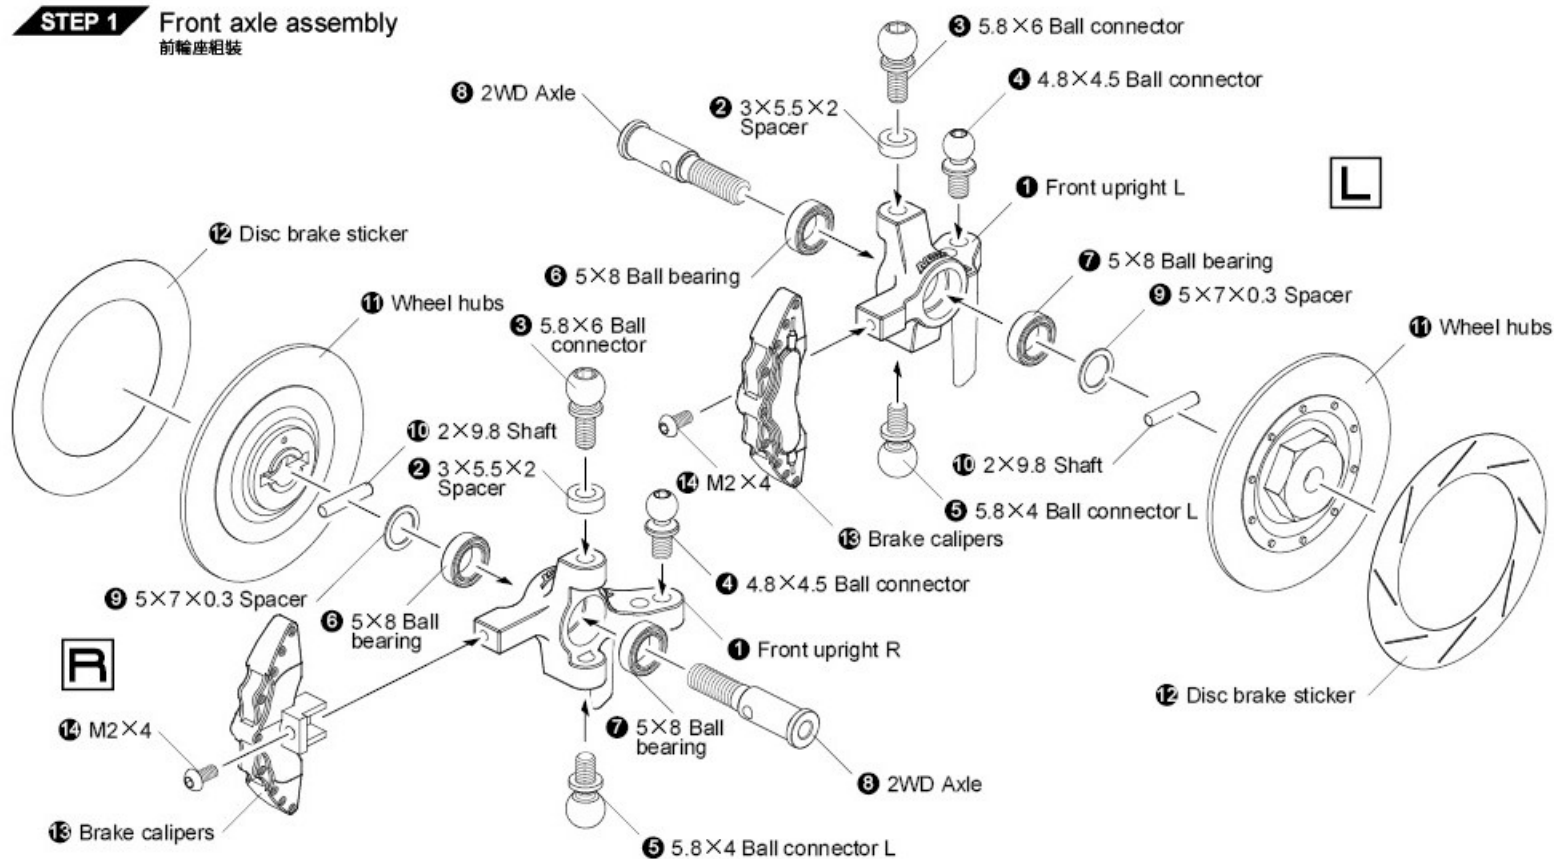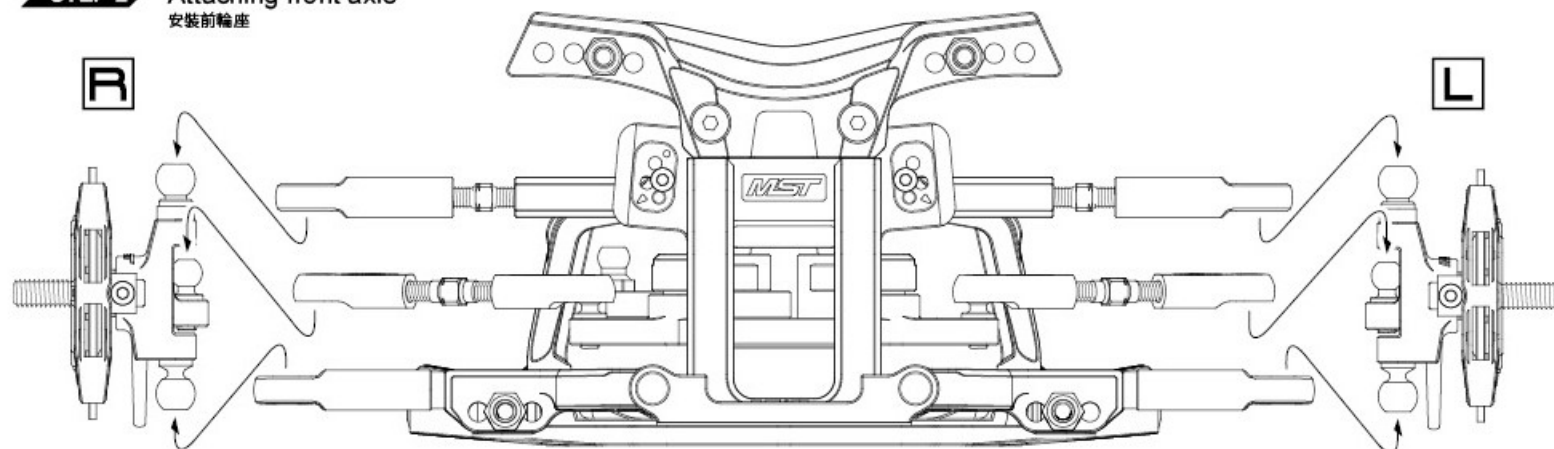Front upright R × 1
前輪座 RFront upright L × 1
前輪座 LBrake calipers × 2
制車卡鉗Wheel hubs (large)
(brake disc shaped) × 2
六角輪座(大)(制車碟型)2WD Axle × 2
二驅輪軸5.8×6 Ball connector × 2
球頭螺絲5.8×4 Ball connector L × 2
球頭螺絲(長)4.8×4.5 Ball connector × 2
球頭螺絲M2×4 screw × 2
圓頭螺絲2×9.8 Shaft × 2
插銷5×8 Ball bearing × 4
培林5×7×0.3 Spacer × 2
墊片3×5.5×2 Spacer × 2
墊片STEP 1 Front axle assembly
前輪座組裝STEP 2 Attaching front axle
安裝前輪座

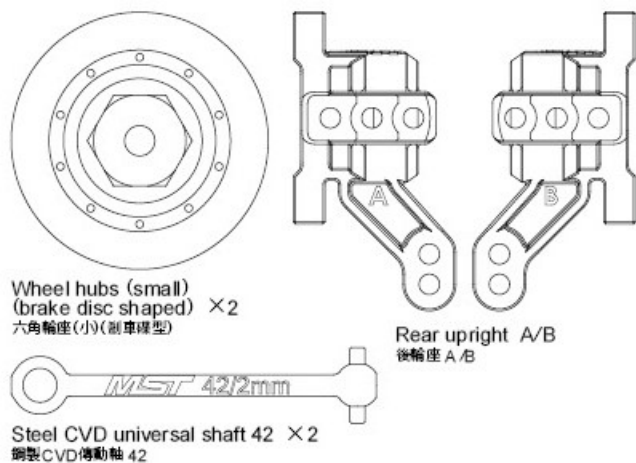

Wheel hubs (small)
(brake disc shaped) ×2
六角輪座(小)(剎車碟型)

Rear upright A/B
後輪座 A/B

 
Steel CVD universal shaft 42 X2
鋼製CVD傳動軸 42



Wheel axle ×2
萬向接杯



Brake calipers ×2
剎車卡鉗



Rear upright mount ×2
輪座固定座



6×8×1 spacer ×2
垫片



 
Upright mount cover ×2
 ④ 定座下蓋




5×10 Ball bearing ×4
培林



6×10 Ball bearing ×4
培林



 4.8×4.5 Ball connector S ×2
球頭螺絲(鉚)




4.8×4.5 Ball connector ×2
球頭螺絲




M2.5×12 screw ×2
沉頭螺絲

STEP 1 Rear axle assembly 後輪座組裝

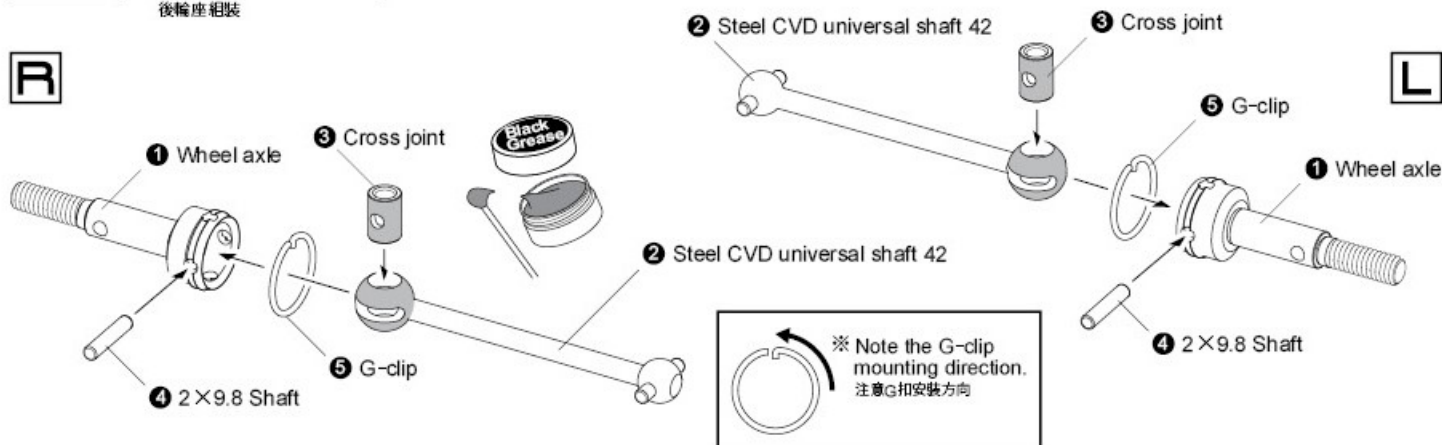

※ Note the G-clip mounting direction.
注意G扣安裝方向

STEP 2

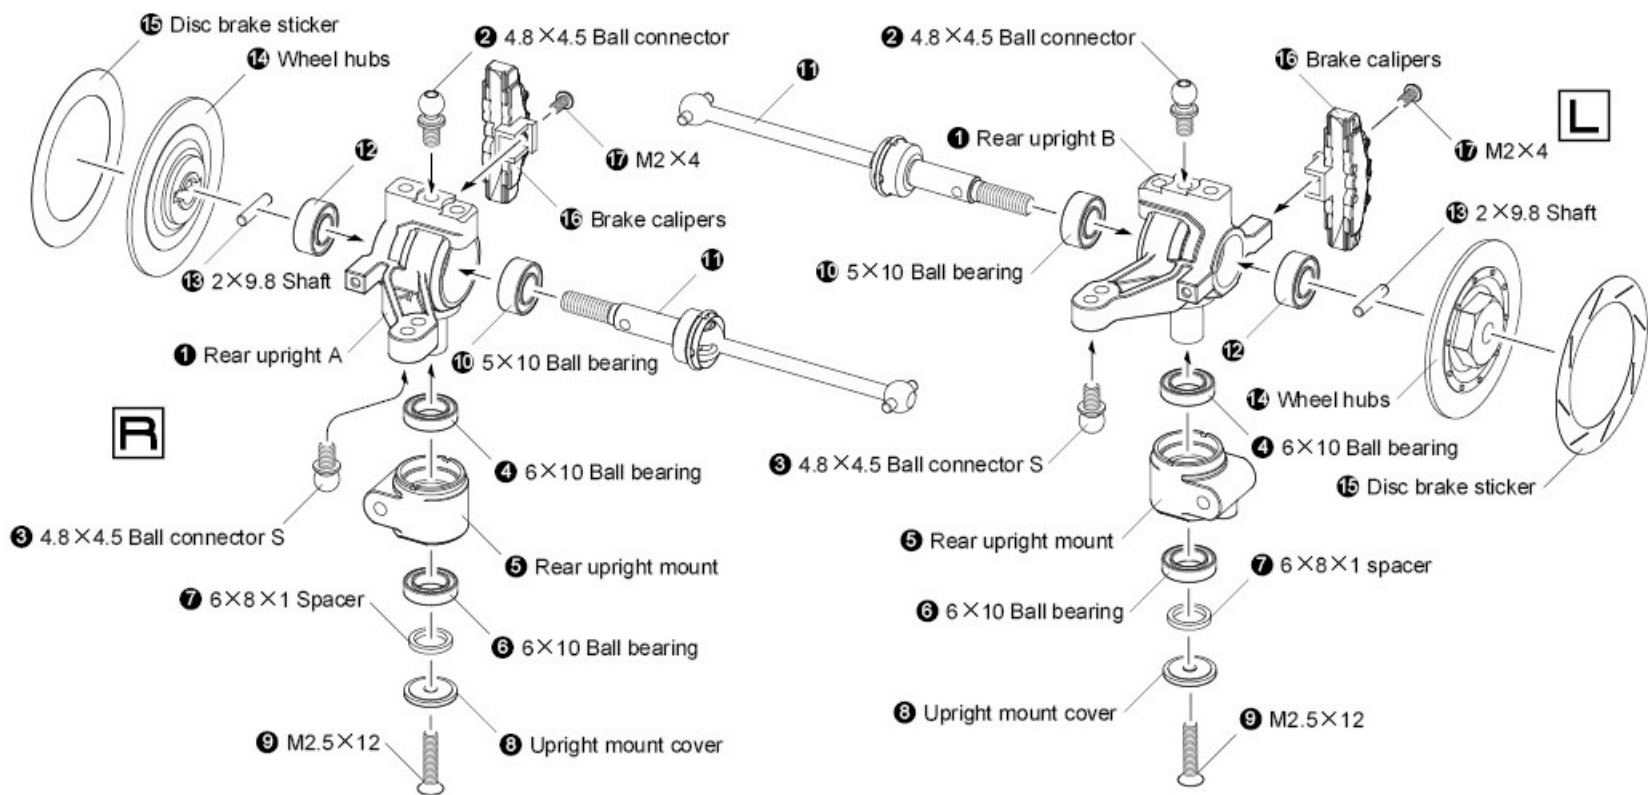


STEP 3 Attaching rear axle 安裝後輪座

2.6×25 Shaft ×2
插銷

M2×3 screw ×4
圓頭螺絲


※ Please refer to the addendum of MB rear suspension instructions.
MB後懸吊請閱附件說明。

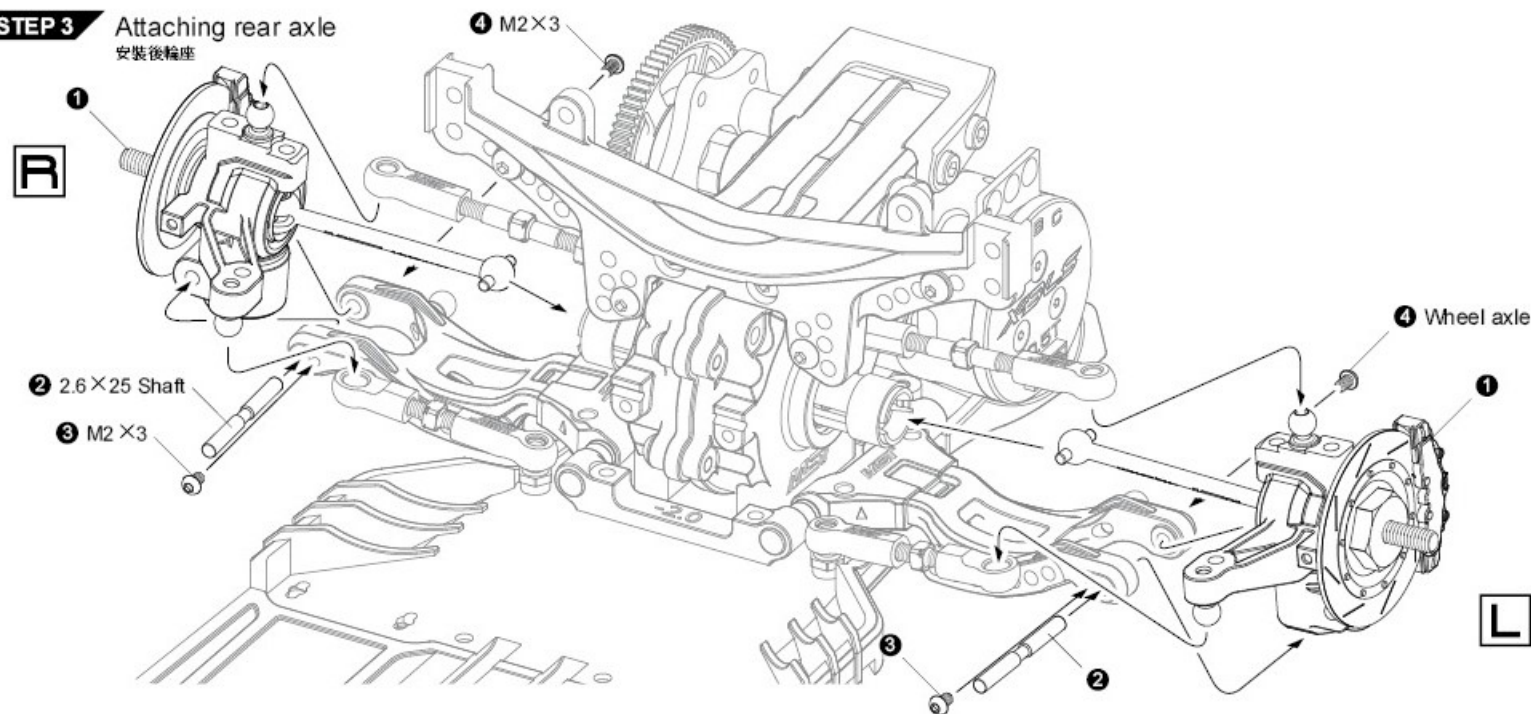


PARTS BAG

7

BATTERY MOUNT 電池座

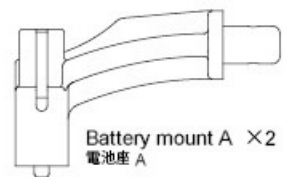


Battery mount A ×2
電池座 A

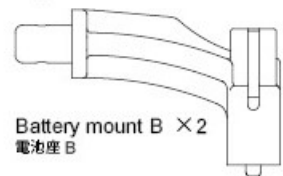

Battery mount B ×2
電池座 B




R-clip 5.0 ×4
R鉤 5.0

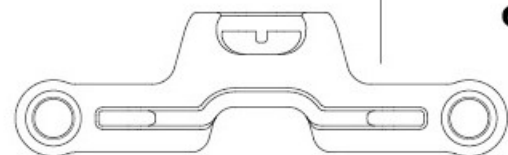

Battery mount C ×2
電池座 C


Short battery mount 短電池座

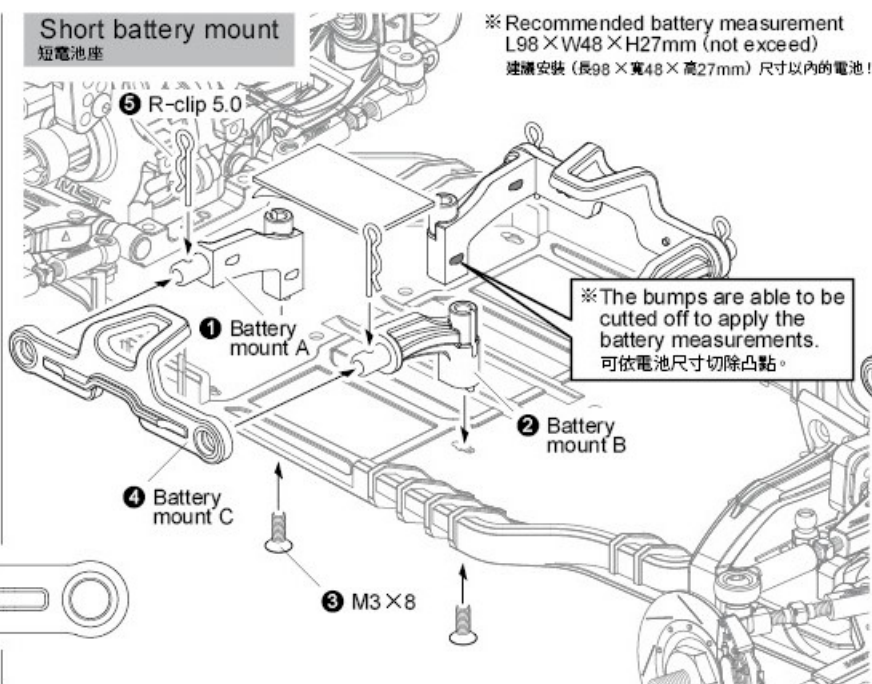

※ Recommended battery measurement
L98×W48×H27mm (not exceed)
建議安裝(長98×寬48×高27mm)尺寸以內的電池!


※ The bumps are able to be cutted off to apply the battery measurements.
可依電池尺寸切除凸點。

Long battery mount 長電池座

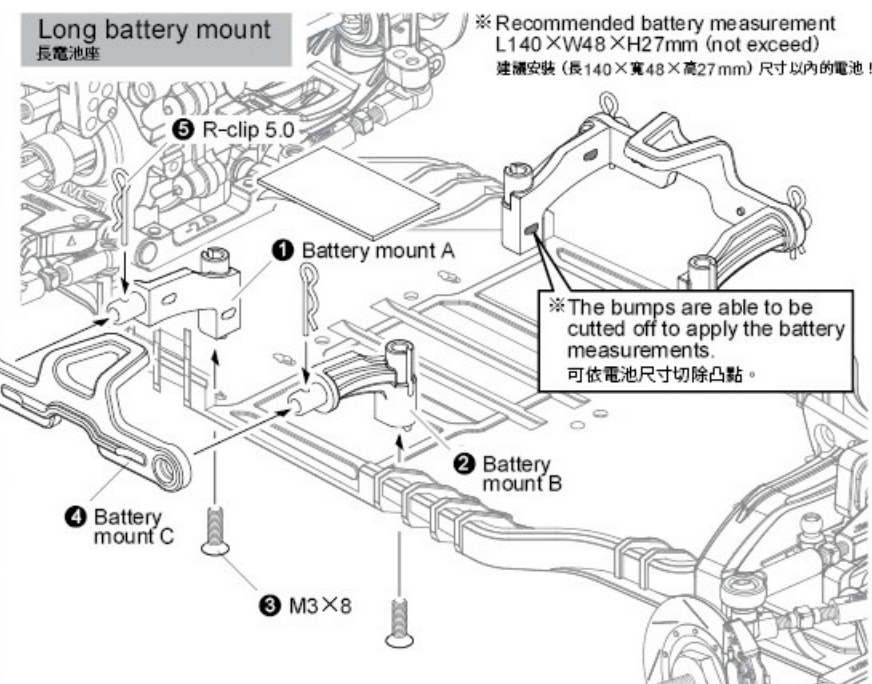


※ Recommended battery measurement
L140×W48×H27mm (not exceed)
建議安裝(長140×寬48×高27mm)尺寸以內的電池!

※ The bumps are able to be cutted off to apply the battery measurements.
可依電池尺寸切除凸點。

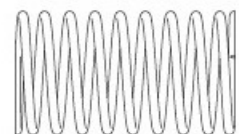


Hard coil spring 31mm ×2
(gold)

硬避震彈簧 31mm (金)

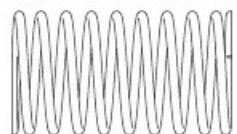

Soft coil spring 31mm ×2
(purple-yellow)

 
軟避震彈簧 31mm (紫黃)



Damper cylinder ×4
避震筒身



Piston rod ×4
避震軸心

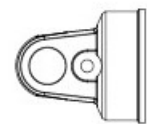

Cylinder cap ×4
避震器上蓋



Rod guide cap ×4
避震器下蓋



Damper retainer ×4
避震器彈簧座



Oil seal ×4
避震器氣室



Rod guide ×4
避震器下蓋墊片



Spring retainer (black) ×4
避震器調整環 (黑)



 
Piston ×4
避震活塞



Damper adjuster ×4
避震器拉桿




10.8×0.9 O-ring ×4
O環



11.5×1.5 O-ring ×4
O環



 Damper O-ring P3 ×4
避震器O環





E-clip ×8
E形扣




M3×4 screw ×4
沉頭螺絲


STEP 1 Damper assembly
避震器組裝

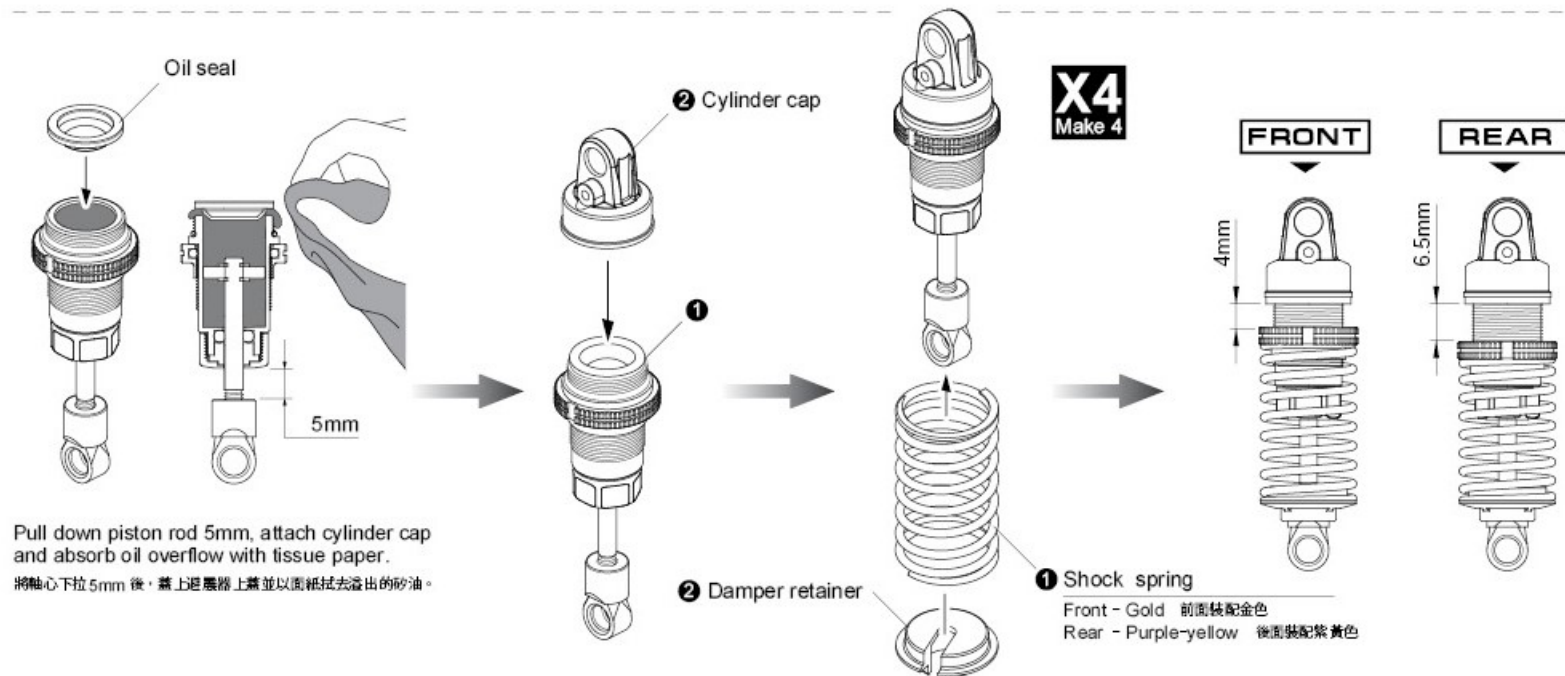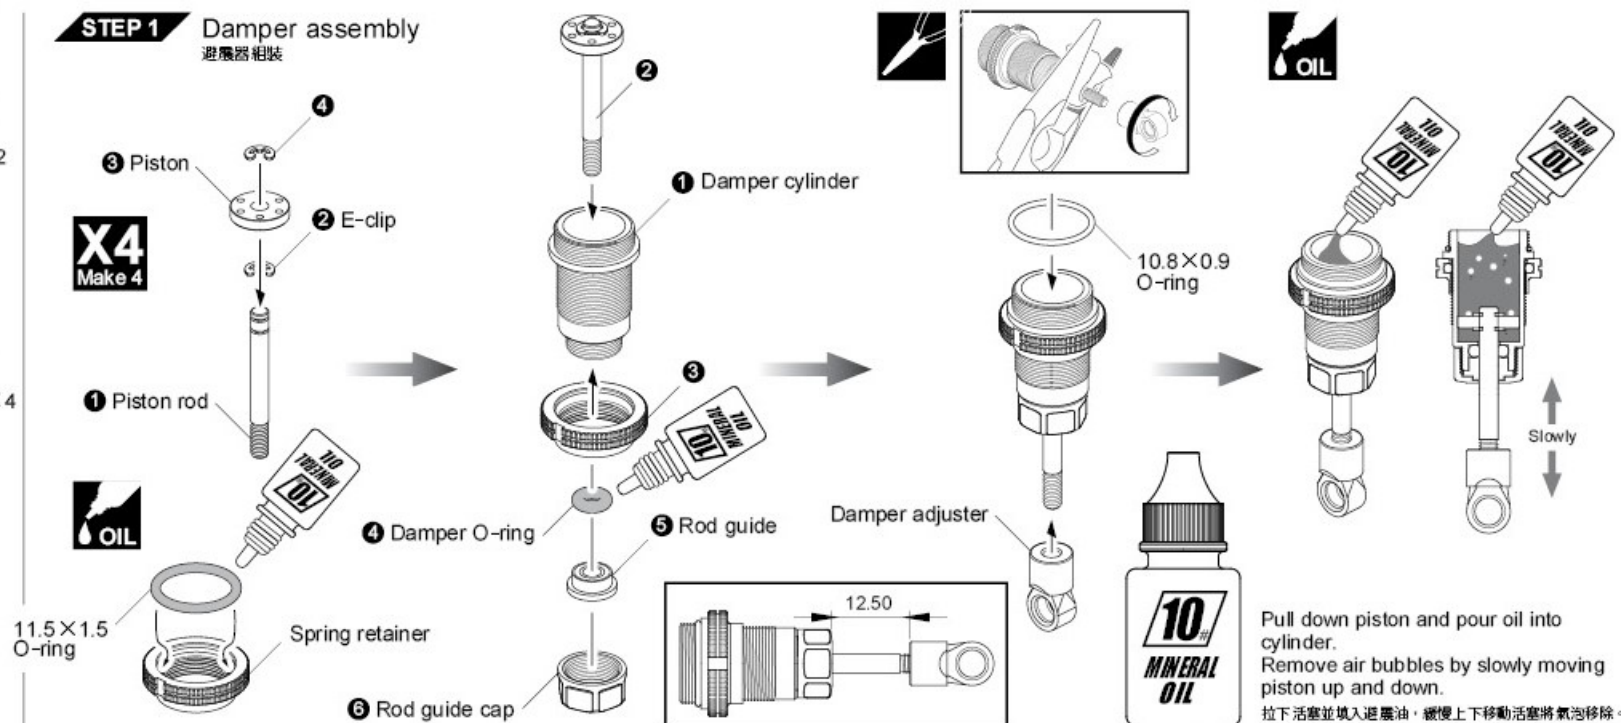

STEP 2 Attaching front damper
安裝前避震器

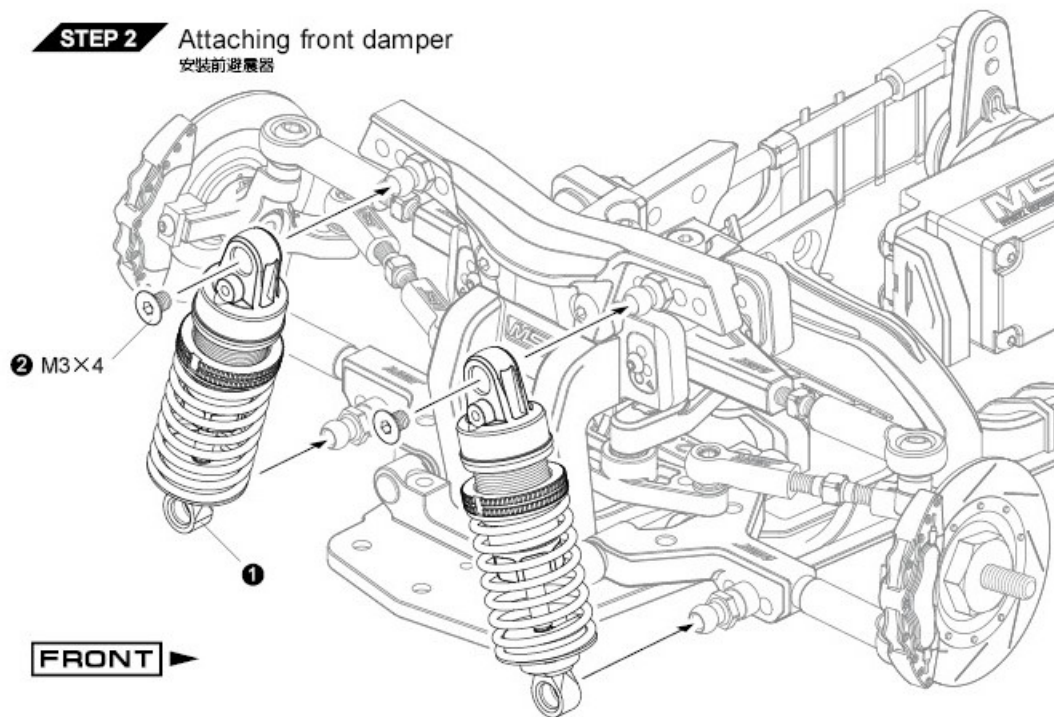


STEP 3 Attaching rear damper
安裝後避震器

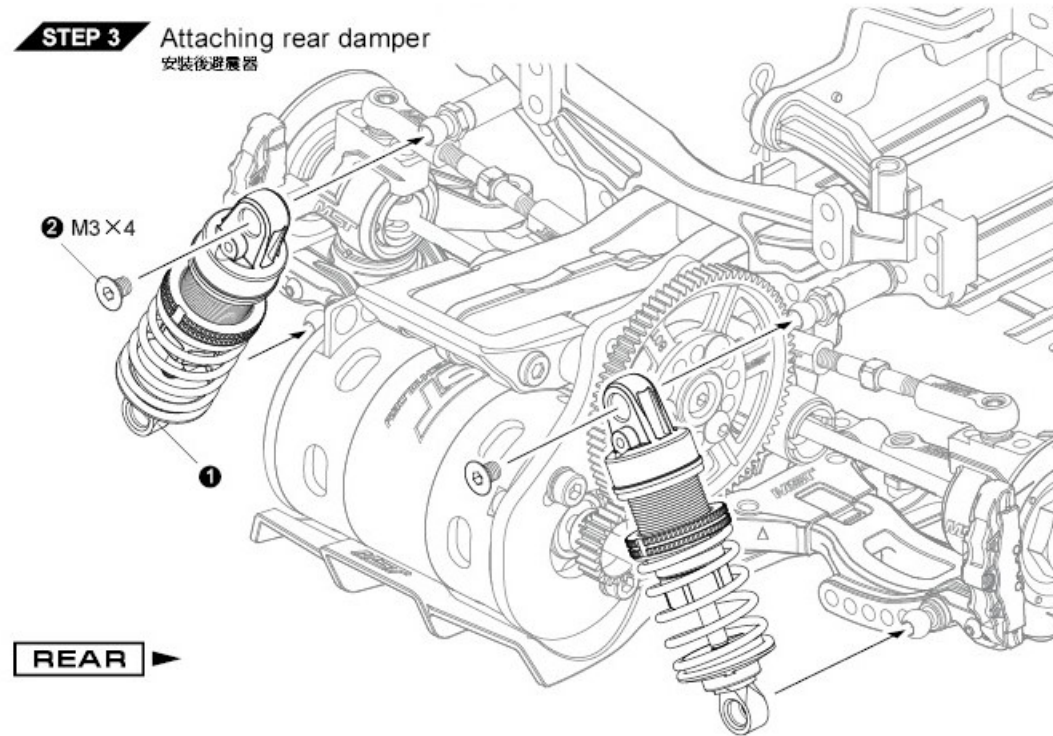


PARTS BAG

9

 
UPPER DECK, ESC, RECEIVER
二樓板, 電子變速器, 接收器



Upper deck A ×1
二樓板 A

 


Upper deck B ×1
二樓板 B

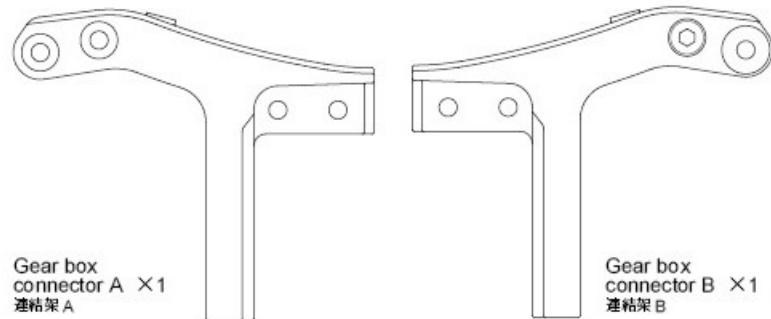


Gear box connector A ×1
連結架 A

 Gear box connector B ×1
連結架 B




Strengthen post ×2
補強柱

 

Gyro mount ×1
陀螺儀座


STEP 1 Attaching ESC, Receiver
安裝電變, 接收器

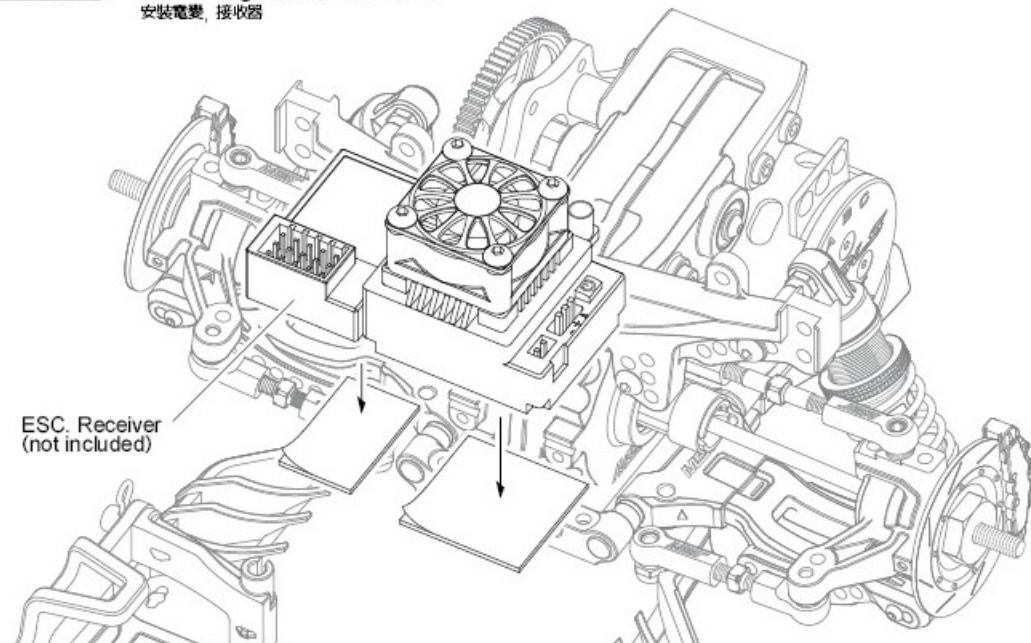

STEP 1

Attaching upper deck

安裝二樓板

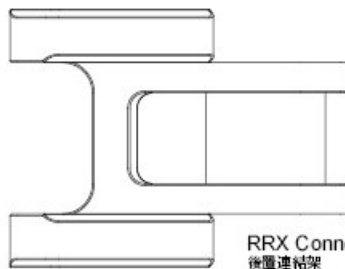

RRX Connector X1
後置連結架

※LSD 3.0 RS Gyro
LSD 3.0 RS 陀螺儀
841012 (Not included)

22 3×6×0.5
Spacer

30

15

RRX 2.0S 20



※ NOT including.
Please refer to MST website for the
wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]



FRONT




Flange nut M4 × 4
凸緣螺帽 M4
(Tools bag)




Wheel hub spacer 1.0 × 2
輪座墊片 1.0
(Tools bag)

STEP 1 Attaching wheels
安裝輪胎









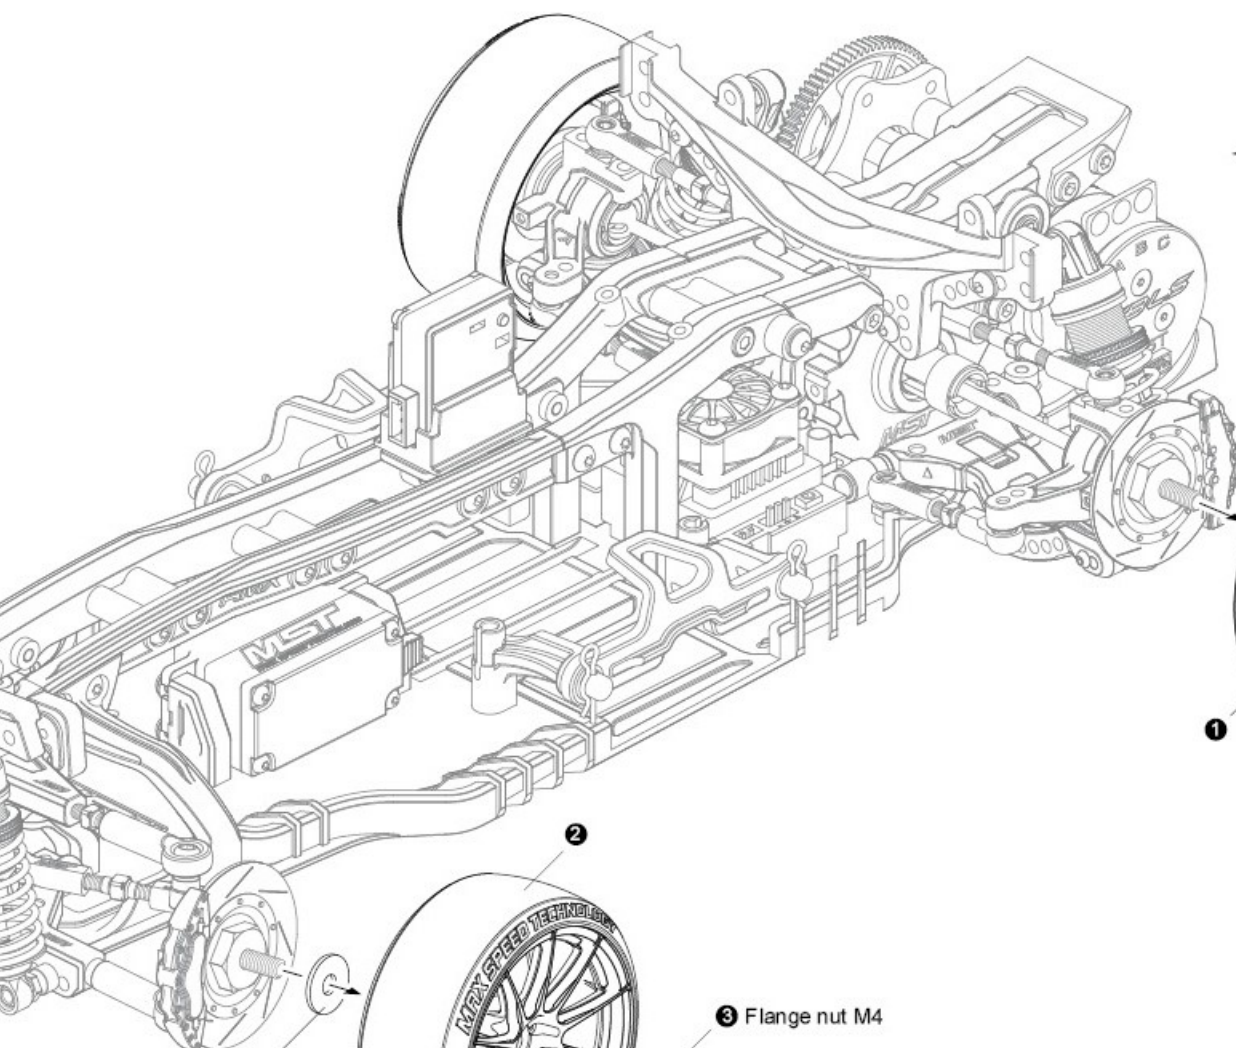


REAR

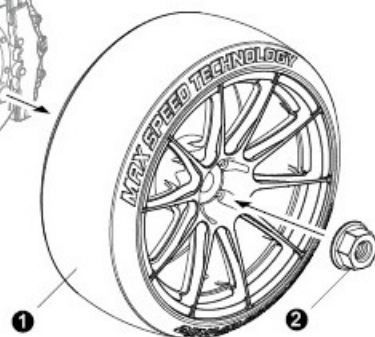



① Wheel hub spacer 1.0

      ③ Flange nut M4

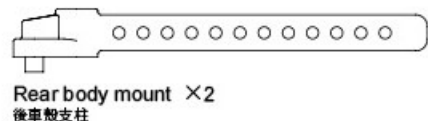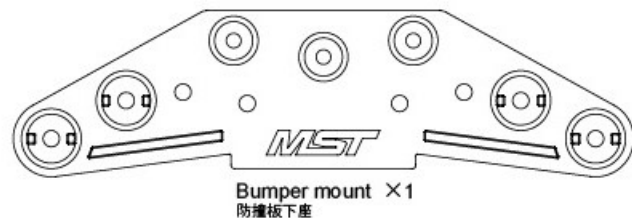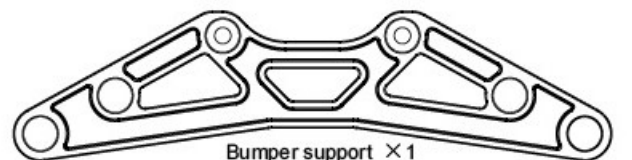

STEP 1 Attaching body mounts






安裝車殼固定座

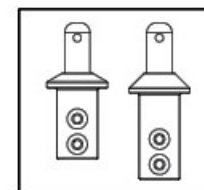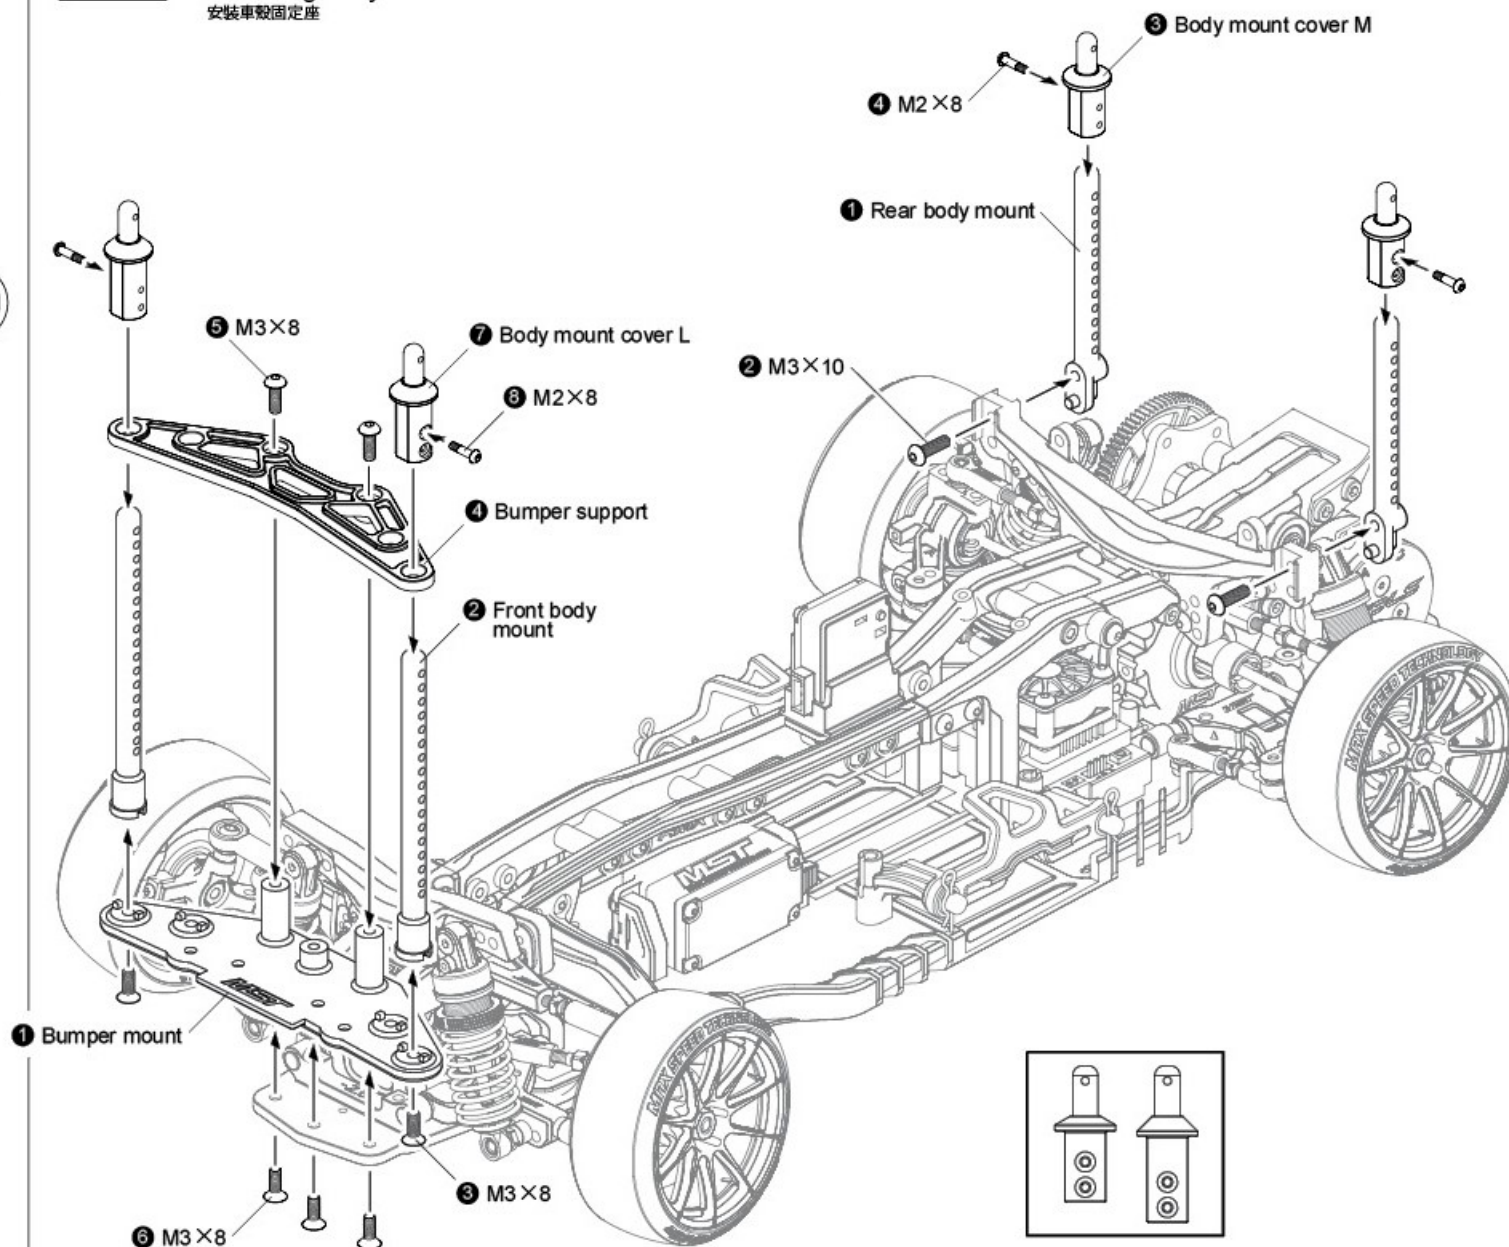



Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

PARTS


	M2X3 Screw X4 110082		E-clip 2.5 X2 E形扣 110079		4.8X4.5 Ball connector (S) X2 球頭螺絲(短) 210433		Steel ball 3.0 X12 鋼球 3.0 110020		Diff. spring X1 差速彈簧 310032
	M2X4 Screw X8 110004		E-clip 3.0 X1 E形扣 110070		4.8X4.5 Ball connector X7 球頭螺絲 310001		1.5X7.8 Shaft X2 插銷 110059		Cross joint X2 連接軸 820030
	M2X8 Screw X2 110063		2.6X5.8X0.6 Spacer X2 墊片 110080		5.8X4 Ball connector (L) X2 球頭螺絲(長) 210491		2X9.8 Shaft X7 插銷 110017		
	M2X8 Screw X4 110045		3X6X0.5 Spacer X18 墊片 110047		5.8X6 Ball connector X2 球頭螺絲 210180		2X28 Shaft X2 插銷 310103		
	M2.5X5 Screw X1 110102		5X7X0.3 Spacer X2 墊片 820020		4.8X6 Ball connector X2 內六角球頭 310050		2.5X46 Arm shaft X4 擺臂插銷 310048		
	M2.5X12 Screw X4 110085		10X12X0.3 Spacer X1 墊片 820024		M3X6 Screw X2 有頭螺絲(半牙) 110011		2.6X25 Shaft X2 插銷 310035		
	M3X6 Screw X4 110001		2.5X6 Thrust bearing X1 止推培林 120008		M3X14 Screw X1 有頭螺絲 110108		2WD Axle X2 二驅輪軸 820095		
	M3X8 Screw X28 110002		3X6X2.5 Bearing X4 軸承 120024		M3X30 Screw X3 有頭螺絲(半牙) 110100		Wheel axle X2 萬向接杆 310065		
	M3X10 Screw X11 110026		5X8X2.5 Bearing X2 軸承 120017		M2.5X30 Screw X1 有頭螺絲(半牙) 110053		Bevel gear shaft X1 傘齒軸 310104		
	M3X14 Screw X6 110061		5X8 Ball bearing X8 培林 120003		M3X35 Screw X2 有頭螺絲(半牙) 110095		R-clip 5.0 X9 R射 5.0 820075BK		
	M3X20 Screw X3 110088		4X10 Ball bearing X1 培林 120018		M3X40 Screw X3 有頭螺絲(半牙) 110091		Flange nut M4 X4 凸緣螺帽 110015		
	M2.5X12 Screw X2 110109		5X10 Ball bearing X5 培林 120002		Suspension mount spacer 0.5mm X2 擺臂座墊片 0.5mm 820063		Diff. plate X2 差速壓板 310033		
	M3X8 Screw X27 110005		6X10 Ball bearing X4 培林 120025		M3X20 Steel turnbuckle X4 鋼製可調拉桿 810002		G-clip 10.0 X2 G扣 110055		
	M3X10 Screw X10 110052		8X12 Ball bearing X2 培林 120019		M3X25 Steel turnbuckle X2 鋼製可調拉桿 810003		Steel CVD universal shaft 42 X2 鋼製CVD傳動軸 42 820004		
	M3X12 Screw X2 110043		10X15 Ball bearing X2 培林 120001		M3X32 Steel turnbuckle X2 鋼製可調拉桿 810005		Main shaft X1 主齒軸 310105		
	M3X16 Screw X1 110073		Wheel hub spacer 1.0 X2 輪座墊片 1.0 820049				M3X68 Alum. turnbuckle (black) X1 鋁製可調拉桿(黑) 210218BK		
	4.8 Ball connector X5 外六角球頭 210161								
	4.8 Ball connector L X6 外六角球頭(長) 210344								

  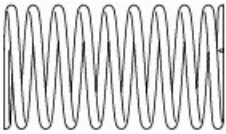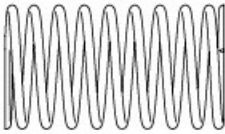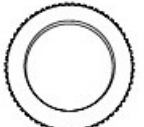	Hard coil spring 31mm X2 (gold) 硬避震彈簧 31mm (金) 820103-3		Soft coil spring 31mm X2 (purple-yellow) 軟避震彈簧 31mm (紫黃) 820104-4
	Damper cylinder X4 避震筒身 210071		Piston rod X4 避震軸心 310008
	Cylinder cap X4 避震器上蓋 210057		Piston X4 避震活塞 210082BK
	Rod guide X4 避震器下蓋 210057		Rod guide X4 避震器下蓋墊片 210082BK
	Oil seal X4 避震器油室 130004		11.5X1.5 O-ring X4 O環 130002
	Damper adjuster X4 避震器拉桿 820079		10.8X0.9 O-ring X4 O環 130032
	Damper O-ring P3 X4 避震器O環 130028		Spring retainer (black) X4 避震器調整環(黑) 310048BK
			E-clip X10 E形扣 110013
			M3X4 screw X4 沉頭螺絲 110099


PARTS

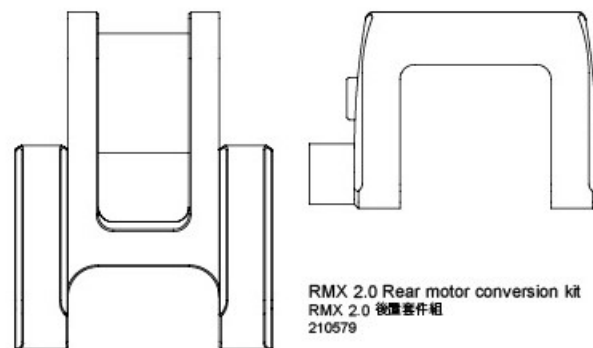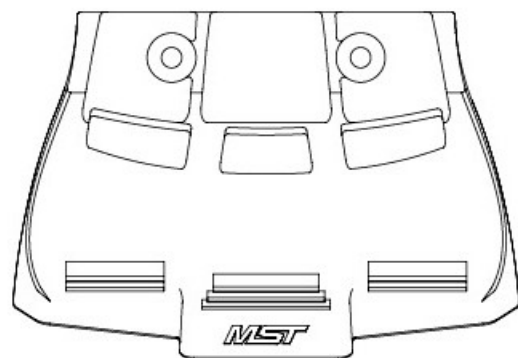


RMX 2.0 Rear motor conversion kit
RMX 2.0 後置套件組
210579

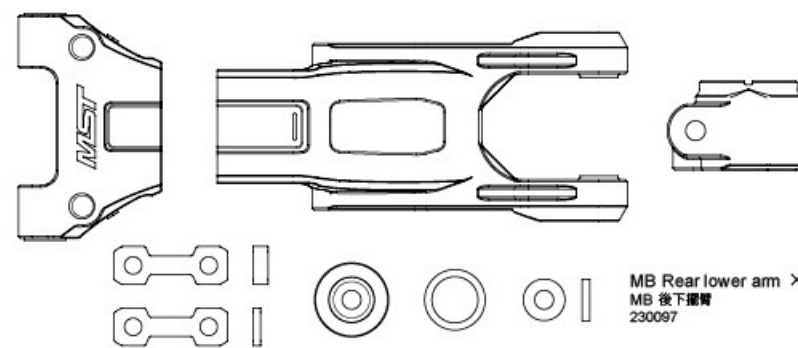


MB Rear lower arm X2
MB 後下擺臂
230097

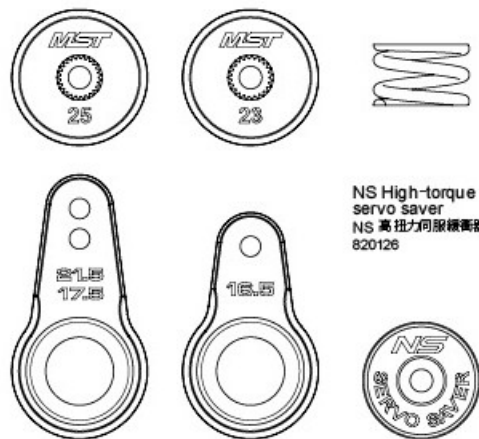


NS High-torque
servo saver
NS 高扭力伺服保護器
820126

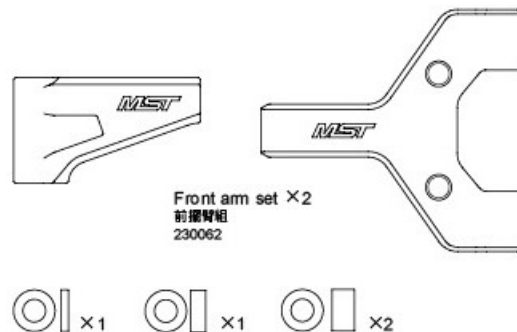


Front arm set X2
前擺臂組
230062

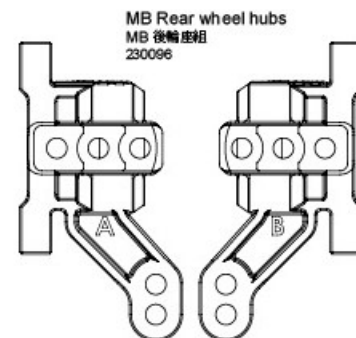


MB Rear wheel hubs
MB 後輪座組
230096

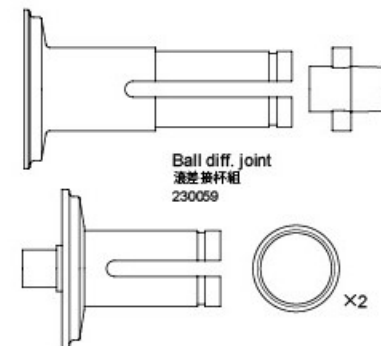


Ball diff. joint
球差接杆組
230059

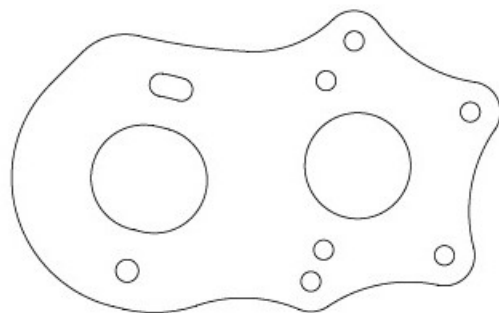


Alum. motor mount (black)
鋁合金馬達座 (黑)
310101BK

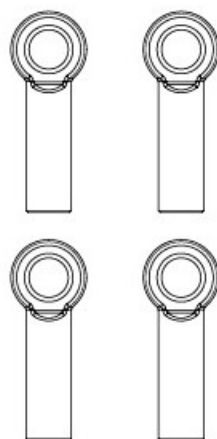

5.8x26 Reinforced adjuster set
強化拉桿頭組
210031

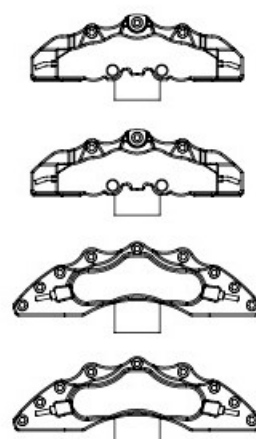


Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR


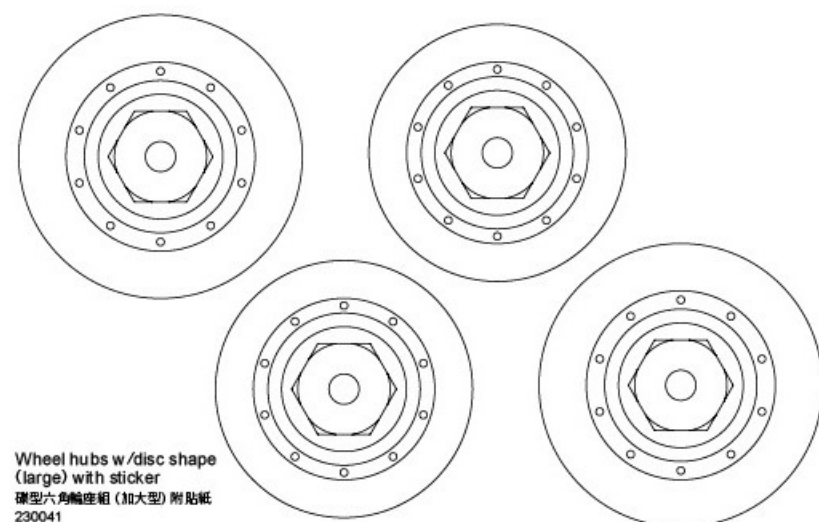


Wheel hubs w/disc shape
(large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

PARTS

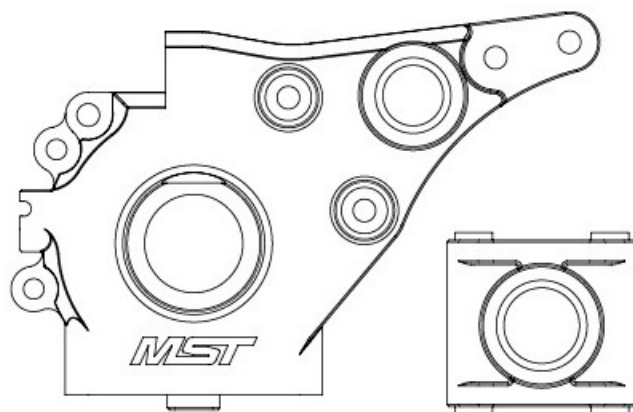


Rear gear box set
後齒箱組
230061

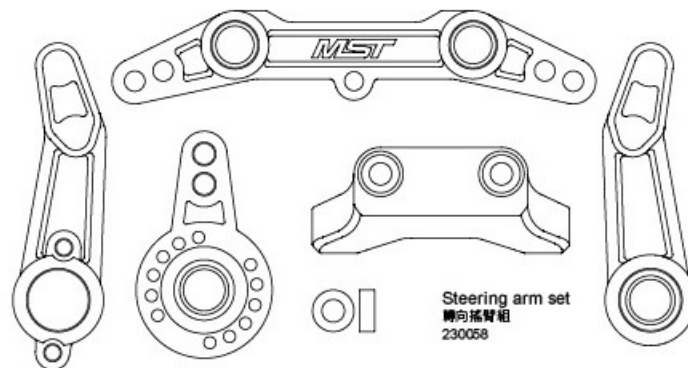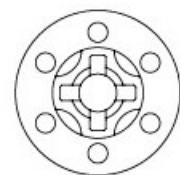


Steering arm set
轉向搖臂組
230058




Shaft bush & spacer set
襯套墊片組
230070

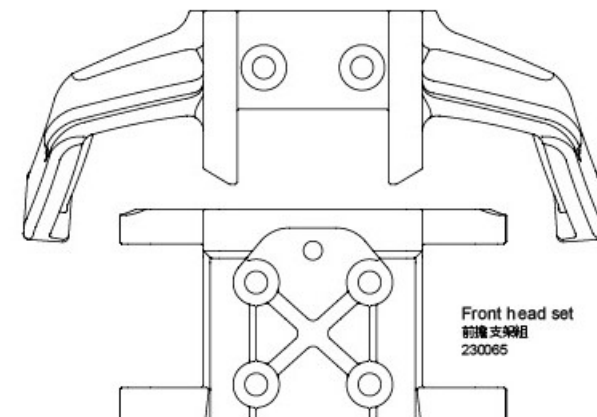


Front head set
前機支撐組
230065

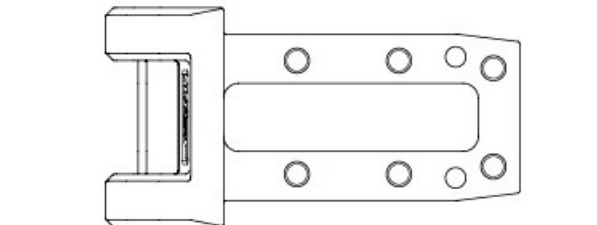


Coaxial front wheel hubs
同軸前輪座組
230093

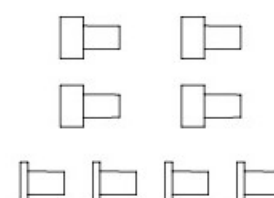

Shaft bush & spacer set (white)
襯套墊片組 (白)
210063(W)

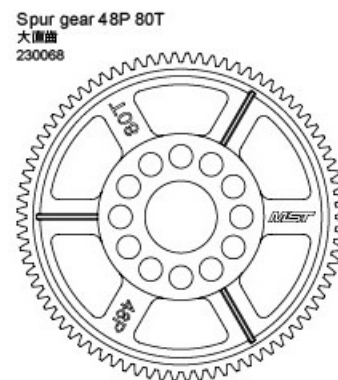


Spur gear 48P 80T
大直齒
230068

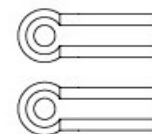

Reinforced adjuster set 4.8X18
強化拉桿頭組
210047




Bevel gear 16T ×2
傘齒 16T
310064

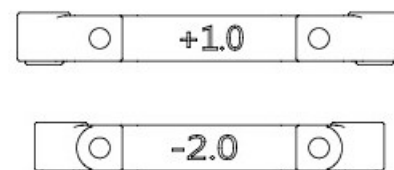


Suspension mount set (+1.0 / -2.0)
下擺臂座組 (+1.0 / -2.0)
230069



4.8 Rod ends set (M/S) ×2
4.8 拉桿頭組 (M/S)
230067



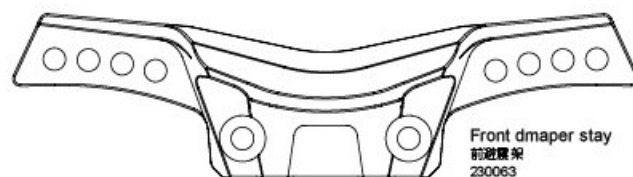


Front dmaper stay
前避震架
230063



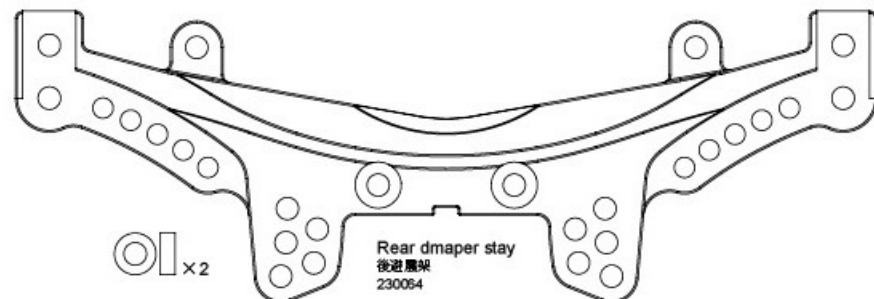


Rear dmaper stay
後避震架
230064



PARTS

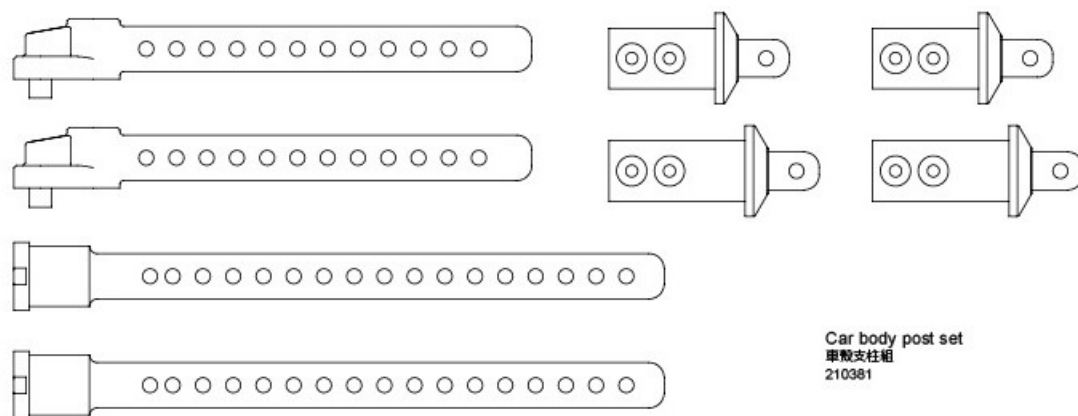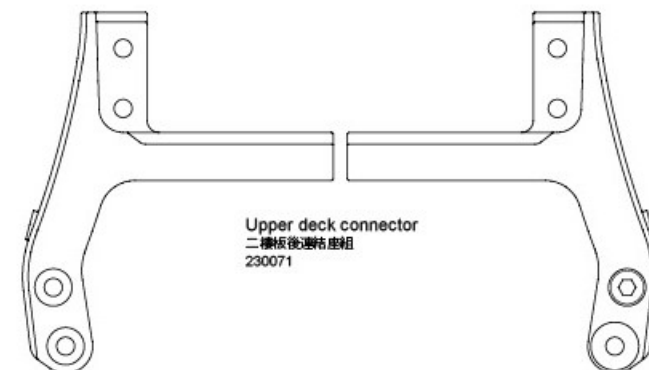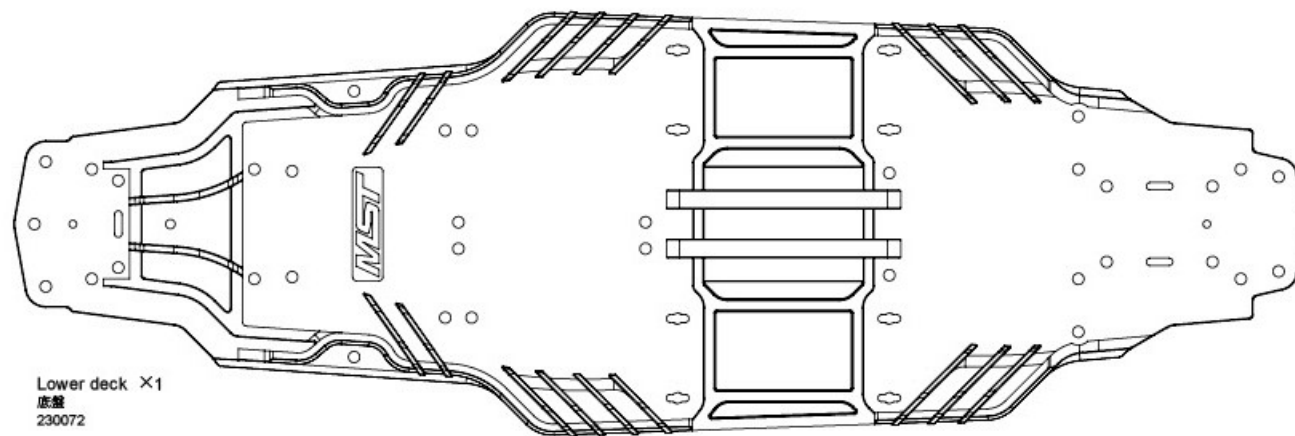














Wide balancing umpir
寬型配重防撞板
210378

 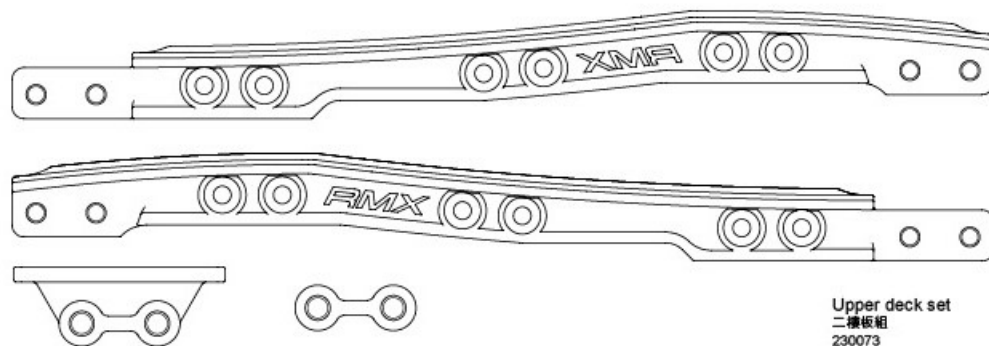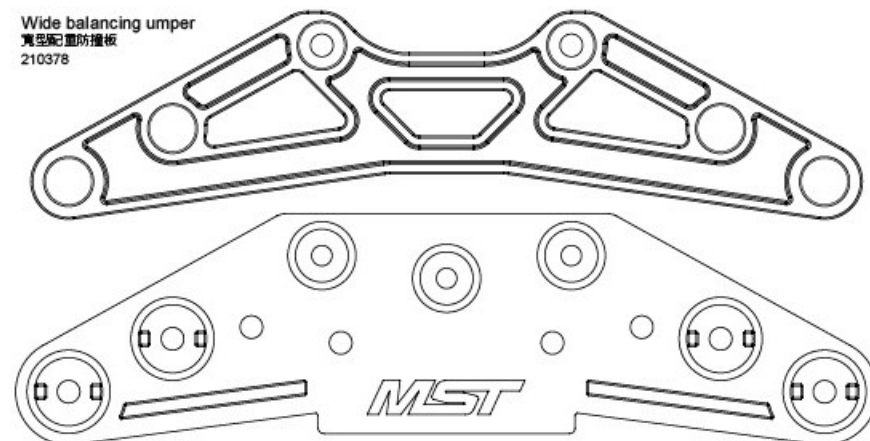

Bevel gear set 40-13
傘齒組 40-13
210035

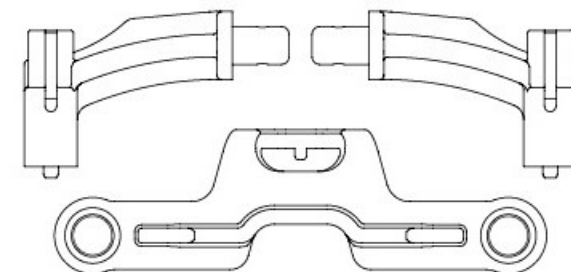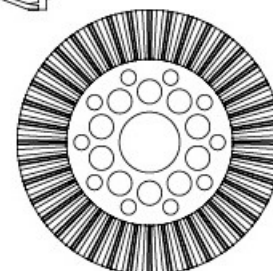

Battery holder set
電池座組
230060

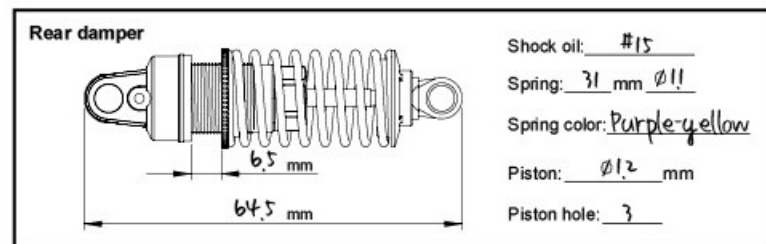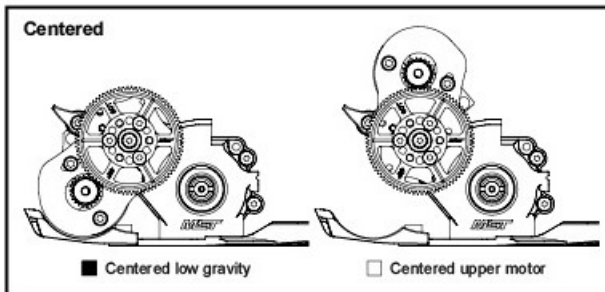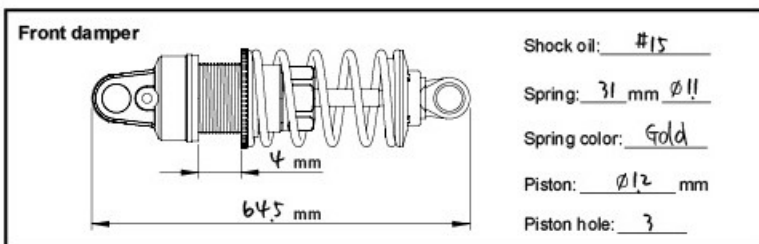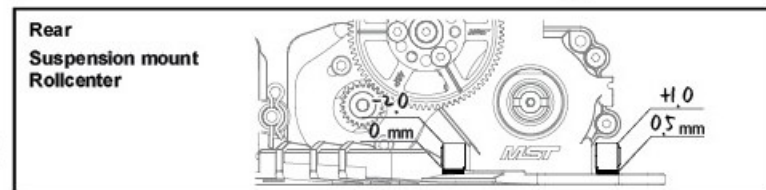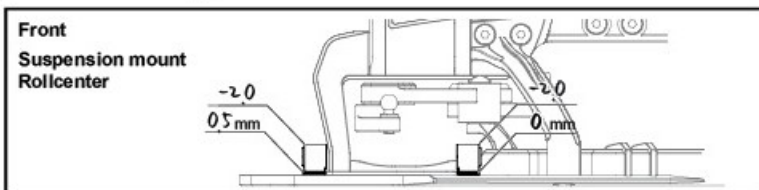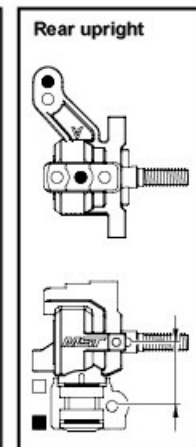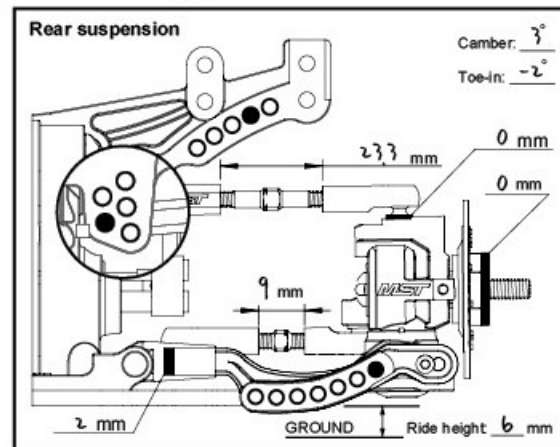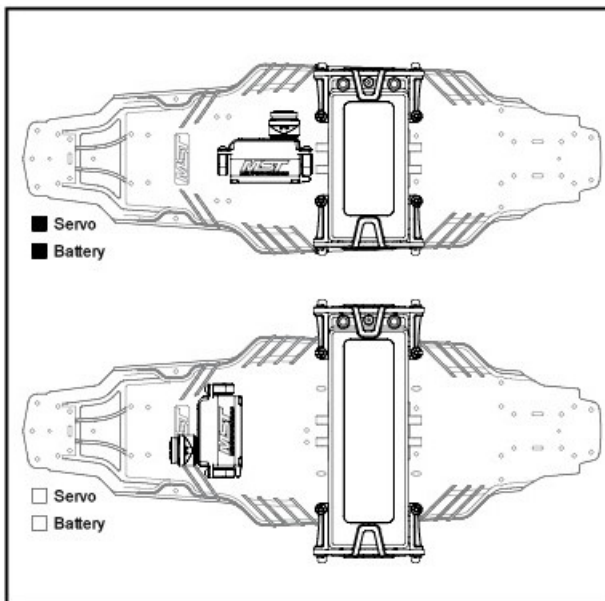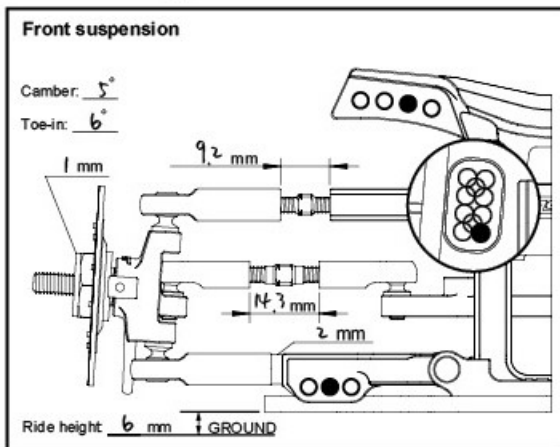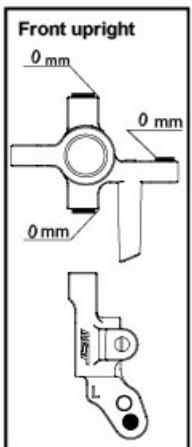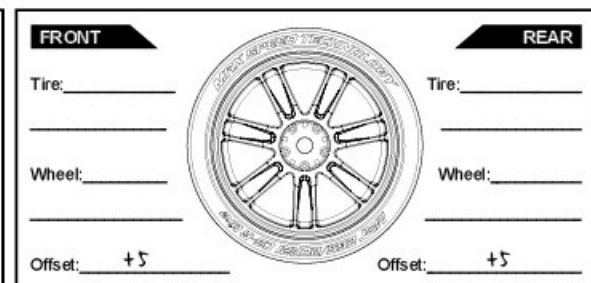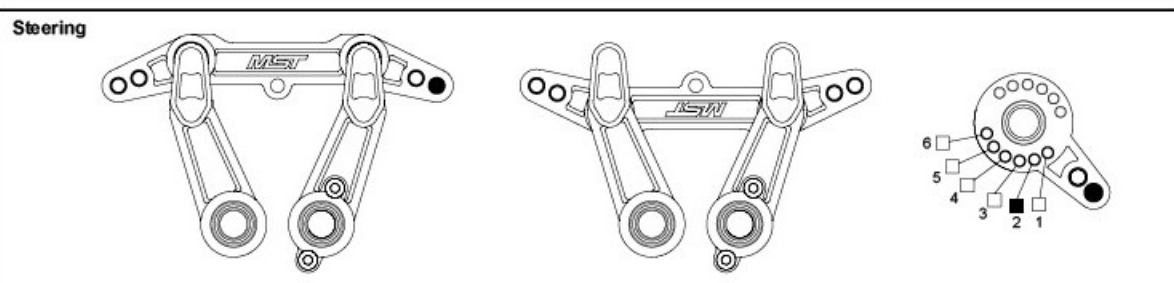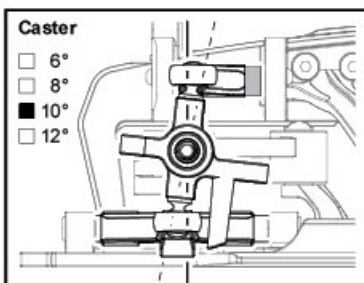

Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio

80 T ÷ _____ T × 3.08 = _____

Motor & ESC: _____ Battery: _____

Transceiver: _____ Gyro: _____ Sensitivity: _____

Rear diff



☐ Spool
☒ Ball diff.



☐ Alum spool
☐ Alum ball diff.

2nd Reduction Gear

☐ 32T / 18T - 1.78
☐ 34T / 18T - 1.89
☐ 36T / 17T - 2.12
☐ 40T / 16T - 2.50
☒ 40T / 13T - 3.08
☐ 42T / 11T - 3.82

* Please download the blank setup sheet at [www.rc-mst.com].

PARTS CODE

110001	Round head screw M3×6 (10)	110101	Countersunk screw M3×20 (6)	210161	Ball connector nut 4.8 (4)	310001	Ball connector 4.8×4.5 (5)
110002	Round head screw M3×8 (10)	110102	Round head screw M2.5×5 (6)	210218BK	Alum. turnbuckle 3×68 (black)	310004BK	Spring retainer (black) (2)
110004	Round head screw M2×4 (6)	110108	Cap screw M3×14 (6)	210344	Ball connector nut L 4.8 (4)	310008	Piston rod (4)
110005	Countersunk screw M3×8 (10)	110109	Countersunk screw M2.5×12 (6)	210378	Wide balancing bumper	310032	Diff. screw & spring set
110011	Cap screw M3×6 (6)	120001	Ball bearing 10×15 (4)	210381	Car body post set	310033	Diff. plate (2)
110013	E-clip 2.0 (10)	120002	Ball bearing 5×10 (4)	210433	Ball connector 4.8×4.5 S (5)	310035	Lower arm shaft 2.6×22 & 25 (each one pair)
110015	Flange nut M4 (4)	120003	Ball bearing 5×8 (4)	210491	Ball connector L 5.8×4 (4)	310048	Arm shaft 2.5×46 (4)
110017	Shaft 2×9.8 (10)	120008	Thrust bearing 2.5×6	210510CR	Enlarged brake calipers (red)(4)	310050	Ball connector 4.8×6 (5)
110020	Steel ball 3.0 (13)	120017	Bearing 5×8 (4)	210579	RMX 2.0 Rear motor conversion kit	310064	Bevel gear 16T (2)
110026	Round head screw M3×10 (10)	120018	Ball bearing 4×10×4 (2)	210593	Post 11.5 (2)	310065	Wheel axle (2)
110043	Countersunk screw M3×12 (10)	120019	Ball bearing 8×12 (2)	220012	Mineral oil 10#	310101BK	RMX Alum. motor mount (black)
110045	Round head screw M2×8 (partial thread) (6)	120024	Bearing 3×6×2.5 (4)	230041	Wheel hubs w/disc shape (large)	310103	Arm shaft 2×28 (2)
110047	Spacer 3×6×0.5 (8)	120025	Ball bearing 6×10×2.5 (2)	230058	Steering arm set	310104	RMX quick-release bevel gear arbor
110052	Countersunk screw M3×10 (10)	130002	O-ring 11.5×1.5 (4)	230059	Ball diff. joint	310105	RMX Main shaft
110053	Cap screw M2.5×30 (2)	130004	Oil seal (4)	230060	Battery mount	810002	Steel reinforced turnbuckle 3×20 (2)
110055	G-clip 10.0 (10)	130006	Double sided tape (5)	230061	Rear gear box set	810003	Steel reinforced turnbuckle 3×25 (2)
110059	Shaft 1.5×7.8 (8)	130008	Black grease	230062	Front arm set	810005	Steel reinforced turnbuckle 3×32 (2)
110061	Round head screw M3×14 (6)	130028	Damper O-ring P3 (blue) (10)	230063	Front damper stay	820004	Steel CVD great angle universal shaft 42 (2)
110063	Round head screw M2×8 (6)	130032	Damper cap O-ring (10)	230064	Rear damper stay	820020	Spacer 5×7×0.3 (8)
110065	Round head screw M2.5×12 (6)	130034	Sponge 20×80×1 (4)	230065	Front head set	820024	Spacer 10×12×0.3 (8)
110070	E-Clip 3.0 (10)	130036	Tools	230067	4.8 Rod ends set (M/S)	820030	Cross joint (2)
110073	Countersunk screw M3×16 (6)	130040	Ball diff. grease	230068	Spur gear 48P-80T	820049	Wheel hub spacer 1.0 (4)
110079	E-clip 2.5 (10)	210031	Reinforced adjuster set 5.8×26 (4)	230069	Suspension mount set (+1.0/-2.0)	820063	Suspension mount spacer 0.5mm (4)
110080	Spacer 2.6×5.8×0.6 (8)	210035	Bevel gear set 40-13	230070	Shaft bush & spacer set	820075	R-clip 5.0 (10)
110082	Round head screw M2×3 (6)	210047	Reinforced adjuster set 4.8×18 (8)	230071	Upper deck connector	820079	Damper plastic maintenance set (2)
110088	Round head screw M3×20 (6)	210057	Damper cap set	230072	RMX Lower deck	820095	AKM 2WD axle (2)
110091	Cap screw M3×40 (6)	210063W	Shaft bush & spacer set (white)	230073	RMX Upper deck set	820103-3	31mm Hard coil spring (soft) (2)
110095	Cap screw M3×35 (6)	210071	Damper cylinder (2)	230093	Coaxial front wheel hubs	820104-4	31mm Soft coil spring (super-soft) (2)
110099	Countersunk screw M3×4 (10)	210082	Piston spacer set (POM)	230096	MB Rear wheel hubs	820126	NS High-torque servo saver
110100	Cap screw M3×30 (6)	210160	Ball connector 5.8×6 (4)	230097	MB Rear lower arm		

部品編號

110001	六角半圓頭螺絲 M3×6 (10)	110101	六角沉頭螺絲 M3×20 (6)	210161	球頭螺絲帽 4.8 (4)	310001	內六角公球頭 4.8×4.5 (5)
110002	六角半圓頭螺絲 M3×8 (10)	110102	六角半圓頭螺絲 M2.5×5 (6)	210218BK	鋁製可調拉桿 3×68 (黑)	310004BK	避震調整環 (黑) (2)
110004	六角半圓頭螺絲 M2×4 (6)	110108	六角有頭螺絲 M2×4 (6)	210344	球頭螺絲帽 L 4.8 (4)	310008	避震軸心 (4)
110005	六角沉頭螺絲 M3×8 (10)	110109	六角沉頭螺絲 M2.5×12 (6)	210378	寬形配重防撞板	310032	液壓彈簧螺絲組
110011	六角有頭螺絲 M3×6 (半牙) (6)	120001	培林 10×15 (4)	210381	車殼支柱組	310033	液壓壓板 (2)
110013	E扣 2.0 (10)	120002	培林 5×10 (4)	210433	內六角公球頭 4.8×4.5 S (5)	310035	下擺臂插銷 2.6×22 & 25 (各一對)
110015	凸緣螺帽 M4 (4)	120003	培林 5×8 (4)	210491	球頭螺絲 L 5.8×4 (4)	310048	擺臂插銷 2.5×46 (4)
110017	插銷 2×9.8 (10)	120008	止推培林 2.5×6	210510CR	加大煞車卡鉗 (紅) (4)	310050	內六角公球頭 4.8×6 (5)
110020	差速鋼珠 3.0 (13)	120017	軸承 5×8 (4)	210579	RMX 2.0 後置套件組	310064	傘齒 16T (2)
110026	六角半圓頭螺絲 M3×10 (10)	120018	培林 4×10×4 (2)	210593	支柱 11.5 (2)	310065	萬向接杆 (2)
110043	六角沉頭螺絲 M3×12 (10)	120019	培林 8×12 (2)	220012	礦物油 10#	310101BK	RMX 鋁合金馬達座 (黑)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	120024	軸承 3×6×2.5 (4)	230041	碟型六角輪座組 (加大型)	310103	擺臂插銷 2×28 (2)
110047	墊片 3×6×0.5 (8)	120025	培林 6×10×2.5 (2)	230058	轉向搖臂組	310104	RMX 快拆齒軸
110052	六角沉頭螺絲 M3×10 (10)	130002	O環 11.5×1.5 (4)	230059	液壓接杆組	310105	RMX 主齒軸
110053	六角有頭螺絲 M2.5×30 (半牙) (2)	130004	避震氣室 (4)	230060	電池座組	810002	鋼製強化可調拉桿 3×20 (2)
110055	G扣 10.0 (10)	130006	泡棉雙面膠 (5)	230061	後齒箱組	810003	鋼製強化可調拉桿 3×25 (2)
110059	插銷 1.5×7.8 (8)	130008	黑色油膏	230062	前擺臂組	810005	鋼製強化可調拉桿 3×32 (2)
110061	六角半圓頭螺絲 M3×14 (6)	130028	阻尼器O環 P3 (藍) (10)	230063	前避震架	820004	鋼製大角度CVD傳動軸 42 (2)
110063	六角半圓頭螺絲 M2×8 (6)	130032	避震上蓋O環 (10)	230064	後避震架	820020	墊片 5×7×0.3 (8)
110065	六角圓頭螺絲 M2.5×12 (6)	130034	吸震泡棉 20×80×1 (4)	230065	前拖支架組	820024	墊片 10×12×0.3 (8)
110070	E扣 3.0 (10)	130036	工具包	230067	4.8 拉桿頭組 (M/S)	820030	連接軸 (2)
110073	六角沉頭螺絲 M3×16 (6)	130040	滾珠差速油	230068	大齒盤 48P-80T	820049	輪座墊片 1.0 (4)
110079	E扣 2.5 (10)	210031	強化拉桿頭組 5.8×26 (4)	230069	下擺臂座組 (+1.0/-2.0)	820063	擺臂座墊片 0.5mm (4)
110080	墊片 2.6×5.8×0.6 (8)	210035	傘齒組 40-13	230070	襯套墊片組	820075	R銷 5.0 (10)
110082	六角半圓頭螺絲 M2×3 (6)	210047	強化拉桿頭組 4.8×18 (8)	230071	二樓板後連結座組	820079	避震膠件包 (2)
110088	六角半圓頭螺絲 M3×20 (6)	210057	避震器上下蓋組	230072	RMX 底盤	820095	AKM 二車輪軸 (2)
110091	六角有頭螺絲 M3×40 (半牙) (6)	210063W	襯套墊片組 (白)	230073	RMX 二樓板組	820103-3	31mm 硬避震彈簧 (軟) (2)
110095	六角有頭螺絲 M3×35 (半牙) (6)	210071	避震器筒身 (2)	230093	同軸前輪座組	820104-4	31mm 軟避震彈簧 (超軟) (2)
110099	六角沉頭螺絲 M3×4 (10)	210082	避震器活塞墊片組 (POM)	230096	MB 後輪座組	820126	NS 高拉力同服緩衝器
110100	六角有頭螺絲 M3×30 (半牙) (6)	210160	球頭螺絲 5.8×6 (4)	230097	MB 後下擺臂		

026171