

TCL 3189

QUICK START GUIDE


SNELSTARTGIDS | HURTIGSTARTGUIDE | RÖVID
HASZNÁLATI UTASÍTÁS | SCHNELLSTARTANLEITUNG
| HIZLI BAŞLANGIÇ KILAVUZU | ĪSĀ PAMĀCĪBA |
TRUMPASIS VADOVAS | HƯỚNG DẪN SỬ DỤNG |
SKRÓCONA INSTRUKCJA OBSŁUGI | SNABBSTARTSGUIDE
| LYNVEJLEDNING | GHID DE UTILIZARE | UPUTSTVO
ZA UPOTREBU | UDHËZUES I SHPEJTË | GUIDA RAPIDA
ALL'USO | GUÍA RÁPIDA | GUIA DE INICIAÇÃO RÁPIDA
| KRATKE KORISNIČKE UPUTE | NAVODILA ZA HITRO
UPORABO | STRUČNÁ PRÍRUČKA | STRUČNÁ PŘÍRUČKA |
LÜHIJUHIS | PEDOMAN MULAI CEPAT | Guide de démarrage
rapide | PIKA-ALOITUSOPAS | ΟΔΗΓΟΣ ΓΡΗΓΟΡΗΣ
ΕΚΚΙΝΗΣΗΣ | КРАТКО РЪКОВОДСТВО ЗА ПОТРЕБИТЕЛЯ
| ПРИСТУПАЯ К РАБОТЕ | ПОЧАТОК РОБОТИ | УПАТСТВО
ЗА БРЗ ПОЧЕТОК | عيس راک هب عورش یامنهار |
عديلا ليلد | מדריך הפעלה מהירה | คู่มือการใช้งานด่วน | 快速指南 |
快速入門指南

SAVE
PAPER
SAVE
TREES

PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING









tcl.com

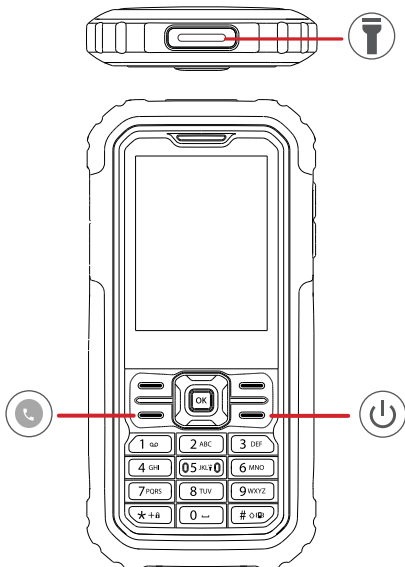



Power key

Aan/uit-toets | Av/på-tast | Be-/kikapcsoló gomb
 | Ein/Aus/Beenden-Taste | Güç tuşu | Ieslēšanas/
 izslēšanas taustiņš | Maitinimo klavišas | Phím
 nguồn | Przycisk zasilania | Strömknapp | Tænd/sluk-
 tast | Tasta de pornire/oprire | Taster za uključivanje
 | Tasti i ndezjes | Tasto Accensione | Tecla Encendido
 | Botão Ligar | Tipka za uključivanje | Tipka za Vkllop/
 Izklop | Tlačidlo Zapnutie/Vypnutie | Tlačítko Zapnutí/
 Vypnutí | Toitenupp | Tombol Daya | Touche Marche-
 Arrêt | Virtanäppäin | Πλήκτρο ενεργοποίησης |
 Бутон Захранване | Клавиша включения | Клавиша
 ввімкнення | Копче за вклучување/исклучување |
 הלעפּה שקמ | مفتاح التشغيل | کلید روشن/خاموش | ឡុំ រឿង/ឡុំ
 电源键 | 開關機鍵

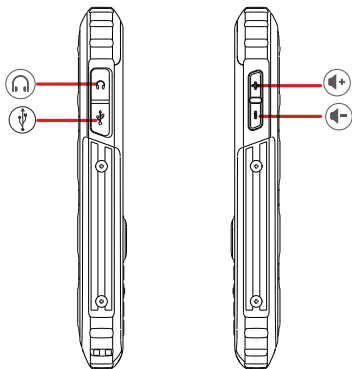
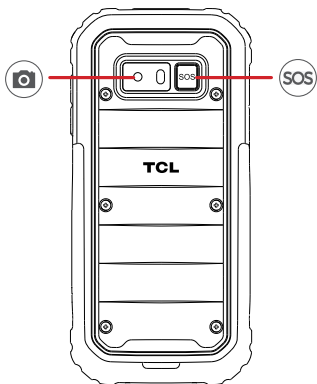


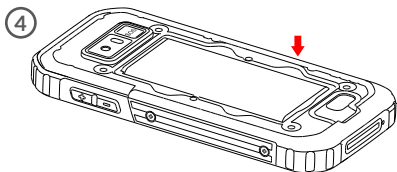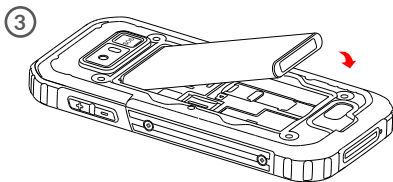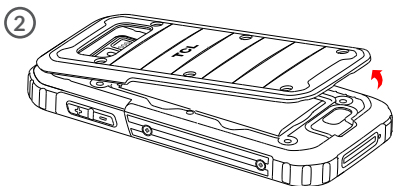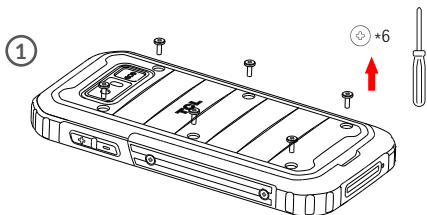

5

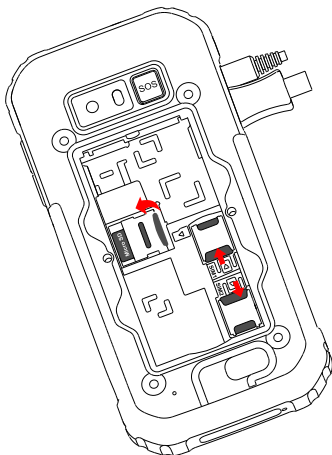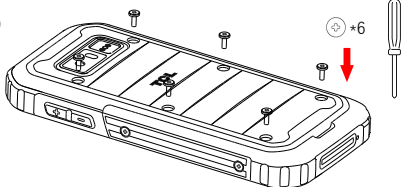



①

  



⊕ *4



 
 
②



3

  

4

  

⊕ *4



TCL 3189



CJB69J1LCAAB
Printed in China

3189D

