

Hurricane

AT HOME™

16" Energy Efficient Adjustable Standing Fan

HGC736102-01

IMPORTANT SAFETY INSTRUCTIONS



PLEASE READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the manual are for reference only.

Caution: Read Rules for Safe Operation and Instructions Carefully.

WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. **WARNING** – To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
3. Do not leave the fan running unattended.
4. Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
7. When the fan was assembled, the rotor blade guard shall not be taken off.
 - Prior to cleaning, unplug fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
8. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
 - a) **DO NOT** operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - b) **DO NOT** run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.

ASSEMBLY INSTRUCTIONS


Before beginning assembly, remove all fan components and plastic from the box.

- Step 1: Place the fan base on the ground. Connect and rotate the adjustable height poles to desired height until securely locked in place.
- Step 2: Connect and rotate the motor to adjustable height poles or base (depending on your preferred fan height) until securely locked in place.
- Step 3: Twist to unlock and remove the plastic lock nut and spinner from the motor and then align the rear grill to the motor.
- Step 4: Secure by rotating the plastic lock nut until locked in place.
- Step 5: Place the fan blade next and secure by rotating the spinner until locked in place.
- Step 6: Once fan blade is locked, gently spin to ensure proper rotation.




ASSEMBLY INSTRUCTIONS

Prior to installation, please remove the spinner and plastic nut from the motor head.



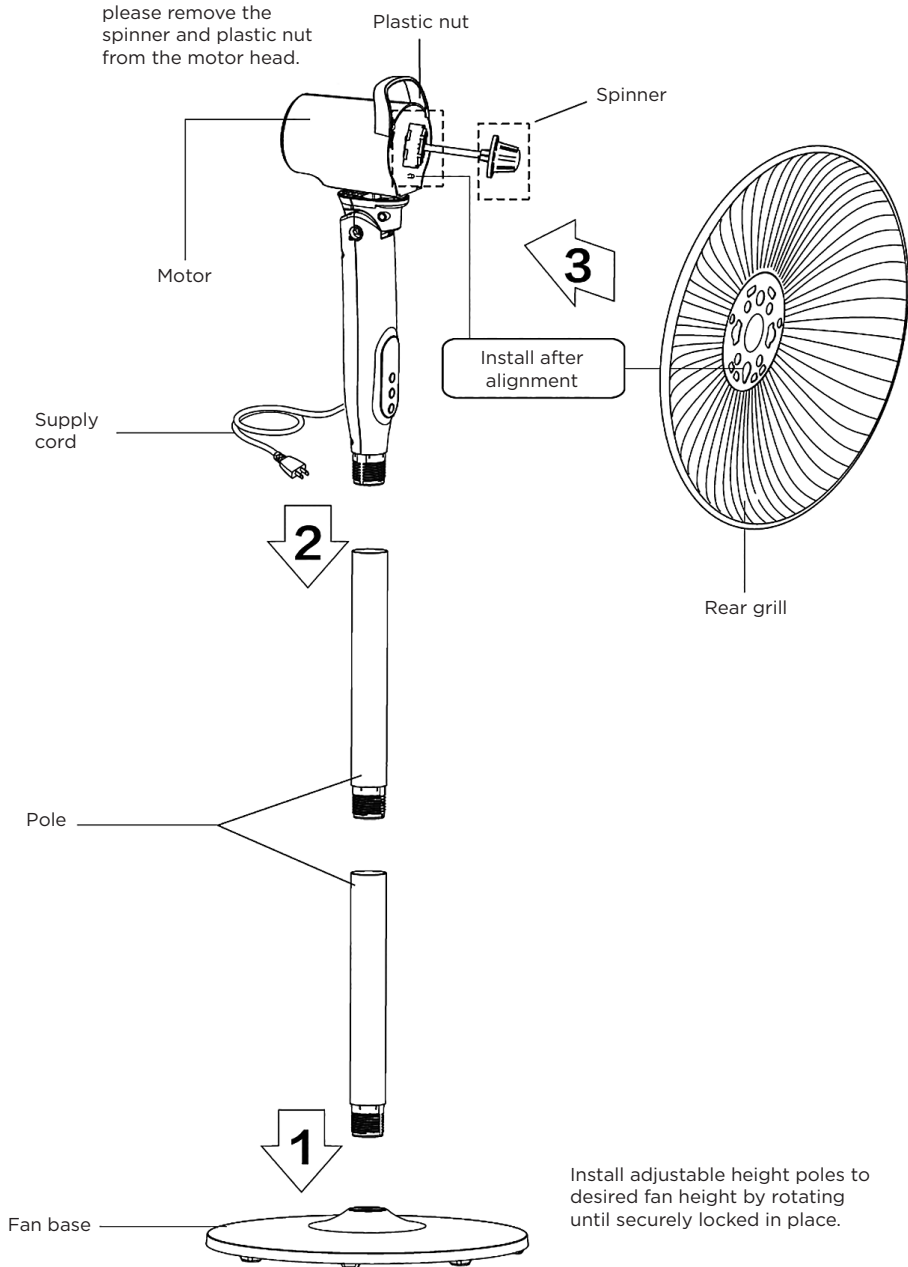


Install adjustable height poles to desired fan height by rotating until securely locked in place.

ASSEMBLY INSTRUCTIONS

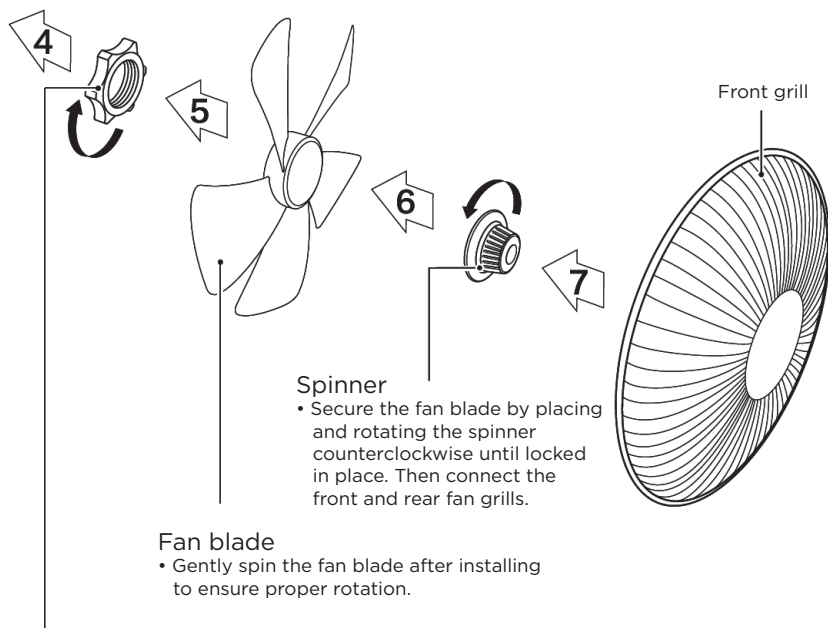


Step 7: Connect the front and rear fan grills.

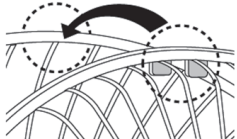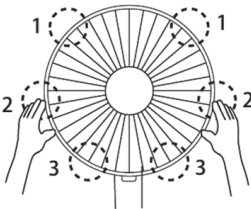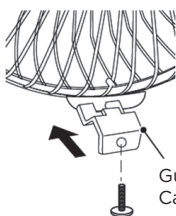Front and Rear Guard Installation		
Align Catch of the Front Guard with the illustrated position of the Rear Guard. 	Press guards sequentially with both hands. 	Self-Catch Installation.  Guard Catch

REMOTE INSTRUCTIONS

Instruction key of remote controller

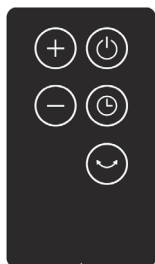

	On / Off button
	Oscillation button
	" + " key
	" - " key
	Timer button

- On/off button:
Press it once, the fan will turn on and press it again to shut off.
- Oscillation button:
After powering the fan on and blade rotation starts, press the button once to start oscillation. Press the button again to stop it in the desired direction.


- Timer button:
Setting a Starting Time: Plug in the unit. Press the timer button when the fan is off to activate the auto on timer. Then press to select time from "0.5 to 12 hours" with an increment of 0.5 (The increment increases to 1 after the number reaches 10 hours).

The starting time is set up after the number on screen switches to speed number and flashes. Then a clock signal will be on display. Then the fan will turn on automatically after the hours you set.


Setting a Stopping Time: After turning on the fan, press the timer button. Then press to select time from "0.5 to 12 hours" with an increment of 0.5 (The increment increases to 1 after the number reaches 10 hours). The stopping time was set up after the number on screen flashes. Then the fan will turn off automatically after the hours you set.

Wind speed setting: Press the button to increase the wind speed and get a stronger breeze. Press the button to decrease the wind speed and get a lighter breeze.

BATTERY INSTRUCTIONS

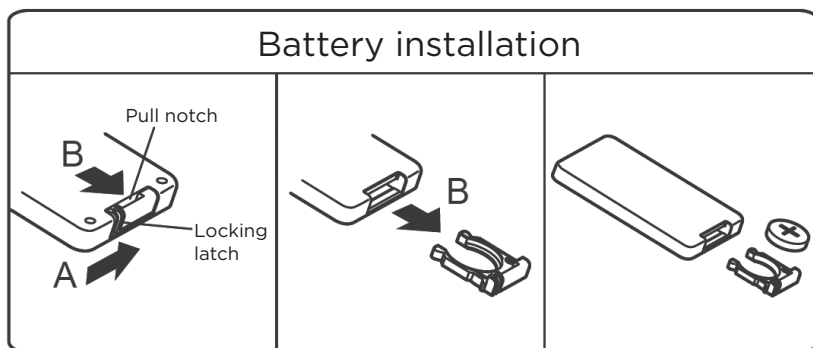

1. Please push the locking latch in the direction of Arrow A, and pull out the pull notch in the direction of Arrow B at the same time.
2. Use one (1) CR2032 lithium battery (included)
3. Insert the battery, making sure that the positive terminals are facing the proper way.
4. Replace the cover.

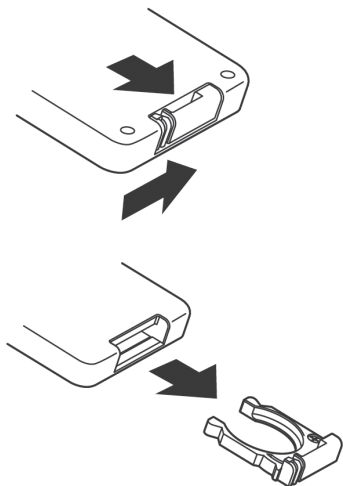

BATTERY WARNING

1. Do not dispose of batteries in a fire, as they may explode or leak.
2. Do not mix old and new batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Batteries are to be inserted with the correct polarity.
5. Exhausted batteries are to be removed from the product.
6. The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.

WARNING: Chemical Burn Hazard. Keep batteries away from children.


This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grill when the fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure the fan is on a stable surface when operating to avoid overturning.
4. DO NOT use the fan in a window, as rain may create an electrical hazard.
5. Household use only.

INSTRUCTIONS FOR USE

Instructions for operation of body

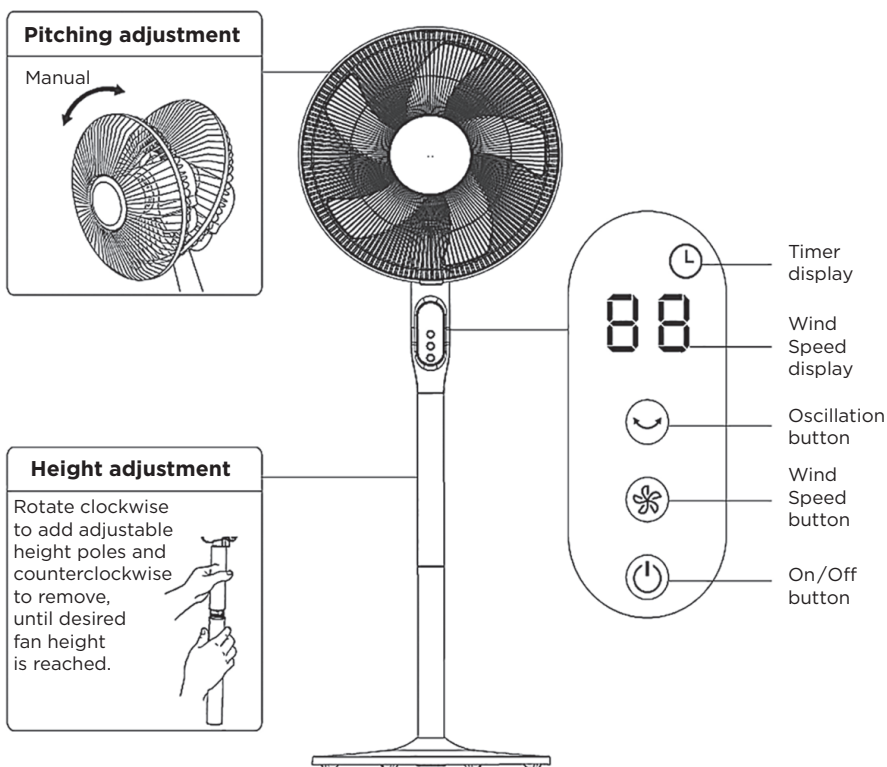

INSTRUCTIONS FOR OPERATION OF BODY



Press the Oscillation and Timer button quickly to start the oscillation feature. Press the button quickly again to stop the oscillation function and point the airflow in the desired direction.

Setting a Starting Time: Plug in the unit. Press and hold the Oscillation and Timer button on the fan for 2s when it is off to activate the auto on timer. Then press again to select time from “0.5 to 12 hours” with an increment of 0.5 (The increment increases to 1 hour after the number reaches 10 hours).

The starting time is set up after the number on screen switches to speed number and flashes. Then a clock signal will be on display. Then the fan will turn on automatically after the hours you set.

Setting a Stopping Time: After turning on the fan, press the Oscillation and Timer button for 2s to adjust the time setting. Then press again to select time from “0.5 to 12 hours” with an increment of 0.5 (The increment increases to 1 after the number reaches 10 hours). The stopping time was set up after the number on screen flashes. Then the fan will turn off automatically after the hours you set.




Press the Wind Speed button to change to desired fan speed setting. Hold down the Wind Speed button to quickly adjust to the desired speed.



On/Off button: Start or stop fan operation

USER SERVICING INSTRUCTIONS

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

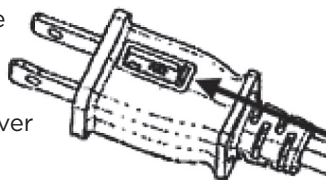

NOTICE

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damaged or cause an accident.
2. If the plug does not go into the outlet easily, please make sure you have the plug turned the right way.

CLEANING INSTRUCTIONS

1. Be sure to unplug from the electrical source before cleaning begins.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Be sure not to get water or other liquid inside the motor.
3. Thoroughly rinse off the soap film with clean water and dry. Please do not use a hose to clean.

WARRANTY



When purchased from an authorized Hawthorne dealer, this product is covered by a Limited Warranty available at hawthornegc.com/warranties.

We take responsibility for the quality of our fan and promise to all original consumers or purchasers that this fan is free from defects in material or workmanship for a period of one (1) year from the date of purchase.

If any such defect is discovered due to faulty materials, workmanship or lack of conformity, within the 1-year warranty period, we will repair or replace the product at no cost to ensure minimum inconvenience to the customer. This limited warranty is good only to the original purchaser of this product and valid only in the United States. The guarantee is subject to the following provisions:

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
3. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
4. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
5. Use of accessories or components that are not compatible with this product.
6. The manufacturer disclaims any liability for the incidental or consequential damages.

HAVE A CLAIM?

Please reach out to our technical support team at:

TSupport@hawthornegc.com

Include your proof of purchase, photo of the sticker on the side of the fan, as well as a name and shipping address (no P.O. Box) and we will start your warranty claim.





Hurricane®
hurricane-fans.com



HAWTHORNE GARDENING™

CO

Manufactured for Hawthorne Hydroponics LLC, a
subsidiary of The Hawthorne Gardening Company,
3204 NW 38th Circle, Vancouver, WA 98660

HawthorneGC.com

©2021. World rights reserved.

HGC736102-01 LB17581 05/12/2021



THIS PAGE FOR ID PURPOSES ONLY

					
ART			PRINTER		
Design Studio/Contact: Steve Turmell		SMG Design Project Number:	Separator/Contact: OBF /		Printer & Location: Midea
					Print Method: Black Printing
					Color Stations: 1
Design, File Name: HGC736102-01_LB17581_Hurricane_HurricaneAtHome_StandingFan_Instruction Manual_210512			Additional Information:		
PRODUCTION/PACKAGE			VERSION		
Job Description: HGC736102-01_LB17581_Hurricane_HurricaneAtHome_StandingFan_Instruction Manual_210512					
SKU #: HGC736102-01	Package Type: Instruction Manual				
Component #: LB17581	Substrate:	Date Modified:			
Scotts Project Number: 112340	Printer Die Line #:	Operator:			
Scotts Project Lead: Tom Kelly	Translation Approval Code:	Final Artwork Size: 8" H x 5.5"W – booklet 12 pgs			
File Name:			REGULATORY SIZES		
OBF Project #:	Wave:	UPC #:	Label Portion Of Primary Front Panel In Square Inches (W X H)		
OBF Job #:	UPC SIZE:	UPC BW:	"Keep Out of Reach of Children"		
			"SIGNAL WORD (MUST BE IN ALL CAPS)"		
			"Storage And Disposal" Heading		
			Minimum Font Size (All Panels)		
THESE PAGES PRINT AT 00% REDUCTION OF THE ORIGINAL TO FIT ON 5.5" x 8" PAGE					
LIMITATION OF LIABILITY					
DO NOT PLATE, ENGRAVE, OR PROCEED TO PRESS WITH THIS FILE WITHOUT PROPER INSPECTION					
All files and proofs must be thoroughly inspected by the recipient immediately upon receipt. It is the responsibility of the recipient to examine and proofread all files and proofs. In the event file(s) and/or proof(s) are found to be incorrect upon inspection, call 513-281-0999 and ask for the separation contact. The liability of Olberding Brand Family shall be limited to correcting and replacing the materials that we supplied that were found to be defective. Olberding Brand Family will not be liable for any other loss or damage including, but not limited to, cost of Flexo printing plates that we did not make, print cylinders, inks, substrates/printed materials, and/or make ready and press time.					

