



CYC RIDE CONTROL

App User Guide

✉ support@cycmotor.com

☎ +852 3690 8938

CYC RIDE CONTROL

Monitor & customize your e-bike riding experience for all CYCMOTOR mid-drive systems. Use it as a secondary dashboard, settings set-up, or both. Unleash all the possibilities of e-bike customization at your fingertips.

The mobile app is not the only way to customize your system. The controller is also programmable via the included display- integrated for your convenience.

This platform is your go-to-station for your CYCMOTOR kit and X-Series controllers.

FEATURES

- Bluetooth connectivity
- Complete with torque sensor configuration
- Compatible with X6 & X12 controllers
- Real-time dashboard for all your motor & riding information
- Fully customizable parameters for pedal assist, throttle & gear preferences



DASHBOARD

Brake sensor indicator **COMING SOON**



Warning icon to check error codes & clear faults

Bluetooth icon to connect to your device

Instantly change between **STREET** & **RACE** mode

Change between your **DASHBOARD & SETTINGS** page

Serial number connected to controller



ALL PARAMETERS SHOW REAL-TIME INFORMATION



CONNECTING A DEVICE



STEP #1:

Open the app and tap the Search button at the bottom of the screen. Kindly ensure your phone's Bluetooth is enabled. (Please keep close to the motor while connecting)

STEP #2:

Available devices will then be listed, select your kit and it will begin connecting to the controller. (Please note signal strength)

STEP #3:

Once connected, the CONNECT icon will change stating you are connected & can select again to disconnect.



MAIN SETTINGS



The settings page allows you to navigate through different parameter categories. There are six different categories with each providing a set of adjustable parameters or readings from your ebike system.


IMPORTANT

Save all new changes in parameters to flash or risk losing progress. Any changes made that were not saved will be lost after a restart. Note to save after every change in value.

To save to flash, tap the 'Save' button in the upper righthand corner, 'Save successful' message will appear upon completion.



GENERAL

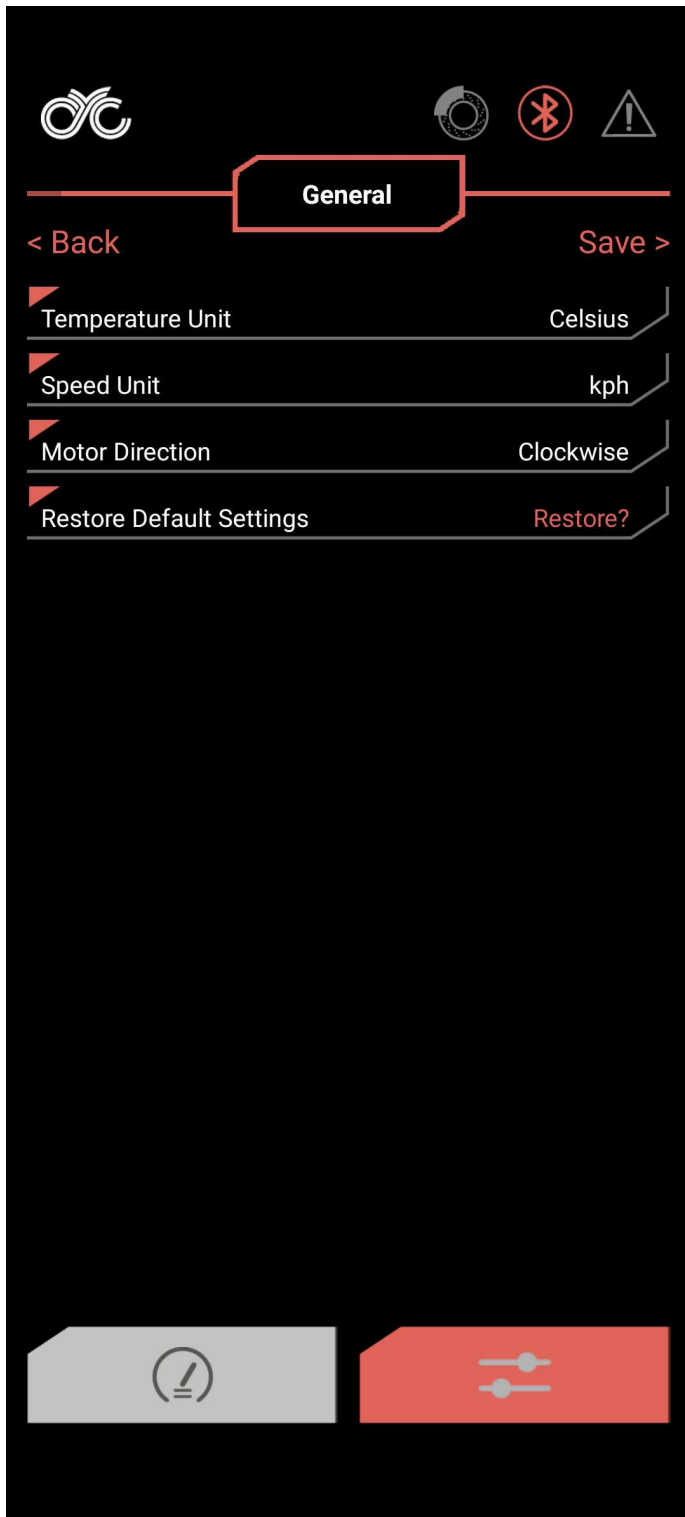

TEMPERATURE UNIT

Set your units to display in degrees Celsius (°C) or Fahrenheit (°F)

SPEED UNIT

Set the speed unit to miles or kilometers.

MOTOR DIRECTION

This setting is for users who'd want to switch the direction to where the motor is facing. Note that this is reserved for specific uses only.


WARNING: Do not change this setting if using the motor in its default position. Contact CYC for assistance.

RESTORE DEFAULT SETTINGS

Restore to factory/default settings.



MODES & LEVELS

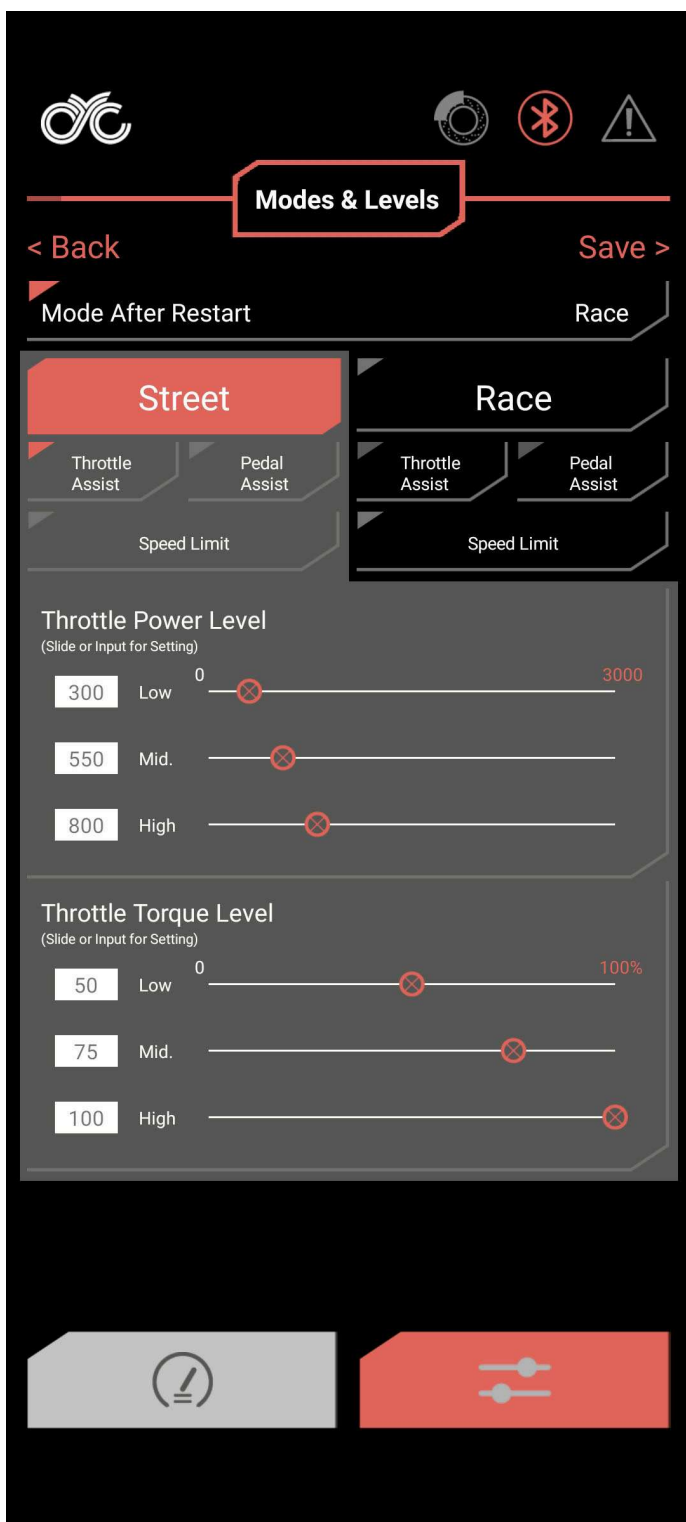

RACE & STREET MODE

You can set the throttle & PAS output independently for both modes.

RACE MODE THROTTLE & PAS


Race Mode is your “boost” or “full power” mode and has parameters set for reaching closer to the system’s full capabilities. You can adjust these to your own preference within the capabilities of your controller. The default setting in Race Mode is 3000W & 100 km/hr.

STREET MODE THROTTLE & PAS

Street Mode is intended to be set to your region’s legal limits. You can adjust these to your own preference or to your region’s legal limits. You can adjust these to your own preference or to your region’s legal limits. The default setting in Street Mode is 750W & 25Km/hr.



THROTTLE

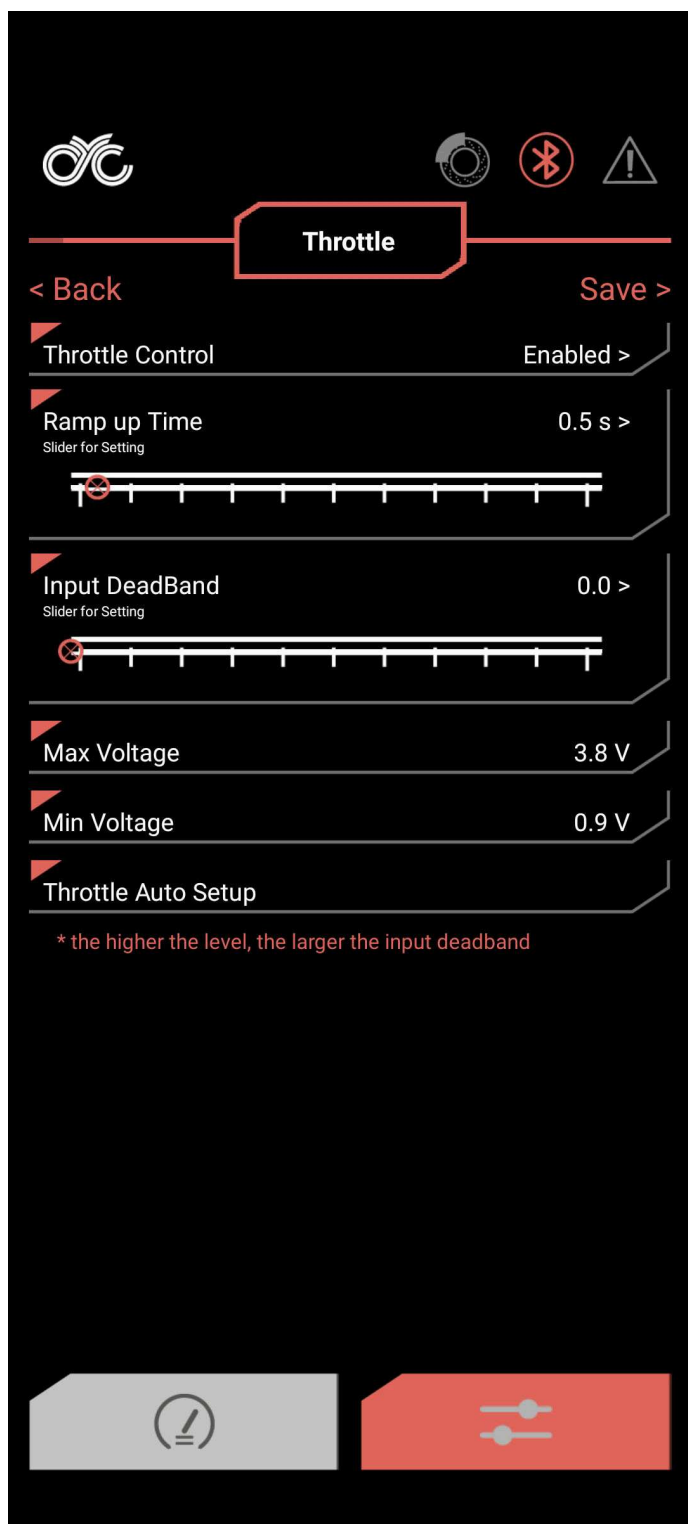

RAMPING TIME

This is the time it takes for the motor to achieve the required input. For example, if you open the throttle fully, it will take 250ms (by default) before the motor gives you full power. It will gradually ramp up to full power within the set time. We recommend not to set this below 150ms.

INPUT DEADBAND

This value pertains to opening the throttle when it's completely closed. This is the amount of throttle can be moved from the zero position without generating a response from the motor. If this value is set lower, your throttle will engage quicker and vice versa.

MAX VOLTAGE

This value should be the same as the Throttle Voltage Reading when the throttle is closed and sets the output when it is not active.

MIN VOLTAGE


This is the output of the throttle when opened fully and is pre-set when purchased. This does not need any change with CYC supplied throttles.

THROTTLE AUTO SETUP

If you'd like to use your own throttle, this will automatically setup the minimum and maximum voltage accordingly. Follow the steps as prompted on the screen.



PEDAL ASSIST

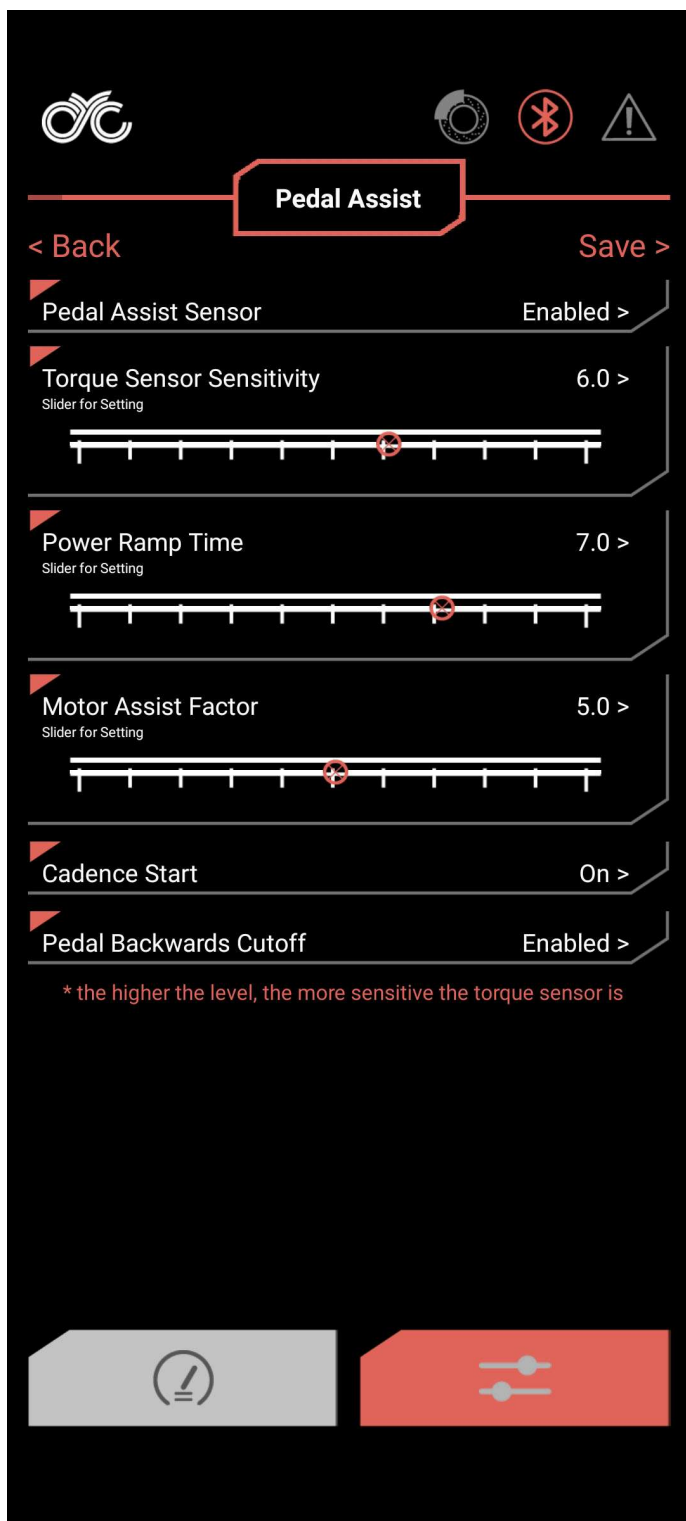

PEDAL ASSIST SENSOR

Enabling pedal assist.

TORQUE SENSOR SENSITIVITY

This value pertains to activating pedal assist when it's completely off. This is the amount of pedal force required to activate the pedal assist. If this value is set higher, your pedal assist will engage with less force and vice versa.

POWER RAMP TIME

The amount of time it takes to reach the desired input. This is the responsiveness of the motor.

MOTOR ASSIST FACTOR

This value pertains to how hard you need to pedal to get full power.

CADENCE START


This feature allows for a cadence-free pull away. i.e., only torque (40N.m.) is required to activate pedal assist.

PEDAL BACKWARDS CUTOFF

This features allows you to cut the motor power when you pedal backwards.



PERIPHERALS SETUP

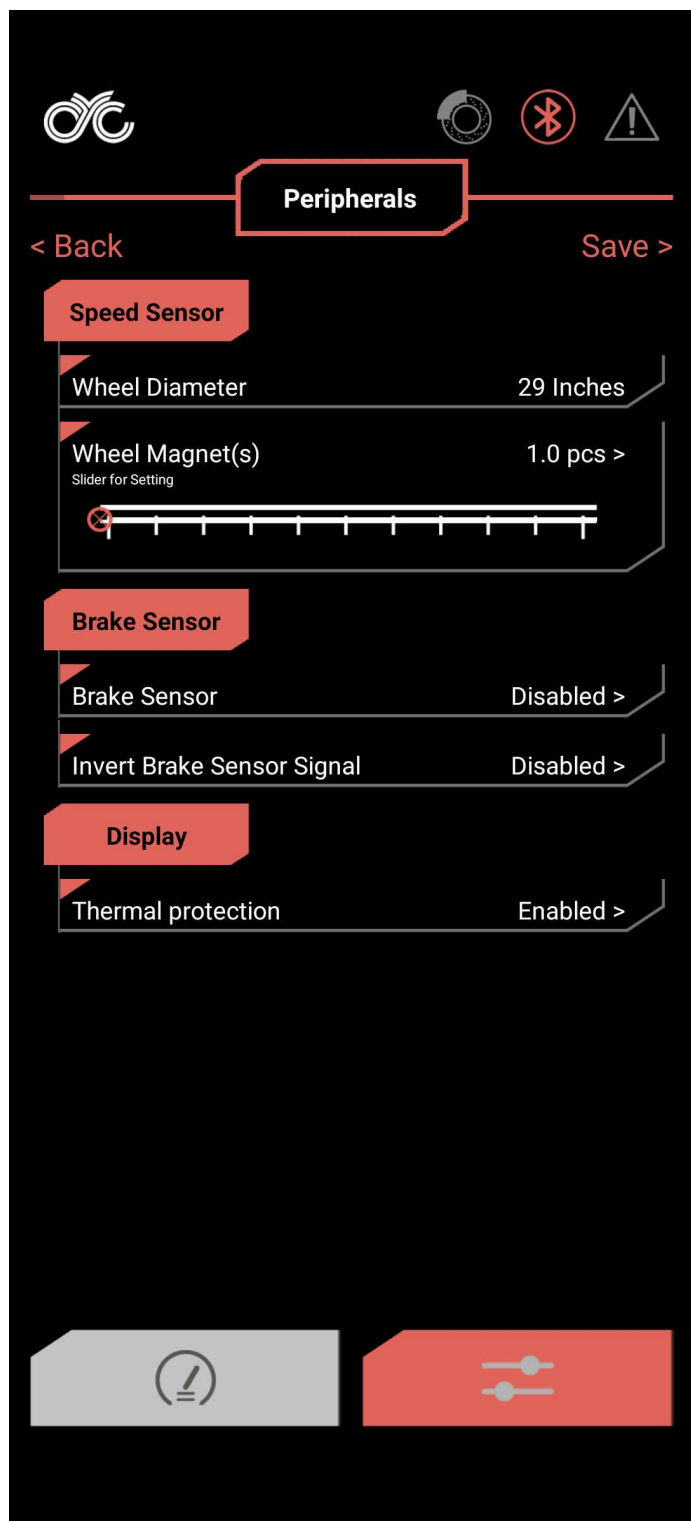

SPEED SENSOR

Wheel Diameter

The wheel diameter can be measured or calculated. We advise that this number must be calibrated so that vehicle speed within the app matches display speed. This will give more accurate speed limiting under different modes. Remember to set the correct wheel size within the display as well (only applicable to 500c & 750c displays). Kindly refer to your user manual.

Wheel Magnet

This is the number of magnets in the wheel that is communicating with the speed sensor. For more accurate vehicle speed limiting and measurement, we advise to add more magnets to the wheel.

BRAKE SENSOR

Enable/Disable brake sensors

INVERT BRAKE SENSOR SIGNAL

If you are using brake sensors from a different supplier, you can use this feature to set up your brake sensors as needed.

WARNING

Please contact your authorized dealer or CYC support if you're setting up third-party peripherals.

DISPLAY

THERMAL PROTECTION

This is an advanced feature and requires a password from CYC to change. This allows you to disable your motor temperature sensor. Contact technical_support@cycmotor.com for more details and password for this feature.


BATTERY

BATTERY TYPE / SERIES OF CELLS

10s = 36V, 14s = 52V, 20s = 72V

MINIMUM VOLTAGE

The value the controller will fault when connecting too low a voltage to the system. This setting can be used to protect your battery if too much voltage sag is detected.

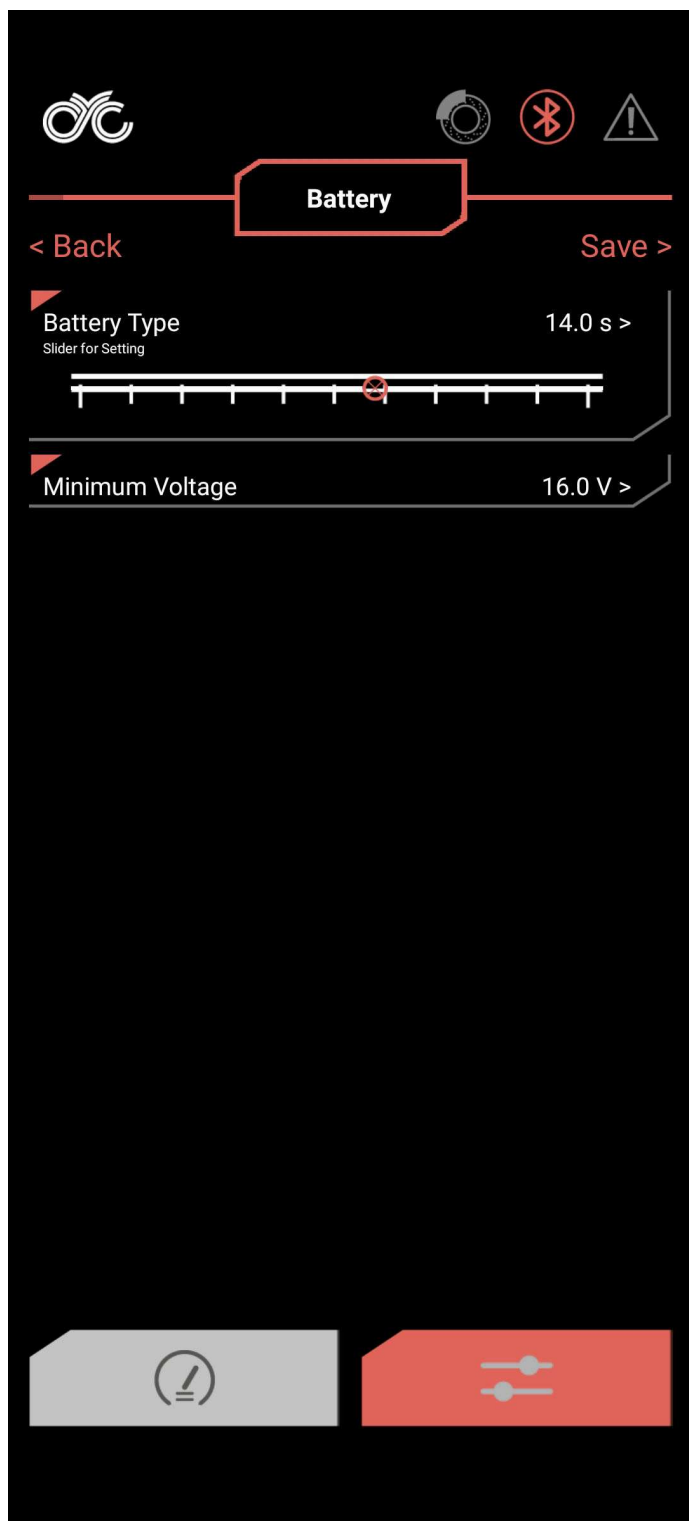



DISCLAIMER

If you require any more information or have any questions about the user manual disclaimer, please contact us via email at technical_support@cycmotor.com.

All information contained in this user's guide is published in good faith and for general informational purposes only. CYCMOTOR LTD does not make any warranties about the completeness of this information and encourages further inquiries as stated above if needed. CYCMOTOR LTD will not be held liable for any losses and/or damages caused by negligence or misinterpretation.

PRIVACY POLICY

This service is provided by CYCMOTOR LTD. at no cost and is intended for use. This text is used to inform visitors regarding our policies with the collection, use, and disclosure of personal information if anyone decided to use this service. If you choose to use this service, then you agree to the collection and use of information in relation to this policy. The personal information that we collect is used for providing and improving the service. We will not share your information with anyone except as described in this Privacy Policy. The terms used in this Privacy Policy have the same meanings as in our Terms and Conditions, which is accessible at CYCMOTOR LTD unless otherwise defined in this Privacy Policy.

Information Collection and Use

For a better experience while using this service, we may require you to provide us with certain personally identifiable information, including but not limited to Name (optional), Phone number, Email address, Location (Optional). The information that we request will be retained by us and used as described in this Privacy Policy.

Visit www.cycmotor.com/privacy-policy for more detailed information.

