

MOON WALL

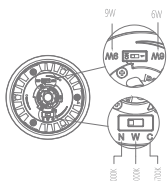
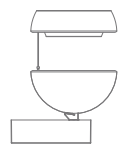
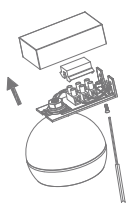
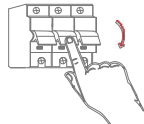
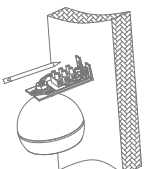
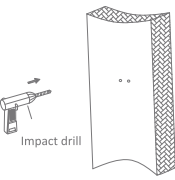
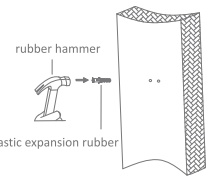
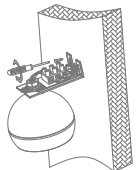
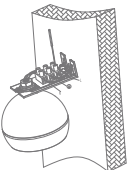
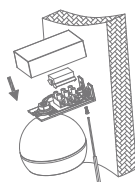
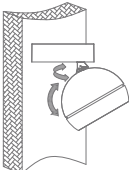
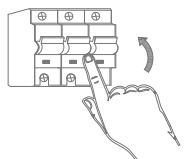
Variants		Item No.	Colour Temp
Blk	Wht		
22820	22821	MOON-WALL	FLD
22822	22823		OPAL
22824	22825		SPOT
22826	22827		TUBE
			TRIO

Thank you for purchasing your new MOON-WALL Light, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

Specifications

Voltage:	240V	CCT:	3000K - 4000K - 5700K (Switchable)	Dimmable:	Yes	Lifespan:	50,000hrs
Power:	6/9W	IP Rating:	20	CRI:	>80		

Please refer to the data sheet for lumen output.

Optional Optics:					
01 Flood		02 Spot		03 Opal	
04 Tube					
1 Select suitable CCT / Power you need. 		2 Select the optics, then lock the safety wire. 		3 Rotate the optics on the LED engine in clockwise direction, make sure it was locked until you hear "click". 	
4 Take out the faceplate. 		5 Turn off the power. 		6 Use the faceplate to position on the wall. 	
7 Drill the hole on the wall. 		8 Mounted plastic expansion screws. 		9 Tighten the screws to fix the wall base. 	
10 Connect L/N wires. 		11 Install the upper cover. 		12 Adjust the direction as required. 	
13 Turn on the power. 					

Note: -The lamp must be installed by professional electrician
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use
-Keep away from hot steam and corrosive gas