




BOULT AUDIO

YCHARGE USER MANUAL


For better sound quality experience, suggest use
IOS 8.0/ Android 4.3 or above operating system.



Product Introduction

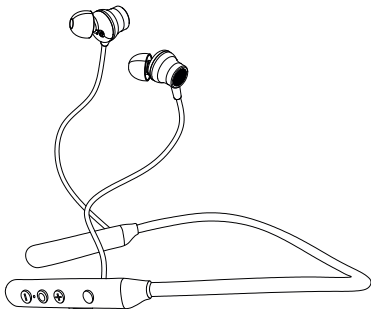

1. Power Button
2. USB Type-C Charging Slot
3. LED Indicator
4. Volume (+) / Next Track
5. Volume (-) / Prev. Track
6. Multi-Function Button

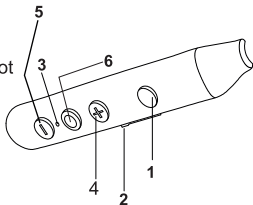

CHARGING YOUR EARPHONE

Your Bluetooth earphone come with a built-in rechargeable battery and a Type-C charging cable

Charge fully before use

Use the charging cable through the corresponding port to charge the battery, the LED Indicator will show red, while charging, and show blue once fully charged. Charging time is approximately **30 mins.**

GETTING STARTED

To use your Bluetooth earphones, Please follow the steps below.

1. Ensure your Bluetooth earphones are fully charged.
2. Pair your Bluetooth earphones to a Bluetooth- enabled device prior to use. (See Pairing Instructions).

Powering On the Earphone

Press and hold the Multi- Function Button for 3 seconds until blue light turns on.

Powering Off the Earphone

Once powered on, press and hold the Multi- Function Button for 5 seconds until red lights are on and out.



PAIRING YOUR EARPHONE

1. When connecting for the first time, press power button for 6 sec. The device will turn on and enter pairing mode.
2. Activate bluetooth on your device to scan & find.
3. Select "BOULT AUDIO PROBASS" from the listed devices and connect.
4. The indicator will flash blue every 5 seconds once successfully paired/connected.

Note:

1. The earphones should be within 30ft range from your Bluetooth devices while pairing/playing.
2. The earphones will automatically power off without connection for 5 minutes

MUSIC MODE

Adjust Volume:

Short press the Volume+ to raise the volume or Volume- to lower the volume by your Bluetooth devices.

Play/Pause Music:

Once connected, short press the Multi- Function Button to play or pause music.

Previous Track:

Press and hold the Volume- 1 second to the Previous Track.

Next Track:

Press and hold the volume+ 1 second to the next track.



CALL MODE

Answering a Call:

short press the Multi-Function Button to answer an incoming call, or answer the call normally via your mobile phone.

Rejecting a Call:

Press and hold the Multi-Function Button for 2 seconds to reject the incoming call.

Ending a Call:

Short press the Multi-Function Button to end the call or end the call directly from your mobile phone.

Voice Assistant:

Once connected, Long press the Multi-Function Button for 2 second to access voice assistant of your smart phone.

LED INDICATOR	
STATUS	INDICATOR
Power On	Blue (slow flash)
Power Off	Red (solid and out)
Charging	Red (solid)
Fully Charged	Blue (solid)
Pairing	Blue/Red (quick flash)
Connected	Blue (slow flash)
Low Power	Red (quick flash)

