

ID Reader Setter Guide

Applied model : ID-100



1. Download Setter Program from below website.


http://www.bstkr.com/?page_id=1286&uid=36&mod=document&pageid=1

2. Run the SETTER program.

BST_HID_SETTER.exe 2022-03-29 오후 1:59 응용 프로그램 3,489KB

**** The reader must be connected to the system.**

3. UI Guide

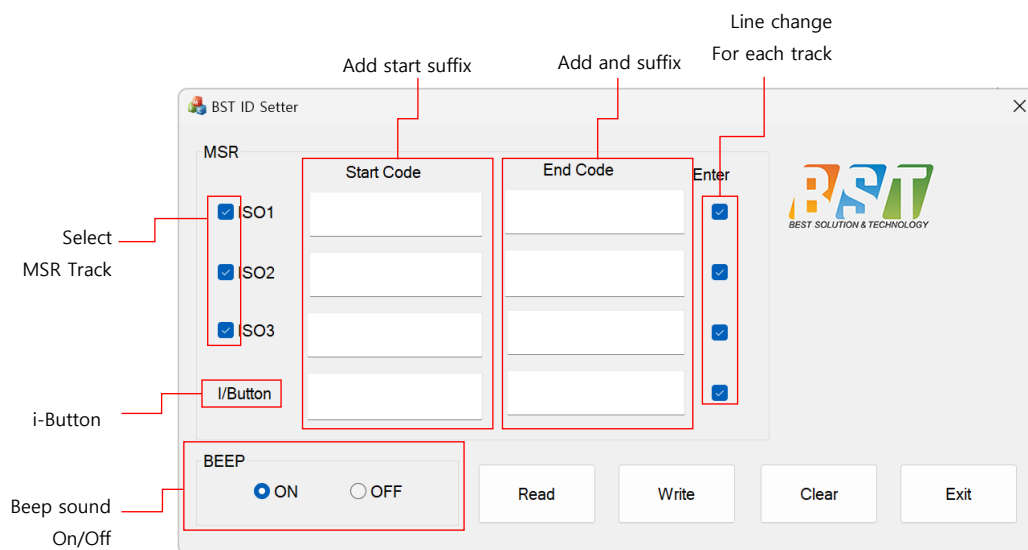

- How to change the setting
 - 1) Click Read button for reading current setting status from reader.
 - 2) Modify about check box and Code.
" Track, Beep sound, Start/end code, Line enter "
 - 3) Click Write Button to save change status.
- How to change the default.
 - 1) Click Clear button.

**** Default setting : enable all of MSR Track and i-button, Beep on, Line change.**

➤ If the set is ok and connect to reader properly,
Beep sound alarm for each step when click the button(Read, Write, Clear)

