



INSTRUCTION GUIDE

S300 TREADMILL SAFETY KEY



I COPYRIGHT

The contents of this manual are subject to change without notice to improve quality.

© 2023 JLL Fitness Ltd

JLL Fitness Ltd owns the copyright for this manual.

Use or reproduction of this manual in parts or entirety without the authorization of JLL Fitness Ltd is prohibited.



| CONTENTS

- Instructions p. 4
- Contact details p. 8



I INSTRUCTIONS

All JLL treadmills need to have a safety key inserted in order to operate the machine. If a key is not inserted the console will flash and no functions will work. The safety key acts as an emergency stop feature if you happen to fall from the machine.

If you have inserted your safety key and the machine is still not functioning, a way to check your connection is:

TOOLS

To perform this check you will need the screwdriver from your tool pack.




STEP 1

Start by turning off the power supply to the treadmill.



STEP 2

Remove the two screws from under the plastic tray.

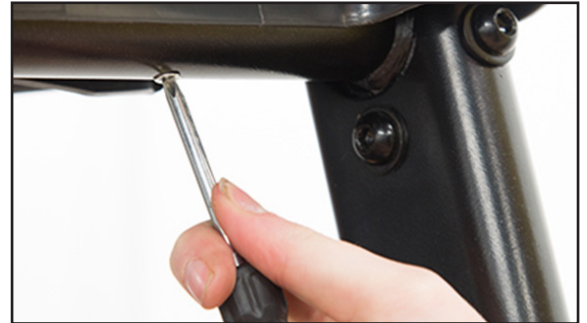


STEP 3

Carefully lift off the tray.




STEP 4

Unclip the wires, check your pins are straight and there is no damage to the wires.

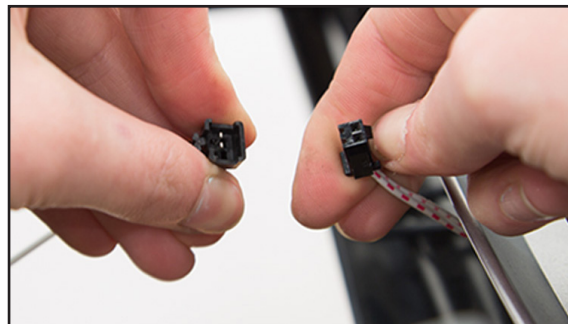

STEP 5

You can also check the alignment of the magnet on the underside of the tray.

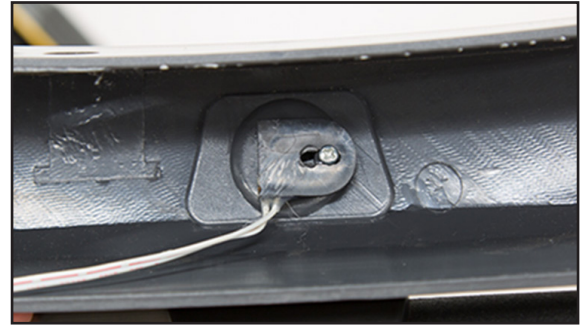

STEP 6

If necessary, loosen the small screw and adjust the position. Once you have checked everything, you can clip your wires back together making sure to hear a click and re-attach your tray.



| CONTACT DETAILS

For any technical queries, product defects or damage or delivery questions please contact us using the details below:



Tel: 0121 328 7507



Email: info@jllfitness.co.uk



Live Chat: WWW.JLLFITNESS.CO.UK



JLLFITNESS     

