



# Instruction manual



**Multi Grill 4 in 1**

**01.112536.01.002**

# PARTS DESCRIPTION



# EN Instruction manual

## SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.



- Surface is liable to get hot during use.

## **PARTS DESCRIPTION**

1. Thermostat
2. Control light
3. Grill plates flat + ribbed
4. Waffle plates
5. Shell plates
6. Grease tray

## **BEFORE THE FIRST USE**

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)

## **USE**

- Place the plug into the socket and set the thermostat button to the desired setting. It will take a few minutes to heat up. You can use this time to prepare the ingredients. As soon as the appliance has reached the set temperature, the indicator light will go off.
- **Note:** While in use, the temperature light will go on and off in order to maintain the correct temperature.

### **Changing the plates**

- To attach the plates firmly or to switch them, it is best to open out the appliance completely first. This is done as follows:
  - Raise the cover of the appliance until it remains upright without being held.
  - Now pull the cover directly upwards until it will go no further.
  - Now you can fold the cover back so that it is completely flat.

### **Use as a grill**

- Place the appliance on a stable, heat-resistant surface. The appliance can now be opened. Grease the plates lightly with cooking oil (only the first time and after cleaning). The plates will have achieved the right temperature when the indicator light goes out. Experiment a little with the temperature setting until you have found the ideal setting.

### **Use as a waffle iron**

- Important: Wait until the plates are at the right temperature. Always prepare the dough at room temperature.
- Liquid dough: Use a ladle to ensure that the formed surface of the lower plate is covered sufficiently.
- Firm dough: Knead 2 balls of dough and lay these on the centre of the plates. Make sure that the dough is distributed evenly. Close the appliance. The dough will now flow into the formed surface of the other plate.
- When the waffles are ready you can remove them, preferably with a two-pronged fork. Be careful not to damage the non-stick coating when doing this. The plates will have been forced apart a little by steam pressure during the baking process. This is completely normal. Bake at the correct temperature, otherwise the waffles will stick to the plates. Do not open the waffle iron too quickly or the waffles will be pulled apart.

### **Use as a sandwich maker**

- Wait until the plates are at the right temperature. The toasted sandwich will be ready after about 3 minutes. You should use a wooden or plastic spatula to remove the toasted sandwich in order to avoid damage to the non-stick coating.
- Place a slice of bread on the lower plate, then the filling, then another slice of bread and close the appliance.
- The toasted sandwich will be ready after about 3 minutes. You should use a wooden or plastic spatula to remove the toasted sandwich in order to avoid damage to the non-stick coating.

## CLEANING AND MAINTENANCE

- Remove the plug from the wall outlet and allow the device to cool both halves open.
- Clean the baking plates with a damp cloth or soft brush.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

## Support

You can find all available information and spare parts at [www.princesshome.eu](http://www.princesshome.eu)!