




TDM-99S

Treadmill User Manual

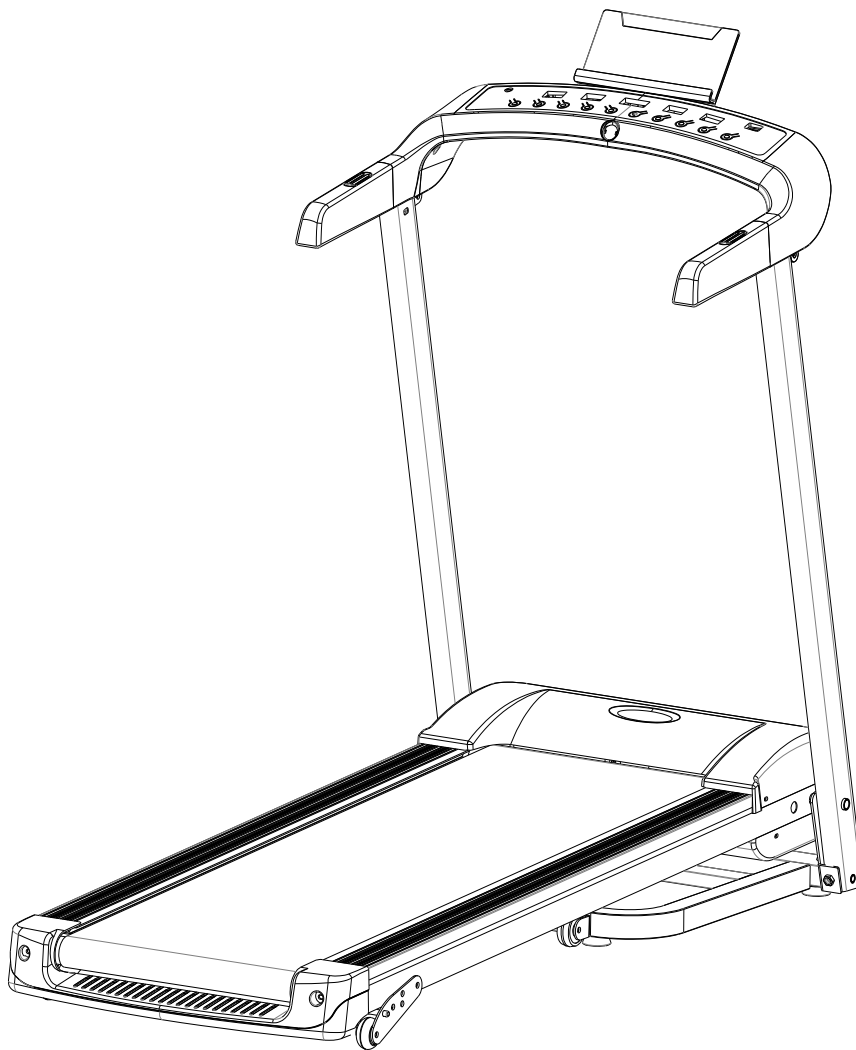

OWNER'S MANUAL



Read all instructions carefully before using this product. Retain this owner's manual for the future's reference. Product may be slightly different with photos, it is subject to actual product. Thank you for purchasing the product.



TABLE OF CONTENTS

WARRANTY	2
TREADMILL PARAMETER AND SAFETY	3
PACKING DETAILS	4
ASSEMBLY STEP	5
FOLDING AND UNFOLDING	7
OPERATING INSTRUCTIONS	7
P1-P9 PROGRAM MOTION MAP	10
TREADMILL ERROR MESSAGE PROMPT	10

1 YEAR LIMITED WARRANTY

PowerMax Fitness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with PowerMax Fitness's Owner's Manual. PowerMax Fitness's obligation under this warranty is limited to replacing or repairing, free of charge, any parts which may prove to be defective under normal home use. This warranty does not include any damage caused by improper operation, misuse or commercial application. From the date of purchase, the frame is warranted to be free from defects for 1(one) year*.

Customer Care

Phone: +91-8080-206-206

Email: support@powermaxfitness.net

Support / Complaint Generation: support.powermaxfitness.net

This warranty is extended only to the original owner and is not transferable.

When ordering replacement parts please have the following information ready:

1. Owner's Manual
2. Model Number
3. Description of Parts
4. Part Number
5. Date of Purchase

* Terms and Conditions Apply. For T&C visit www.powermaxfitness.net



Thank you very much for purchasing this product, to be able to use the product, be sure to read this manual.

TREADMILL MAIN PARAMETERS

1. Running Area: 1150*405mm
2. Max User' s Weight: 110KG
3. Set up Size: (L*W*H)1450*710*1220mm
4. Folding Size: (L*W*H)600*710*1410mm
5. Speed: 1-14km/h
6. Mode: "Manual" ; "Time countdown" ; "Distance countdown" ; "Calories countdown" ; "Auto" . In accordance with Monitor instruction.
7. 12 sport modes can be set up by own needs.

SAFETY



Warning

- Please don' t use this machine with illness, fatigue and drunk.
- Children should use this machine under adults accompany.
- Please wear comfortable clothes, avoid flip flop or skirt when using this machine.
- Please start from suitable sport as excessive exercise may affect health.
- Loading capacity is 110KG, overload may cause damage.

Attention

- It' s common home use machine, please avoid commercial use.
- Please avoid using this machine at fire source location.
- Please exercise in wide space without any danger.
- When use in the floor, please be sure cover the carpet to avoid damage to the surface
- When not use, please don' t set it on the place as follows:
 - A. Overheat, over cold place.
 - B. Outdoors, direct sunlight place.
 - C. Gas stove, near the fire place.
 - D. Cold and more moisture places.
 - E. Child touch place.
 - F. Soot, water vapor place.
- Please don' t use this machine on the uneven places.

PACKING DETAILS

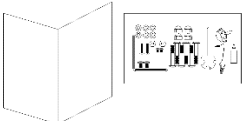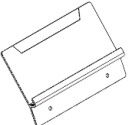Frame		Manual + Screw package	
iPad support			

SCREW PACKAGE (MONOFUNCTIONAL)



ASSEMBLY STEPS

Step 1: Extending the framework

Take the treadmill out of the box and put it on the flat ground. As shown in the arrow in Figure 1, the two sides of the column are slowly protected to a fixed


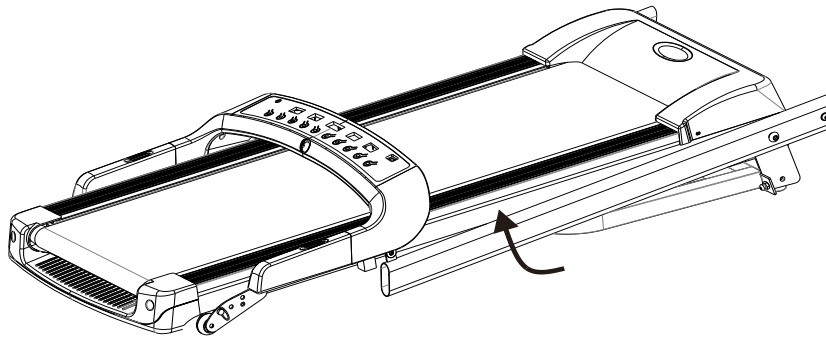


Figure 1

Step 2: Assembly 1

Figure 2: Left and right A. M 8 * 40 screw and B gasket. Fix column on base of treadmill respectively with M 5 inner hex wrench. Tighten C with wrench.

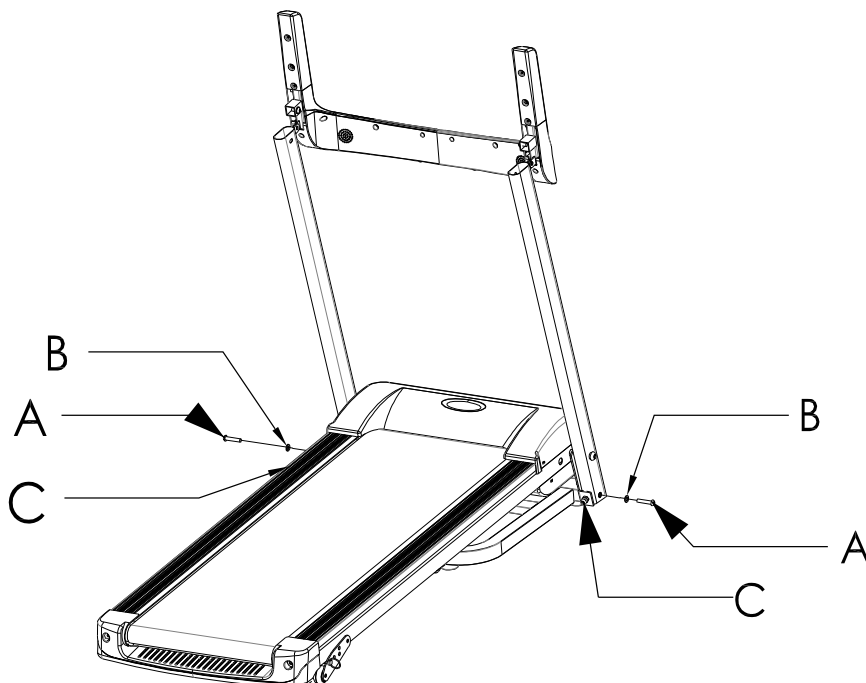

As Figure 3: Fold the electronic table on the column in the direction of the arrow. M 8 * 16 and B 2 PCs respectively fix the electronic meter to the column and tighten with the M 5 wrench.

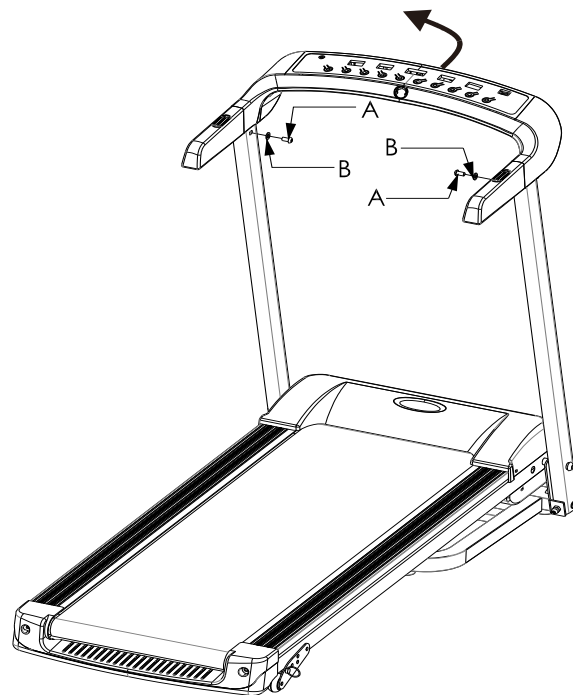


Figure III

Figure 4: The IP bracket is fixed to the electronic meter with 2PCS.M5 * 16(B) with a screwdriver. Treadmill assembly complete. This treadmill has a manual slope adjustment. A total of 3 paragraphs are shown in Figure C.




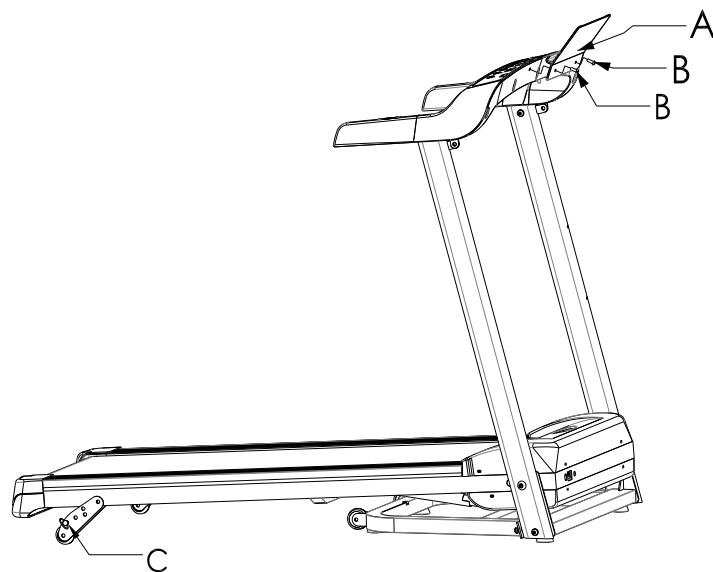


Figure IV

FOLDING AND UNFOLDING

Folding Mode		The main platform has a cylinder. Only gently lift the tail of the main frame in the direction of the arrow in the figure. The main frame will be automatically folded to the appropriate position.
How to expand		Hold the cylinder arrow with your foot as we unfold and press the arrow at the end of the main frame with your hand while the treadmill owner slowly descends to the ground level.

NO LIFT ELECTRONIC WATCHES OPERATING INSTRUCTIONS

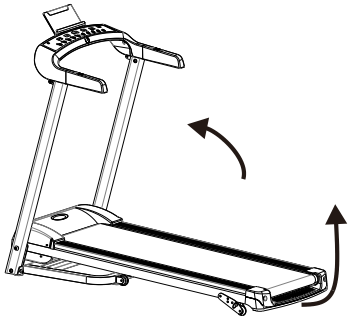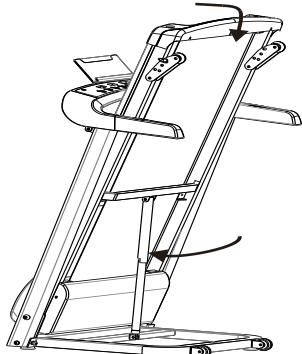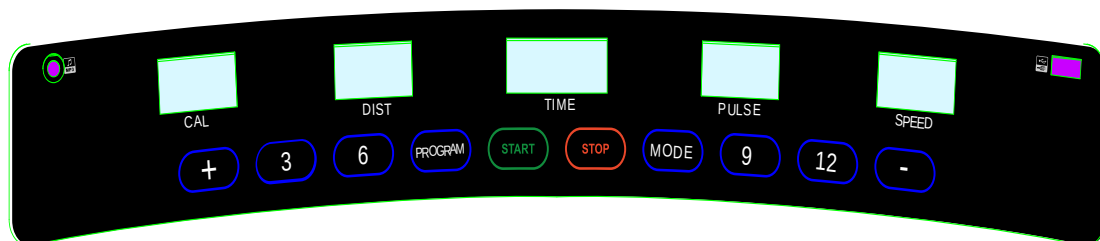

1. Description

Treadmill parameter; Sport parameter; Sport mode; Manual mode; Mode; Program mode.

2. Parameter Instruction

- Minimum speed 1km/h
- Maximum speed 14km/h
- Maximum exercise time: 99min under Time mode
- Minimum exercise time: 8min under Time mode
- Maximum exercise distance: 99km under Distance mode
- Minimum exercise distance: 1km under Distance mode
- Maximum calories consumption: 990cal under Calories mode
- Minimum calories consumption: 20cal under Calories mode

- Minimum time: 8min under (P1-P9) Program mode
- Maximum time: 99min under (P1-P9) Program mode

3. LCD Display Instruction

LCD (94774) shows: Speed, Time, Distance, Calories.

4. Button Function

Function button: Speed Shortcuts 4 (3, 6, 9, 12)

- "Start" button "Stop" button
- "Program" button "Mode" button
- "Speed+" button "Speed-" button

5. Button Function and Operation

- "Start" button - Start the motor
- "Stop" button - Stop the motor
- "Program" button - Auto program selection
- "Mode" button - Countdown mode selection
- "Speed+/-" button - Adjust speed when running, adjust parameter value when setting
- "Speed Shortcuts" - Directly select speed value when running

6. Sport Mode

A. Manual mode

Enter manual mode: After the electronic power meter-wide display, enter the initial standby mode, then press the start button, enter to manual mode.

B. Countdown mode

- Enter time countdown mode: In the initial standby mode press Kin selection time countdown mode, where the time window 30:00 minutes and flashing speed by +/- keys set the desired run time, set the range of 8: 00-99: 00 minutes, press the start button to enter the running time countdown mode.
- Enter distance countdown mode: In the initial standby mode, press the mode button to select the mode from the countdown, this time from the window 1.0 kilometres and flashes, the distance travelled by the speed +/- key set the desired setting range 1.0 to 99.0 kilometres, press Start key to enter the distance countdown mode.
- Enter calories countdown mode: In the initial standby mode, press the mode button to select the calorie countdown mode, then 50 calories window displays and flashing speed by +/- keys to set the required run-calorie, setting range from 20 to 990, press the Start button to enter calorie countdown mode.

C. Auto mode

Enter auto mode: In the initial setting mode or standby state, press the key to enter the program automatic program selection. At this time window 30:00 minutes and flashes through speed +/- keys set the desired run time, set the range of 8: 00 ~ 99: 00 minutes, press the Start button to enter the automatic program.

7. Sleep Function

When the treadmill stops running without any operating more than 10 minutes into hibernation, spreadsheets automatically turn off the display, press any key to wake electronic form, re-enter standby mode after the initial full-display.

8. Safety lock function

After normal use, the need to specify the location of the safety lock into electronic form before they can operate electronic form; safety lock to win, spreadsheets or E07 LCD window displays "---", and accompanied by a beep every second warning; as in the running, won the safety lock, the system will quickly stop, close again the safety lock, all motion data is cleared.

9. Each numerical display range:

	Initial	Set initial value	Setting range	Display Range
Time (minute: sec)	0:00	30:00	8:00-99:00	0:00~99:59
Speed (km/h)	0.0	N/A	N/A	1-14
Distance(km)	0.0	1.0	1.0-99.0	0.0-99.9
Pulse				
Calories (Kcal)	0	50	20-990	0-999

SCHEDULE 1: P1-P9 PROGRAM MOTION MAP

时间段 程式		设置的时间 / 10 = 每个段的运行时间									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	3	3	6	5	5	4	4	4	4	3
P2	SPEED	3	3	4	4	5	5	5	6	6	4
P3	SPEED	2	4	6	8	7	8	6	2	3	2
P4	SPEED	3	3	5	6	7	6	5	4	3	3
P5	SPEED	3	6	6	6	8	7	7	5	5	4
P6	SPEED	2	6	5	4	8	7	5	3	3	2
P7	SPEED	2	9	9	7	7	6	5	3	2	2
P8	SPEED	2	4	4	4	5	6	8	8	6	2
P9	SPEED	2	4	5	5	6	5	6	3	3	2

TREADMILL COMMON ERROR MESSAGES PROMPT

DESCRIPTION

E01: Communication blocked between Electronic and controller.

Solution	When communication line is blocked between Electronic and under controller	Please connect again or change communication line
	When Electronic without signal	Change Electronic to repair
	When under controller without signal	Change under controller to repair

E02: The controller does not detect the voltage of the motor line.

Solution	Motor cable is not connected	Check connection
	No voltage output or abnormal by under controller	Change under controller to repair
	Motor is bad	Change motor

E03: When the motor is running, the controller can't test the speed signal.

Solution	Motor cable is not connected	Check connection
	Under controller with abnormal signal	Change under controller to repair

E05: When the motor is running, current exceeds the rated current.


Solution	Treadmill motor load exceeds the rated current	Recommend within the rated current of the motor
	Treadmill motor assembly structure problems, causing the motor blocked or resistance	Check the structure of treadmill
	By limiting control system failure	Change under controller to repair

E07: Monitor can't test the signal of security lock.

Solution	Safety Magnet off	Please set magnet safety lock correctly
	Electronic Safety lock system malfunction	Change electronic to repair

Running belt adjustment method

1. When running belt lean to the left, adjusting screw on the left 1-2 turns along the clockwise. Then, test running; If still lean to the left, repeat the above steps until back to the centre.
2. When running belt lean to the right, adjusting screw on the right 1-2 turns along the clockwise. Then, test running; If still lean to the right, repeat the above steps until back to the centre.
3. When the running belt too tight, it will cause stronger resistance. Please adjust both sides screw 1-2 turns along the counter clockwise, loosen the belt until stopping skidding or pausing; When the running belt too loose, please adjust both sides screws 1-2 turns along the clockwise.

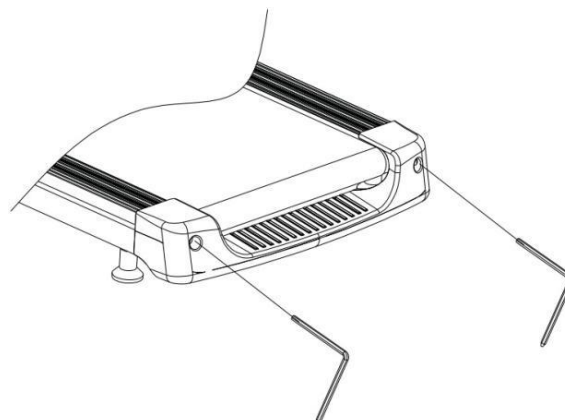

Use the Treadmill Lubricant

Location is in the middle of the lower surface of the running belt. When add lubricant, please inject to the centre of running board, then put down the belt, pressing the hole by hands, rotating the belt to apply evenly.

