





QUICK START GUIDE

PARTS

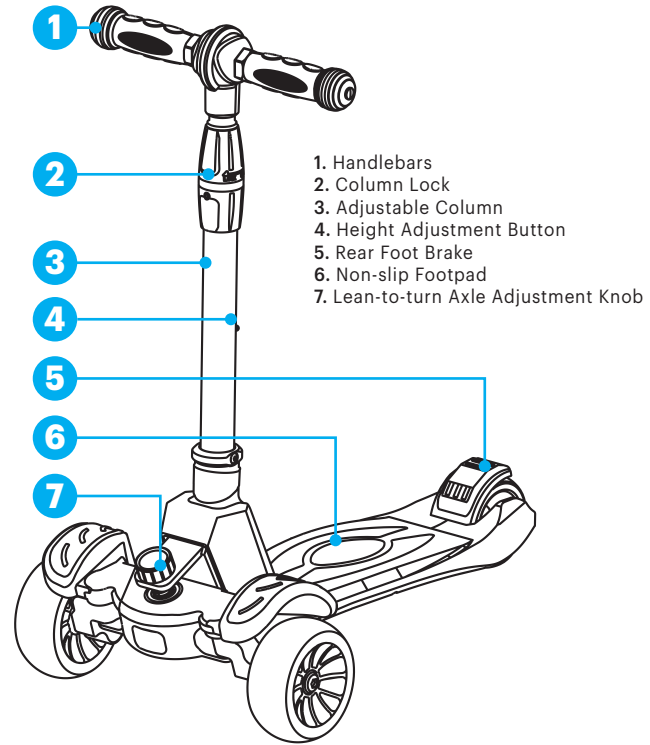

PINCH POINTS

Some parts of your scooter can injure you if mishandled. Moving parts, clamps, and height-adjustable parts can cut or pinch skin. Please watch for pinch points where injury may be sustained. Do not leave your hand or fingers in these areas while folding or unfolding the scooter.

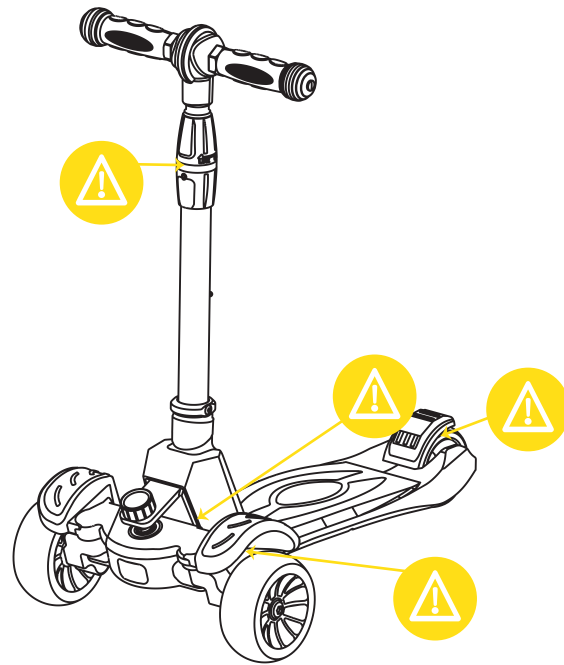


QUICK START GUIDE

FOLDING / UNFOLDING

ADULT SUPERVISION REQUIRED

To fold your Vivid, locate the release latch at the bottom of the scooter. Pull the release latch down and pull the handlebars down until the column is horizontal. To unfold your scooter, pull the handlebars up until the column is vertical. Make sure the release is secured before riding.

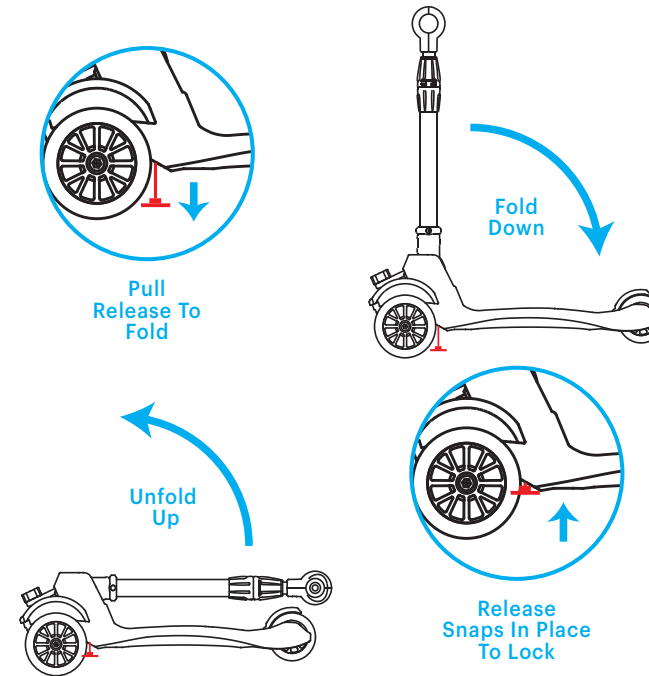

HEIGHT ADJUSTMENT

To adjust the height of the handlebars, unscrew the column lock and push the height adjustment button in. While the button is pushed in, raise or lower the handlebars to the desired height. Make sure the height adjustment button clicks into place, and screw the column lock tight to secure the column.

