



FRAMEMASTER™ POINT DRIVER

OPERATION & MAINTENANCE

FRAMEMASTER™ NAGELPISTOLE

BENUTZUNG UND WARTUNG

Seite 5

FRAMEMASTER™ POINTES POUR ENCADREMENT


FONCTIONNEMENT ET ENTRETIEN

Page 9

APLICADOR DE PUNTAS FRAMEMASTER™

OPERACIÓN Y MANTENIMIENTO

Página 13

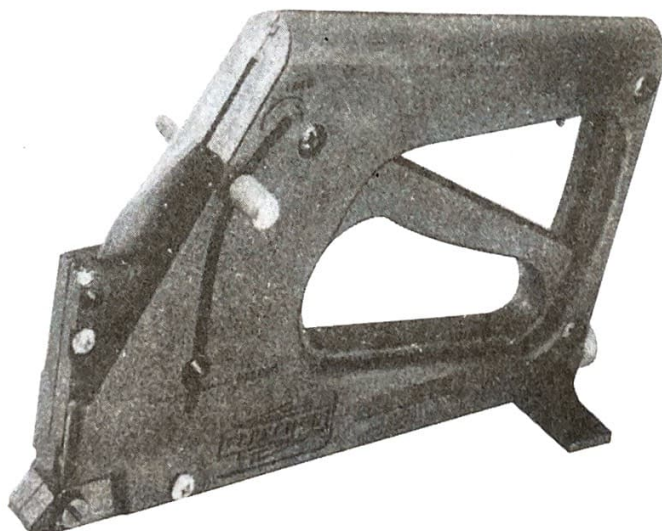

THE FLETCHER-TERRY COMPANY

91 Clark Drive East Berlin, CT 06023-1104 • 1-800-THE-FTCO (860) 677-7331 • Fax (860) 676-8858

Form 1095

FRAMING

OPERATION

Your FrameMaster is factory set for framing points. Order #08-950 is available in boxes of 3,000.

INSERTING FRAMING POINTS

1. To insert a stack of framing points (A), pull follower knobs (B) up and rotate to the locked position. Figure 1.
2. Insert the points into the slot in the magazine (C) and release the follower knob so it can apply pressure to the stack of points. Figure 2.
3. Reload points when the follower knob reaches the RELOAD position (D). There are 100 points per stack.

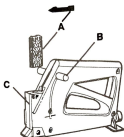


Figure 1

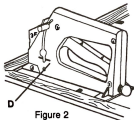


Figure 2

PRESSURE ADJUSTMENT

The pressure adjustment (E) will affect the depth of penetration of the point in wood. Although factory set accommodates most frames, the depth can be increased by turning the knob clockwise and decreased by adjusting it counterclockwise. Figure 3.




Figure 3



WARNING

Use safety glasses when using this tool.

WARNING

Do not operate the FrameMaster unless the nose is against the wood, otherwise, the point may injure you or someone nearby.

GLAZING



CHANGING THE MAGAZINE FOR GLAZING POINTS

The magazine (F) must be removed, inverted and reinstalled to convert to glazing points (G) which are shorter than framing points. Replacement glazing points, order #08-980, are 100 per stack and 5,000 per box.

1. Raise the follower knob and lock it out of the way as you would when loading points. Remove any points still in the magazine.

2. Remove the screw and nut (H) at the nose of the FrameMaster and slide the magazine out the front. Figure 4.

3. Turn the magazine upside down and reinsert it. Replace the screw and nut and tighten firmly. You will now see the G stamped on the upper side of the magazine. Figures 5 & 6.

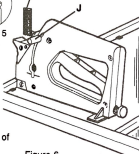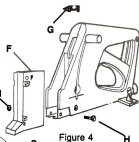

INSERTING GLAZING POINTS

The glazing points must be loaded in the front of the magazine cavity. Figure 5. Release the follower (J) to apply pressure to the top of the stack of points.

CAUTION

Do not use framing points in the glazing position or glazing points in the framing position. Note the symbols on the top left of the magazine, F for framing and G for glazing.


GENERAL OPERATION OF THE FRAMEMASTER

1. Whether framing or glazing, back up the wood with a firm object to assure proper penetration of the point and avoid shocking the frame.
2. ALWAYS keep the magazine loading area free of foreign matter.

MAINTENANCE AND TROUBLE SHOOTING

PROBLEM	PROBABLE CAUSE	ACTION
Does not fire point	Out of points Point jammed	Reload new stack of points Remove points and magazine. Remove jammed points and clean magazine
Fires double points	Magazine screw loose	Tighten nut firmly
Point penetration not deep enough	Magazine screw loose Frame not firmly backed up Pressure adjustment loose	Tighten nut firmly Use firm backing Tighten pressure screw

PARTS LIST

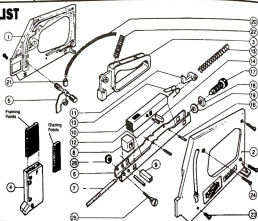

ORDER			ORDER				
ITEM NUMBER	PART NAME	QTY	ITEM NUMBER	PART NAME	QTY		
1	12-726	Handle (Rt. Hand)	1	14	12-713	Spring Stop Plate	1
2	12-727	Handle (Left Hand)	1	15	12-714	Main Spring	1
3	12-702	Trigger Assembly	1	16	12-715	Guide Pin	3
4	12-728	Magazine Assembly	1	17	12-716	Adjusting Knob	1
5	12-704	Follower Assembly	1	18	12-717	Square Nut	1
6	12-729	Channel	1	19	12-718	Washer	1
7	12-730	Push Plate	1	20	12-719	Follower Spring	1
8	12-707	Bumper	1	21	12-720	Cap	1
9	12-708	Stop Bar	1	22	12-721	Trigger Spring	1
10	12-709	Hammer	1	23	12-722	6-32 x 3/8 Screw	2
11	12-710	Pawl	1	24	12-723	8-16 x 5/8 Screw	3
12	12-711	Pawl Pin	1	25	12-731	Magazine Screw	1
13	12-712	Dbl Torsion Spring	1	26	12-725	Magazine Nut	1