

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on or near children or individuals with certain disabilities.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: InfinitiPRO by Conair®

Model No.: S9 Waver

Description: Straightening Comb

Responsible Party: Conair Corporation,
1 Cummings Point Road, Stamford, CT 06902 (203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 01/11/2021

USER MAINTENANCE

Your waver is virtually maintenance free. No lubrication is needed. If cleaning becomes necessary, disconnect the waver from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the waver, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

15. Do not operate with a voltage converter.

16. This appliance is not a toy. Keep away from children.

17. Before plugging in, read the information about dual voltage in the Operating Instructions section below.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This curling appliance is intended for household use. Use on Alternating Current (50/60 hertz) only. This unit is designed to be operated at 120/240V AC.

This has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.

DUAL VOLTAGE

This appliance will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

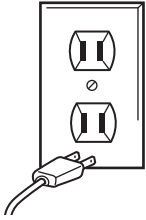

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

TOURMALINE CERAMIC EASY-GLIDE BARRELS

The barrels of your new waver have a tourmaline ceramic easy-glide surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll also find that hair glides easily over the surface of the barrel as you're using the device. The tourmaline ceramic surface helps smooth down flyaways, too. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

The new tourmaline ceramic technology is a pleasure to work with and makes styling your hair easier and the results more professional.

GETTING STARTED

SWITCH ACTIVATION CONTROL

IMPORTANT! This appliance features delayed activation control. Immediately after turning the appliance on, you are able to adjust the temperature. After 5 seconds of the appliance being turned on, the control buttons will automatically lock. To adjust the controls, hold down the heat control buttons "HIGH" or "LOW" button for 1-2 seconds. This will deactivate the lock mode and allow the settings to be changed. To turn off the appliance while in lock mode, hold down the ON/OFF button until the appliance switches off.

Plug the waver cord into any household outlet (120/240V). Press and hold the ON/OFF button for approximately 1 second to turn the appliance on. The unit will heat up very quickly. Press "HIGH" or "LOW" button to select your desired temperature. Once the temperature has stopped blinking on the LED, the unit is ready to use. To turn unit off, press and hold the Power ON/OFF button again until light goes off.

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

BEAUTY TIPS:

To achieve the looks you love and for more great InfinitiPRO by Conair® products, visit infiniti.conair.com

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at www.conair.com/registration

For information on any Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com


©2021 Conair Corporation

21PA075205

IB-16992

INFINITI **PRO**
BY CONAIR

TRIPLE BARREL WAVER

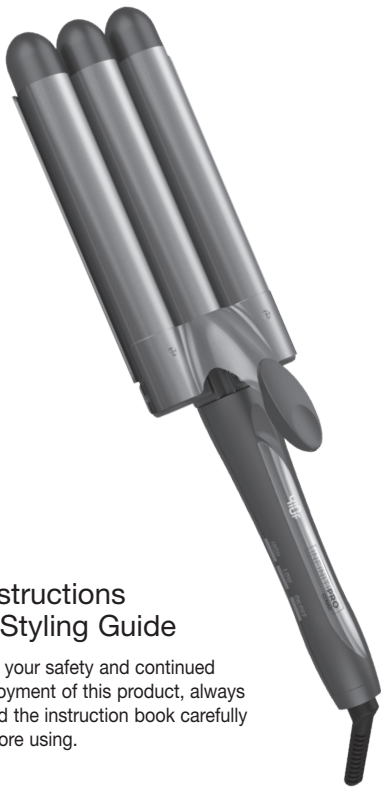


Instructions & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Model S9 – All Versions

GET TO KNOW YOUR WAVER

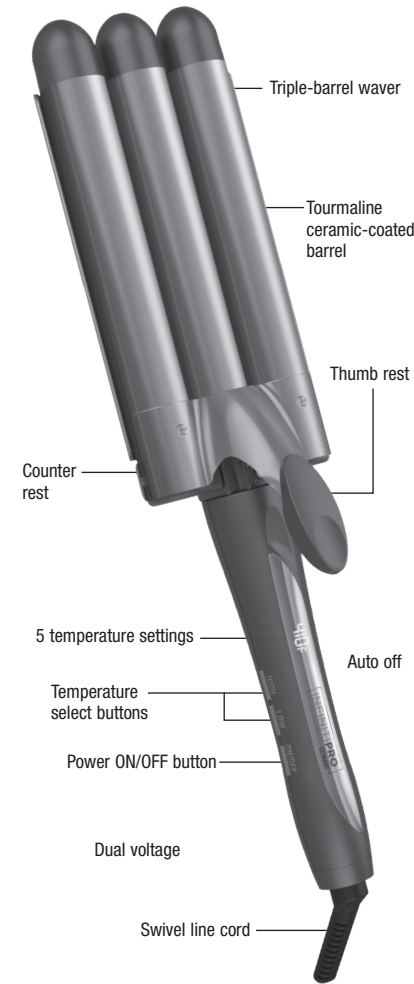

TO CREATE DEEP WAVES

Hair should be clean and completely dry before using the styling iron. For best results, use a light styling product before blow-drying hair.

1. Start with a section of hair that is 2 inches wide and place hair between barrels.
2. Starting at the scalp, lightly clamp, moving toward the ends of your hair.
3. Hold the styler 5–10 seconds prior to releasing and sliding down. For gentle, soft waves use larger pieces of hair. For more defined waves, use smaller sections of hair.
4. This process requires some overlapping to create waves in the hair. Repeat the process until you have achieved the look you desire. Some experience is necessary when learning to use this styler. After using the styler several times, you will learn the ideal way to style your hair easily.

IMPORTANT

Never leave your appliance on and unattended. However, should you fail to turn the waver off, it will shut itself off automatically within 60 minutes.



AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo.

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que pueden causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo produce alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, entre ellas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución:

- Siempre desenchufe el aparato inmediatamente después del uso.**
- No lo use en el baño o la ducha.
- No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer al agua u otro líquido.
- Si el aparato se cae al agua, desenchúfelo inmediatamente; **no trate de alcanzar la unidad en el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones:

- Reorientar o reubicar la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.
- Conectar el equipo a un circuito distinto al que esté conectado el receptor.
- Consultar con el distribuidor o un técnico especializado en radio/TV.

DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR

Marca: InfinitiPRO by Conair®

Modelo: Rizador S9

Descripción: Peine alisador

Parte responsable: Conair Corporation, 1 Cummings Point Road, Stamford, CT 06902 (203) 351-9000

Normas: Normas de la FCC, Sección 15, subsección B ANSI C63.4-2014 Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que pueden causar un funcionamiento no deseado.

FECHA DE PUBLICACIÓN: 11/01/2021

INSTRUCCIONES DE MANTENIMIENTO

Este aparato requiere poco mantenimiento. No requiere lubricación. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie el exterior con un paño limpio. En caso de mal funcionamiento, desenchufe el aparato, permita que se enfríe y devuélvalo a un centro de servicio autorizado. No trate de repararlo.

PRECAUCIÓN


NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su rotura o un cortocircuito. Revise el cable con frecuencia para comprobar que no está dañado. Deje de usar el aparato inmediatamente si el cable está visiblemente dañado o si el aparato deja de funcionar, o funciona de manera intermitente.

ALMACENAMIENTO

Cuando no lo usa, su aparato es fácil de almacenar. Permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue, o que la junta que lo conecta al aparato esté suelta y recta.

ADVERTENCIA:
SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

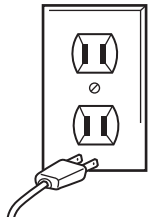

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿sabía usted que un aparato eléctrico permanece bajo tensión, aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

DOBLE VOLTAJE

Este aparato se adaptará automáticamente al voltaje adecuado. Nota: Puede que sea necesario usar un adaptador de viaje (no incluido).

REVESTIMIENTO DE CERÁMICA/ TURMALINA DE FÁCIL DESLIZAMIENTO

Los tubos de su nuevo rizador están cubiertos con una capa de cerámica/turmalina de deslizamiento suave, lo último en tecnología de peluquería. Notará que el cabello se desliza fácilmente sobre la superficie de los tubos y que es muy fácil limpiar el aparato después de cada uso. El revestimiento de cerámica/turmalina también ayuda a controlar la estática. Distribuye el calor uniformemente, para crear peinados sedosos y brillantes, igual que en el salón.

Es un placer trabajar con esta nueva tecnología, pues facilita el peinado y logra resultados profesionales.

FUNCIONAMIENTO BÁSICO

FUNCIÓN DE BLOQUEO DE LA TEMPERATURA

¡IMPORTANTE! Este aparato cuenta con una función de bloqueo de la temperatura. Podrá ajustar la temperatura solamente inmediatamente después de encender el aparato. Después de 5 segundos, los controles se bloquearán automáticamente. Para ajustar la temperatura después de este tiempo, mantenga presionados los botones HIGH y LOW por 1 a 2 segundos; esto desactivará el modo de bloqueo y permitirá ajustar la temperatura. Para apagar el aparato mientras está en el modo de bloqueo, mantenga presionado el botón ON/OFF por 1 a 2 segundos.

GARANTÍA LIMITADA DE DOS AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) este producto sin cargo por un periodo de 24 meses a partir de la fecha de compra si presenta defectos de fabricación o materiales.

Para obtener servicio técnico bajo esta garantía, devuelva el producto defectuoso al Centro de Servicio indicado a continuación, junto con su recibo de compra. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones en la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CONSEJOS DE BELLEZA:

Para conseguir los peinados que le gustan o descubrir más productos InfinitiPRO by Conair®, visite infiniti.conair.com

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para registrar este producto, visítenos en: www.conair.com/registration

Para más información sobre los productos Conair®, llame al 1-800-3-CONAIR o visítenos en www.conair.com


©2021 Conair Corporation

21PA075205

IB-16992

Modelo S9 (todas las versiones)

FAMILIARÍCESE CON SU RIZADOR

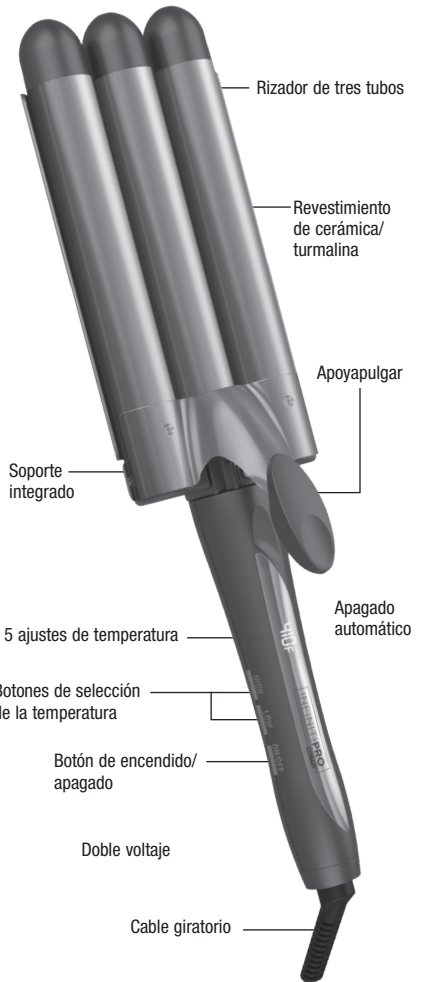

CÓMO CREAR ONDAS MARCADAS

El cabello debe estar limpio y completamente seco. Para obtener resultados óptimos, aplique una loción fijadora ligera en el cabello antes de secarlo.

- Separe una sección de cabello de 2 in. (5 cm) de ancho y póngala entre los tubos.
- Empezando cerca del cuero cabelludo, agarre, preñe suavemente y luego suelte el cabello. Repita el proceso, desplazando el aparato poco a poco hacia las puntas.
- Mantenga el aparato cerrado por 5 a 10 segundos antes de posicionarlo más abajo. Para crear ondas suaves, use secciones de cabello más anchas. Para crear ondas más definidas, use secciones de cabello más delgadas.
- Este proceso requiere algo de superposición para crear ondas uniformes. Repita el proceso hasta conseguir el estilo deseado. Nota: Será necesario experimentar un poco al principio. Con práctica, encontrará la manera perfecta para peinarse fácil y rápidamente.

IMPORTANTE

Nunca descuide/deje este aparato sin vigilancia después de encenderlo. Sin embargo, para su seguridad, este aparato se apagará automáticamente después de 60 minutos.