

hyppr

**Sonic 100W
2-Port PD 3.0 GaN Wall Charger**

User Guide


Model: HPPC001

Please read this User Guide thoroughly before use of the product and retain for future reference.

Package Contents

1 x Hyppr Wall Charger
1 x User Guide

Product Diagram

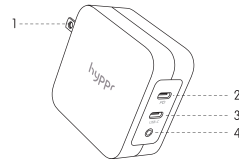

1) AC Pin
2) PD Output Port
3) USB-C Output Port
4) LED Indicator

Specifications

Model	HPPC001
Input	AC 100-240V 50 / 60Hz 2.5A Max.
PD or USB-C Output	DC 5V3A / 9V3A / 12V3A / 15V3A / 20V5A (EACH 100W Max.)
PD and USB-C Output	DC 5V3A / 9V3A / 12V3A / 15V3A / 20V2.25A (EACH 45W Max.)
Total Output	100W Max.
Dimensions	68 x 66 x 32 mm / 2.7 x 2.6 x 1.3 in
Net Weight	197g / 6.95oz

Using Your Wall Charger

! Please make sure there is nothing plugged into any of the USB ports.

1) Connect your device to the wall charger with a USB Type-C charging cable, then plug the wall charger into the wall outlet via its AC pin.



2) Remove the wall charger from the wall outlet once charging is completed.



Note:

- The charging cable is not included in the package.
- The LED indicator will keep on once connected to a wall outlet, and go out when disconnected (or stay on for 2mins if no device is connected).

Caution

Failure to observe the following may result in accidents or damage to other equipment.

- Use the power supply voltage as specified (AC 100-240V).
- During thunderstorms, do not touch the product, cable or plug.
- Do not touch this product with wet or dirty hands.
- Do not plug in the product with dust or dirt on the plug.
- Do not open, repair, or modify this product by yourself.
- Do not plug in the plug or the cable connector in the opposite direction or at an angle.
- Do not wet this product with liquids like water, and do not get liquids, metals, or other foreign objects inside the product.
- Do not use or store this product in highly humid or moist places, direct sunlight, dense dust, or in high temperatures such as in a car under the sun or near a heater.
- Please unplug after charging is completed.
- Do not place flammable materials or heavy objects on the product or cover or wrap it with blankets or cushions.
- Keep out of reach of children.
- If any abnormality (smoke, smoking, odor, deformation, etc.) occurs in this product, stop using it immediately.
- To prevent damage by static electricity, touch a metal object first to discharge static electricity on your body.

- Do not directly touch the port and plug of this product with your finger.
- Be careful not to allow liquids (sweat or water) or foreign objects (fine dust, dust, metal chips, etc.) to adhere to the port or cable connector connected.
- Do not leave the plug or cable in a dusty or humid place for a long time. Regularly clean the surface and between the blades to remove dust.
- Check the cable connector direction before connecting the and straight insert in.
- Do not subject this product to strong vibration or impact.
- This product is for indoor use only. Do not use outdoors.
- Do not use or store this product in an unstable place.
- Do not use the plug with a bent blade.
- Do not use if the case is broken.
- Do not use with the plug inserted halfway.
- When not in use, disconnect the power plug from the outlet for safety.
- Please use in indoor environment of 5 C -35 C / 41°F-95°F.
- This product can generate some heat during use, but this is not a malfunction. If the product itself or the connected device becomes extremely hot or if you feel any abnormality, stop using it immediately.
- Avoid dropping.
- Dispose the product as per local law and regulations.

Warranty

- 12-month warranty
- Life-time support

Please contact our customer service at **support@thehyppr.com** for warranty extension or any questions about the product.

For more, please visit **www.thehyppr.com**.

Note: This warranty is void if the defect is caused by:

- Damage caused by force majeure.
- Accidental damage, misuse, abuse, or neglect.
- Improper repair or alteration by unauthorized persons.
- Expired warranty period.



Scan for more details
www.thehyppr.com

©Libro Corp. All Rights Reserved.
Manufacturer: Shenzhen Libro Technology Co., Limited
Address: 133 Xuegang North Road, Shenzhen, China, 518129
JP Importer: 株式会社 Designlibro Japan
Made in China

HPPC001_V1.0



hyppr

Sonic 100W
2ポートPD 3.0 GaN USB-C急速充電器

取扱説明書


モデル: HPPC001

この度はHyppr本製品をお買い上げいただき、誠にありがとうございます。
・ご使用になる前に必ず本書をお読みください。
・将来いつでも使用ように大切に保管してください。

セット内容

- 1 x USB充電器本体
- 1 x 取扱説明書 (本書)

各部の名称

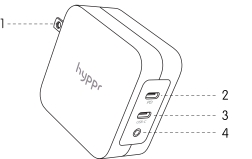

- 1) ACプラグ
- 2) PD出力ポート
- 3) USB-C出力ポート
- 4) インフォメーションLED


仕様書

モデル	HPPC001
定格入力	AC 100-240V 50 / 60Hz 2.5A Max.
定格出力 (1 ポート使用する際)	DC 5V3A / 9V3A / 12V3A / 15V3A / 20V5A (EACH 100W Max.)
定格出力 (2 ポート同時に使用する際)	DC 5V3A / 9V3A / 12V3A / 15V3A / 20V2.25A (EACH 45W Max.)
MAX出力	100W Max.
サイズ	68 x 66 x 32 mm / 2.7 x 2.6 x 1.3 in
重量	197g / 6.95oz

使用方法について

USBポートに何も接続されていないことを確認してください。

1) 機器に対応したUSBケーブルで、機器と本製品を接続します。本製品のACプラグを家庭用コンセントに差し込みます。



2) 充電が完了したら、ケーブルを使用機器から取外します。本製品をコンセントから取外します。



ご注意:

- ・本製品にはUSBケーブルは付属していません。ご使用になる機器に対応したUSBケーブルを別途ご用意ください。
- ・インフォメーションLEDは、家庭用コンセントに接続されると点灯し、切断されると消灯します。(デバイスが接続されなくても、2分間点灯する場合もあります。)

警告

下記の事項を守らないと火災・感電により、死亡や大けがの原因となります。

- 定められた電源電圧 (AC100-240V) で使用してください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 雷が鳴りだしたら、本製品やケーブル・プラグなどに触れないでください。
- ▲落雷により感電する恐れがあります。
- 濡れた手や汚れた手で本製品に触らないでください。
- ▲感電や故障の原因となる恐れがあります。
- 本製品のプラグ部にホコリ、ゴミが付着している状態で取付けないでください。
- ▲火災や故障、破損の原因となる恐れがあります。
- お客様ご自身で本製品の内部を開けたり、修理・改造したりしないでください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 本製品のプラグやUSBケーブルのコネクタなどを逆向きや斜めに取付けないでください。
- ▲火災や故障、破損の原因となる恐れがあります。
- 本製品を水などの液体で濡らしたり、内部に液体・金属などの異物が入ったりしないようにしてください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 本製品を水分や湿気の多い場所、直射日光の当たる場所、ホコリや油煙などの多い場所、車中や暖房器具のそばなどの高温となる場所に設置したり、保管したりしないでください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 充電が完了しない場合は、充電を中止してください。
- ▲発熱、発火、故障の原因となります。
- 可燃物や重いものを載せたり、毛布や座布団で覆ったり包んだりしないでください。
- ▲発熱、発火、故障の原因となります。
- 小さなお子様の手の届く所に置かないでください。
- ▲感電やけがの原因となります。
- 本製品に異常 (煙・発煙・異臭・変形など) が発生した場合は、すぐに使用を中止してください。

■注意

下記の事項を守らないと事故や他の機器に損害を与えることがあります。

- 定められた電源電圧 (AC100-240V) で使用してください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 雷が鳴りだしたら、本製品やケーブル・プラグなどに触れないでください。
- ▲落雷により感電する恐れがあります。
- 濡れた手や汚れた手で本製品に触らないでください。
- ▲感電や故障の原因となる恐れがあります。
- 本製品のプラグ部にホコリ、ゴミが付着している状態で取付けないでください。
- ▲火災や故障、破損の原因となる恐れがあります。
- お客様ご自身で本製品の内部を開けたり、修理・改造したりしないでください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 本製品のプラグやUSBケーブルのコネクタなどを逆向きや斜めに取付けないでください。
- ▲火災や故障、破損の原因となる恐れがあります。
- 本製品を水などの液体で濡らしたり、内部に液体・金属などの異物が入ったりしないようにしてください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 本製品を水分や湿気の多い場所、直射日光の当たる場所、ホコリや油煙などの多い場所、車中や暖房器具のそばなどの高温となる場所に設置したり、保管したりしないでください。
- ▲火災や感電、故障の原因となる恐れがあります。
- 充電が完了しない場合は、充電を中止してください。
- ▲発熱、発火、故障の原因となります。
- 可燃物や重いものを載せたり、毛布や座布団で覆ったり包んだりしないでください。
- ▲発熱、発火、故障の原因となります。
- 小さなお子様の手の届く所に置かないでください。
- ▲感電やけがの原因となります。
- 本製品に異常 (煙・発煙・異臭・変形など) が発生した場合は、すぐに使用を中止してください。

- 静電気による破損を防ぐために、事前に金属製のものに触れるなどして、人体の静電気を取除くようにしてください。
- ▲故障や破損の原因となる恐れがあります。
- 本製品のUSBポート・プラグ部には指などで直接触らないでください。
- ▲故障や破損の原因となる恐れがあります。
- 本製品のUSBポートや接続するケーブルのコネクタ部分に液体 (汗や飲料水) や異物 (細かいゴミやホコリ、金属片等) が付着しないように注意してください。
- ホコリ、湿気の多いところでは、プラグやUSBケーブルを長期間差しっぱなしにしないでください。ときどき、表面や刃と刃の間を掃除してホコリをとってください。
- 充電ケーブルのコネクタを接続する際は、接続の方向を確認してまっすぐ挿入してください。
- ▲火災や故障、破損の原因となる恐れがあります。
- 本製品に強い振動や衝撃を与えないでください。
- ▲故障や破損などの原因となる恐れがあります。
- 本製品は屋内専用です。屋外では使用しないでください。
- ▲結露などにより、火災や感電、故障などの原因となる恐れがあります。
- 本製品は不安定な場所に設置したり、保管したりしないでください。
- ▲落下により故障・破損の原因となることがあります。
- 刃の曲がったプラグは使用しないでください。
- ▲火災や故障、破損の原因となる恐れがあります。
- ケースなどが割れた状態では使用しないでください。
- プラグを中途半端に差し込んだ状態では、使用しないでください。
- 旅行などで長期間、本製品ご使用にならないときは、安全のため電源プラグをコンセントから抜いてください。
- 5℃～35℃の屋内環境でご使用ください。それ以外の環境でのご使用は、おやめください。
- 本製品を使用中、多少発熱しますが故障ではありません。本製品や接続対象機器が極端に熱くなったり、異常を感じた場合は、直ちに使用を中止してください。

保証について

- ・保証期間12ヶ月
- ・生涯サポート

保証延長また製品に関するご質問は、
support@thehyppr.com のカスタマーサービスにお問い合わせください。
詳細については、**www.thehyppr.com** をご覧ください。



Scan for more details
www.thehyppr.com

©Libro Corp. 全著作権所有
Manufacturer: Shenzhen Libro Technology Co., Limited
Address: 133 Xuegang North Road, Shenzhen, China, 518129
JP Importer: 株式会社 Designlibro Japan
Made in China
HPPC001_V1.0

