

PG-P4010 说明书 70G书写纸双面印刷/单色印刷 尺寸：105x142mm


Ninja run Gamepad

User Manual(PG-P4010)

Application Instruction:

1. The product is mainly compatible for games operation via P4 and P3 console/ Android (Android 10.0 or above)/ IOS (13.0 or above)/PC, support for any game version on P4.
2. High performance BT wireless connect technology, provide reliable signal without delay or disconnection within 8 meters,strong anti-interference performance and will not be affected by other wireless devices. driver-free, automatic connection, no complicated code matching process is required.
3. Built-in LED colorful light, the gamepad has colorful LED light bar to indicate the gamepad channel function and status. The indicator function is the same as the original P4 gamepad. Different gamepad are indicated by different color.
4. Built-in motor, support for dual motor and dual vibration function.
5. Built-in 3D acceleration sensor and gyroscope sensor, with six-axis sensor function.
6. Equipped with 3.5mm headphone jack as the outlet of the audio signal of the game.
7. The structure is ergonomic and feel comfortable.
8. BT connection method is the same as the original gamepad.
9. Support dual points capacitive sensor touchpad.
10. Support to charge lithium battery via USB cable.
11. Support for online upgrade via PC USB, support for the latest upgrade version of P4 console.
- 12.Support programming function, according to the user's preference, the normal function buttons or combination buttons can be set to S1-S4 programming buttons, convenient to use.

Instruction button function:

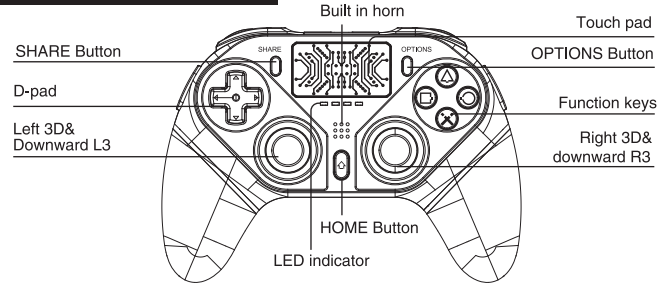

- 6.Touch screen test, P4 console setting--network connect--choose wireless network--input interface--test the touch screen function.
- 7.Gravity sensor,gyroscope function will have correspond motion reaction when operate in a console game that supports six-axes.
- 8.In the game can test the output sound of speakers and headphones. When plug in the headphones speaker are silent. remove the headphones, speaker play sound.

Connect P3/PC:

- 1.Connect gamepad to P3 / PC through USB data cable, use as wire gamepad.
- 2.P3 / PC terminal not support for six-axis induction and vibration functions. when connect to PC need to install P4 driver.
- Game Platform: P3 game platform.

Android device connect (Android standard HID mode):

- 1.When the gamepad turn off, turn on gamepad via pressing SHARE+HOME, and the indicator light flash quickly.
- 2.At the same time,search BT name on Android device and click "PG-P4010" to pair.
- 3.After paired successfully, the LED is always on, gamepad enters Android mode, can play games under Android standard protocol or download games from Octopus Game App.

IOS Device Connection (IOS Standard mode):

- 1.With the gamepad turn off, SHARE+HOM turns on the gamepad and the indicator lights flash intermittently.
- 2.At the same time, search BT name on IOS device and click "PG-P4010" to pair.
- 3.After paired successfully, LED is always on and can play MFI certificated games

Programming function:

- 1.Total 4 programming functional buttons (S1, S2, S3 and S4). Two at the left and right of the controller and the other two at the rear of controller. And can be programmed according to your own preference
- 2.Each programming buttons can program a single action buttons or multiple buttons. (for example ,△/○/×/□/ L1 / L2 / R1 / /2 L3 / R3 / cross buttons) can be set and programmed.
- 3.The programming button don't have turbo function.
- 4.Programming button has memory function, no matter the controller under sleep mode, turned off or restart, the controller will remember the latest working state.

- Program setting method:
- 1.Press and hold program button (eg-S1) then press OPTIONS button until mode LED flash quickly to release all buttons.
 - 2.Then press one or multiple buttons that you want programmed from(△/○/× /□/ L1 / L2 / R1 / R2 / L3 / R3 / cross buttons).



忍者游戏手柄

产品说明书(PG-P4010)中文版

产品适用说明:

1. 产品主要适用于P4兼容P3主机、安卓、IOS(13.0以上)、PC系统上连接进行游戏操作时使用,支持P4主机上的任何游戏版本。
2. 采用高性能无线连接技术, 提供8米以内无延迟不掉线的可靠信号, 抗干扰性强, 不会受其它无线设备的影响。免驱动, 自动连接, 无需繁琐的对码过程。
3. 内置LED彩色呼吸灯, 手柄具有彩色LED光条指示玩家手柄通道功能及状态指示, 指示功能方式同原装P4手柄相同, 不同的手柄由不同颜色的LED指示。
4. 内置左右非对称马达, 支持双马达双振动功能。
5. 内置3D加速度传感器和G陀螺仪传感器, 具有六轴感应功能。
6. 配置了3.5mm耳机插孔, 可以通过手柄的耳机输出游戏的音频信号。
7. 结构符合人体工学学,手感舒适。
8. 蓝牙联系方式与原厂手柄联机方式一致。
9. 支持双点电容式感应触控板。
10. 支持USB给锂电池充电。
11. 支持PC USB在线升级产品程序,从而支持PS4主机最新升级系统,可有郊避免因主机升级系统导致产品无法使用难题。
- 12.支持编程功能, 可根据用户的爱好, 把常用的功能键或组合键设置到侧边及底部的S1-S4编程键, 方便使用。

功能按键图示:

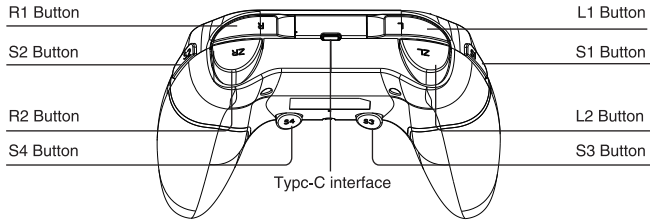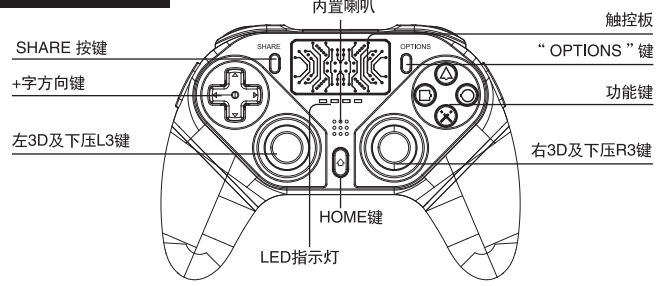

Product parameters:

- | | |
|-------------------------------------|---|
| 1.Charging Voltage: DC3.7V=50mA | 2.Battery capacity: 400mA |
| 3.Continuous play time: about 8H | 4.Charge Time: about 3H |
| 5.BT3.0, transmission distance: ≤8M | 6.Standby time: 30 days after fully charged |

Product User Manual :

Connect to P4 console:

- 1.Turn on P4 console and enters the interface,connect the gamepad to console via USB cable , and press button HOME (house logo), the gamepad LED light will flash quickly, when a single color LED is always on, means connection is successful, and then remove data cable. Repeat pressing button HOME on the gamepad, the gamepad and the console will reconnect automatically.
- 2.One press the HOME button: 1. Display the main screen, 2. Double press the HOME button to switch the starting application. 3. When gamepad is under sleep mode, one press to wake up. 4. No support for wake up the console.
- 3.Holding the HOME button: 1. End off application. 2. Logout / turn off P4 console . 3. Display the operatable items according to the current situation.
- 4.P4 console: gamepad SHARE button: can turn on (share)button. OPTIONS button: turn on select(option) button.P3 console: SELECT correspond to P4 SHARE button, START button correspond to P4 OPTIONS button.
- 5.Gamepad LED color indicator status description: display Player status, press the HOME button (PS button), the RGB color LED (light bar) will light up in blue, red, green, and pink, configure each controller, as the user login sequence identification. 1P:Blue, 2P:Red 3P:Green, 4P:Pink A.Working channel: P4 console support for connection up to 4pcs P4 gamepad at one time, gamepad will be indicated by different LED colors.B.After gamepad connected will correspond to each LED working channel, the first gamepad connected to the console , blue light lit on to indicate user 1, The second gamepad connect with console, the red light lit on to indicate user 2. Turn off P4 console power,LED color will turn off within 10 seconds and the system enter the sleep mode.

- 3.Press the Programming button (S1) again, mode LED returns to the display state before setting. That is to say, the programming setting is completed, and the mode indicator lamp returns to the display state before setting.
- 4.After successful programmed, the programming button (S1) has the same function as a single key or multiple keys just programmed.

Clear programmed setting method:

- 1.Press and hold the programming button (eg. S1) and OPTIONS button until mode LED flash quickly to release all buttons.
- 2.Press the programming button again to clear the programming settings.

Restore programming setting to factory settings:

- 1) Press and hold the 2 programming buttons at the rear of controller and OPTIONS button for about 3 seconds until the mode LED flash quickly, release all the buttons to return to the factory settings.
- 2.Factory default setting for programming buttons S1/S2/S3/S4 are as△/○/×/□.


Gamepad charging/low battery:

1. Low battery indication: When the gamepad battery voltage is above 3.6V, the indicator light is always on; when the battery voltage is at a low voltage of 3.3-3.6V, the indicator light flashes quickly at a frequency of 2.5Hz; when the voltage is lower than 3.3V, The gamepad enters the sleep mode.
2. Charging indication: When the gamepad is connected, insert the USB charging cable, and the LED flashes slowly at a frequency of 0.5Hz.
3. Charging indication: When the gamepad is not connected, the orange light shows gradually on/off to indicate that it is under charging, when the charging is completed, and the indicator light is off.

Notes:

1. Please do not store product in humid or high temperature places.
2. Do not knock, beat, puncture, or try to disassemble to avoid unnecessary damage to the product.
- 3.Non-professionals disassemble this product by mistake otherwise it will not be cover by the after-sales warranty service.

Included:

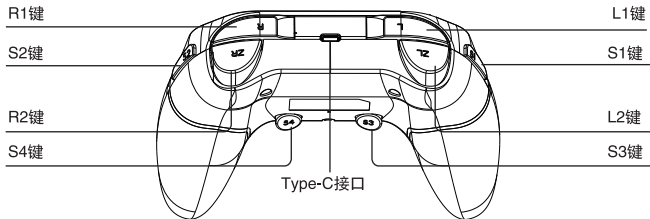

产品特性参数:

- | | |
|-----------------------|-----------------|
| 1.工作电压电流: DC3.7V=50mA | 2.电池容量: 400mA |
| 3.充满电持续使用时间: 约8小时 | 4.充电时间: 约3小时 |
| 5.无线3.0. 传输距离: ≤8M | 6.待机时间: 满电放置30天 |

产品使用说明:

连接P4主机:

- 1.P4主机开机进入界面后, 将数据线插入至主机的USB端口, 手柄连接上数据线, 然后按手柄端的小房子键 (HOME), 手柄LED灯会闪烁, 当手柄上单个颜色LED常亮, 表示连接成功, 然后按掉数据线. 按手柄端的小房子键 (HOME), 手柄与主机自动回连.
- 2.单按小房子键 (HOME): 1.显示主画面, 2.连接2次小房子键 (HOME)是切换启动中的应用程序. 3.手柄睡眠后单按可以唤醒手柄. 4.无唤醒主机功能.
- 3.长按小房子键: 1.结束应用程序. 2.退出关闭PS4主机电源. 3.会依目前状况显示可操作的项目.
- 4.P4主机中: 手柄SHARE键: 可以开启 (分享)按钮. OPTIONS键: 开启选择(选项)按钮.
- P3主机中: SELECT对应P4的SHARE键, START键对应P4的OPTIONS键.
- 5.手柄彩色LED指示状态说明: 显示Player状态, 按下小房子键 (PS键), RGB彩色LED (光条) 会依蓝色、红色、绿色、粉色顺序常亮, 配置各控制器, 作为使用者登入顺序辨识. 1P:Blue, 2P:Red 3P:Green绿, 4P:Pink粉红色
- A. 工作通道: P4主机提供一次最多能连接4个PS4手柄同时使用, 手柄由不同的LED颜色来指示.
- B. 如手柄连机后对应的通道LED指示所在工作通道, 第一支手柄连接上主机, 手柄端亮蓝色灯, 表示用户1. 第二支手柄连接上主机手柄端亮红色灯, 表示用户2. 关闭PS4主机电源, 彩色LED大概在10秒内熄灭, 系统处于休眠状态.
- 6.触摸屏测试: 在P4主机设置-网络连接-选择无线网络--输入界面--可以测试到触摸屏功能.
7. 重力感应, 陀螺仪功能在支持六轴的主机游戏内操作会有相应的动作感应。
- 8.在游戏内可以测试到喇叭和耳机的声音输出, 插入耳机时, 喇叭无声, 拔出耳机, 则喇叭发声。

连接P3/PC:

- 1.通过USB数据线将手柄连至P3/PC的USB端口, 当有线手柄使用。
- 2.P3/PC端不支持六轴感应和震动功能。连接PC电脑时, 需安装P4驱动程序。

安卓设备连接:

- 1.关机状态下SHARE+HOME开启手柄, 指示灯间隔性快闪。
- 2.同时, 在安卓设备的无线列表中, 找到并点击“ Wireless Controller ”进行配对
- 3.配对成功后, LED常亮, 手柄进入安卓模式。可以玩安卓标准协议下的游戏或进入葡萄游戏厅里下载游戏。

IOS设备连接 (IOS标准模式) :

- 1.关机状态下SHARE+HOME开启手柄, 指示灯间隔性快闪。
- 2.同时, 在IOS设备的无线列表中, 找到并点击“ DUALSHOCK 4 Wireless Controller ”进行配对。
- 3.配对成功后, LED常亮, 可以玩MFI认证的游戏。

编程功能:

- 1.四个编程键S1/S2/S3/S4分别在手柄底部与两侧, 可以根据自己爱好进行编程。
- 2.编程功能可实现对其中的任意一个动作按键或组合键进行编程 (单个编程键最多可设置10个键组合)。
- 3.设置编程键: 首先按住编程键 (如S1), 同时再按下OPTIONS、模式灯快闪后松开按键, 进入设置模式。
- 4.此时按下需要复制的一个或多个常规功能键(△/○/×/□/L1/L2/R1/R2/上/下/左/右)。
- 5.再次按下编程键退出, 即完成设置, LED彩灯回到设置前的显示状态。
6. 此时按下编程好的按键时相当于同时按下下一个或者多个按键 (如×/○/□/△同时按下)

清除编程键功能:

- 1.同时按住需要清除的编程键 (如S1) 和OPTIONS、模式灯快闪后松开按键再次按下需要清除的编程键, 即清除编程键功能。
- 2.编程功能具有关机保存功能, 手柄休眠, 关机后重新开机都能保存已编程功能。
- 3.编程键无TURBO连打功能
- 4.同时按住底部两个编程与options按键3秒, 此时模式灯快闪后, 松开按键手柄恢复出厂设置, 编程键出厂默认为 (△○×□)


忍者ゲームパッド

ユーザーマニュアル (PG-P4010)

製品特徴:

- 1.本製品はP4専用のコントローラーです。P4だけではなく、P3/Android/iOS (13.0以上) /Windows PCにも対応できます。すべてのP4用ゲームに適しています。
- 2.高性能ワイヤレス接続テクノロジーを採用し、遅延なく6メートル以内で信頼性の高い信号を提供し、ドロップせず、強い干渉を防ぎ、他のワイヤレスデバイスの影響を受けません。ドライバ不要の自動接続、複雑なコードマッピングプロセスはありません。
- 3.カラーLEDライト内蔵、表示色を観察して、コントローラーの接続状況とゲーム状態をより明確にできます。LEDライトの指示はP4のと同じで、異なるコントローラーは異なる色のLEDで示されます。
- 4.左右非対称モーターを内蔵し、デュアルモーターとデュアル振動機能をサポートしています。
- 5.3D加速度センサーとGジャイロセンサーを内蔵し、6軸ダイナミックセンシング機能をサポートしています。
- 6.3.5mmのヘッドフォンジャックを搭載し、ゲームのオーディオ信号をヘッドフォンから出力できます。
- 7.人因工学に基づくデザインを採用し、優れたフィット感を持ちます。
- 8.本製品のBT接続方式はP4の純正コントローラーのものと一致します。
- 9.タッチパッドを搭載し、タッチパッドが必要なゲームをサポートします。
- 10.USB充電式の400mAhバッテリーを搭載しています。
- 11.USBケーブルを使用してPCに接続し、最新のP4システムバージョンにアップグレードできます。アップグレードによって製品が使えなくなるのを避けます。
- 12.プログラミング機能をサポートしています。ユーザーの好みに合わせて、よく使われるファンクションキー又は組み合わせキーを側面や下辺のプログラミングキー (S1-S4) に設定できて、使いやすいです。

ボタン機能:

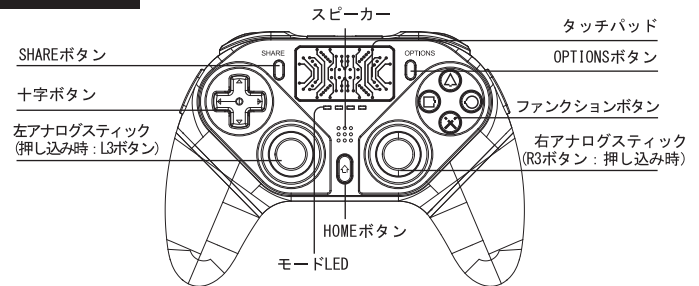

6. タッチパッドテスト: P4コンソール「設定」>「ネットワーク」>「インターネット接続」を設定する。>「Wi-Fiを使う」>「画面入力」; タッチパッドのテストができます。
7. 重力感应, 6軸ジャイロセンサーでゲーム中の操作は同等の動作感应ができます。
8. ゲーム中はスピーカーとヘッドホンのオーディオ信号の出力をテストできます。ヘッドホンが接続されていると、スピーカーから音がなくなります。ヘッドホンは取り外してから、スピーカーから音がでます。

P3/PCに接続:

1. コントローラーをP3/PCにUSBケーブルで接続し、有線コントローラーとして使用します。
2. P3/PC有線接続モードでは、六軸機能と振動機能はありません。PC接続時は、P4ドライバをインストールする必要があります。

Androidデバイスに接続:

1. コントローラーを電源オフの状態で、SHARE+HOMEボタンを押すとオンになります、コントローラーのLEDインジケータースタイルが素早く点滅します。
2. AndroidデバイスのリストからWireless Controllerを選択し、ペアリングしてください。接続が成功すると、LEDインジケータースタイルが常に点灯します。コントローラーがAndroidモードに入ります。推薦ゲームのダウンロード: 「Google Playストア」から「Gamepad games links」を検索してダウンロードしてください。製品対応の人気ゲームを数多くご用意しております。

IOSデバイス (IOS標準モード) に接続:

1. コントローラーを電源オフの状態で、SHARE+HOMEボタンを押すとオンになります、コントローラーのLEDインジケータースタイルが素早く点滅します。
2. IOSデバイスのリストからDUALSHOCK 4 Wireless Controllerを選択し、ペアリングしてください。
3. 接続が成功すると、LEDインジケータースタイルが常に点灯します。コントローラーがIOSモードに入ります。推薦ゲームのダウンロード: 「App Store」から「Gamepad games links」を検索してダウンロードしてください。製品対応の人気ゲームを数多くご用意しております。

プログラミングキーの設定方法:

1. コントローラーの左右側各1個プログラミングキー (S1/S2) があります、下辺にはプログラミングキー (S3/S4) があります。自分の好みに合わせて、カスタマイズできます。
2. 各プログラミングキーは、単一のファンクションキーをマッピングしたり、複数のキーをプログラミングしたりすることができます。単一のプログラミングキーは最大で10個のキーの組み合わせを設定できます。
3. プログラミングキーの設定方法: 設定を必要とするプログラミングキー (S1 / S2 / S3 / S4) と「OPTIONS」ボタンを同時に押します。その時、LEDランプが速く点滅し始めたらボタンを離します。設定モードになります。
4. コピーが必要とする1つまたは複数の一般的なファンクションキー(△/○/×/□/L1/L2/R1/R2/L3/R3/上/下/左/右) を押します。
5. プログラミングキー (S1/S2/S3/S4) をもう一度を押したら、終了し、設定が完了します。モードランプが設定前の表示状態に戻ります。
6. プログラミングが成功したら、プログラミングキーは先マッピングした単一のキーまたは複数のキーと同じ機能を持っています。



手柄充电/低电:

- 1.低电指示: 手柄电池电压在3.6V以上时, 手柄指示灯恒亮; 电池电压在3.3-3.6V低电压时, 手柄指示灯以2.5Hz的频率快闪; 电压低于3.3V时, 手柄进入休眠状态。
- 2.充电指示: 手柄连接状态时, 插入USB充电线, 手柄LED以0.5Hz频率慢慢闪烁。
3. 充电指示: 手柄未连接状态下, 橙色灯显示渐亮/渐灭表示正在充电, 充电完成, 指示灯熄灭。

注意事项:

- 1.请不要把本产品在潮湿或高温地方存储。
- 2.不要敲击、摔打、刺穿, 或试图去分解本产品, 以免对产品造成不必要的损害。
- 3.非专业人员误拆即本产品,否则不在售后保修服务内。

产品清单:

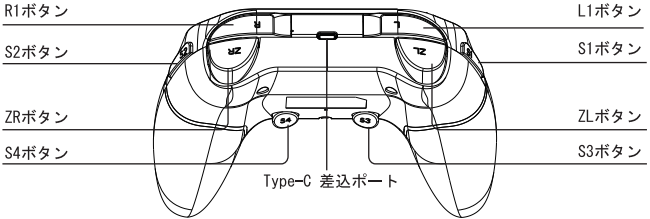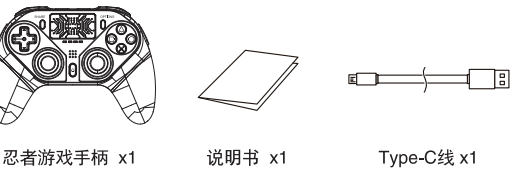

規格:

- | | |
|--------------------------|-------------------------|
| 1. 使用電圧/電流: DC3. 7V=50mA | 2. 電池容量: 400mAh |
| 3. 連続使用時間: 約8時間 | 4. 充電時間: 約3時間 |
| 5. BT3. 0. 伝送距離: 58M | 6. スリープ時間: 満電で30日間放置できる |

製品でのご使用方法:

P4コンソールに接続:

1. コントローラーをP4コンソールにUSBケーブルで接続します。コントローラーの【HOME】ボタンを押し、LEDライトが素早く点滅します。コントローラーの一つライトが常に点灯しますと、接続を完了しました。USBケーブルを抜きます。次回使用するときは、HOMEボタンを押すと、コントローラーが自動的にP4と接続します。
2. ①HOMEボタンを1回押して、ホーム画面に戻ります。②ホームボタンを2回押すと、Appスリッチャーが表示されます。③ゲームパッドがスリープ状態の場合、HOMEボタンを1回押せば自動的にスリープから復帰します。④HOMEボタンはP4本体のスリープに対して機能しません。
3. HOMEボタンを長押しします: ①Appを終了します。②P4本体をオフにします。③現状況に応じたオプションメニューが表示されます。
4. コントローラーのSHAREボタンとOPTIONSボタンはPS4コンソールのと対応します。P3の場合、SELECTボタンはP4のSHAREボタンに対応します。STARTボタンはP4のOPTIONSボタンに対応します。
5. カラーLEDライトの説明: プレイヤーの状態を表示、HOMEボタンを押すと、RGBカラーLEDライトは青、赤、緑、ピンクの順に色が割り当てられ、ライトバーが点灯します。複数のプレイヤーで遊ぶ際にあなたが操作するキャラクターを色で見分けます。1P: 青; 2P: 赤; 3P: 緑; 4P: ピンク。
- A. P4コンソールは、4つのコントローラーの同時接続をサポートします。コントローラーは別々のLEDライトで表示されます。
- B. コントローラーのライトの色は、コントローラーの識別番号を表しています。1番目のコントローラーとP4コンソールに接続後、コントローラーは青に光ります。ユーザー1を表します。2番目のコントローラーとP4コンソールに接続後、コントローラーは赤に光ります。ユーザー2を表します。P4コンソールをオフにしたら、LEDライトが10秒以内消えます。

プログラミングキー機能の解除方法

1. 解除したい設定したプログラミングキー (S1/S2/S3/S4) と「OPTIONS」ボタンを同時に押します。その時、LEDランプが速く点滅し始めたらボタンを離します。解除したいプログラミングキーを再度押したら、終了し、このプログラミングキー機能が解除します。
2. プログラミングキーは記憶機能があり、コントローラーのスリープ、シャットダウン、再起動に関係なく、コントローラーは最後の設定状態を記憶してくれます。
3. プログラミングキーはTURBO連射機能がありません。
4. 同時に下辺にある「S3、S4」と「OPTIONS」ボタンを3秒押すと、出荷時のプログラミング設定に復元されます。プログラミングキーのデフォルト設定は、△○×□です。

ゲームパッドの充電／低電力:

1. 低電力表示: バッテリーの電圧が3. 6v以上の場合、コントローラーのLEDライトが常に点灯します。バッテリーの電圧が3. 3v-3. 6vの場合、コントローラーのLEDライトが点滅します。バッテリーの電圧が3. 3v以下の場合、コントローラーはスリープになります。
2. 充電表示: デバイスに接続された場合、usbケーブルを挿すと、LEDライトがゆっくり点滅します。
3. 充電表示: デバイスに接続されていない場合、オレンジ色に点灯/点滅: バッテリー充電中です。充電が完了すると、LEDライトが消灯します。

注意:

1. 本製品を湿気や高温の場所での保管はしないでください。
2. 鋭利な物を刺したり、硬い物で叩いたり、踏みつけたり、分解しようとししないでください。故障、破損の原因となります。
3. 専門家に依頼人は本製品を分解しないでください。アフターサービスの保証対象外になりますのでご了承下さい。z

パッケージ内容:

