jump2group

Color Side 1: BLACK

Color Side 2: BLACK


Flat size: 21.6 x 25.5 in.

Finished size: 3.6 x 4.25 in

Fold 1: 6-panel accordion

Fold 2: 6-panel accordion




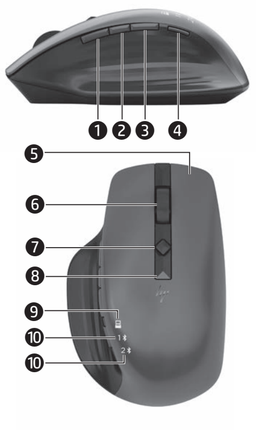

1



2

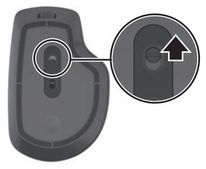


3




OR


A

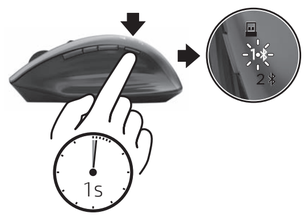

B

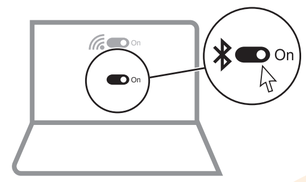

C

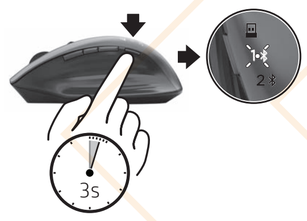

D www.hp.com/support

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

PRINTER: Replace this box with Printed- In (PI) Statement(s) as per spec.

NOTE: This box is simply a placeholder. PI Statement(s) do not have to fit inside the box but should be placed in this area.

M17587-A21

ENGLISH

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth®.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows® 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

ARABIC

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

CZECH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

DANISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

GERMAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

INTERNATIONAL SPANISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

GREEK

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

FRENCH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

ITALIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

KAZAKH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

CROATIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

LITHUANIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

❶ **Programmable forward button**
By default, press to display the next page in your application history.

❷ **Programmable Task View button**
By default, press to display all virtual desktops in Windows 10.

❸ **Programmable back button**
By default, press to display the previous page in your application history.

❹ **Pairing button**
Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.

❺ **Programmable right-click button**

❻ **Programmable scroll wheel**
Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.

❼ **Hyperscroll button**
Press to turn hyperscroll on or off.

❽ **Battery light**
White (5 s): The mouse is on.
Blinking amber: The mouse needs to be charged.
Solid amber: The mouse is charging.
Solid white: The mouse is fully charged and connected to power.

❾ **Receiver light**
Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.

❿ **Bluetooth pairing lights**
Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

jump2group

Color Side 1: BLACK

Color Side 2: BLACK

Flat size: 21.6 x 25.5 in.


Finished size: 3.6 x 4.25 in

Fold 1: 6-panel accordion



Fold 2: 6-panel accordion



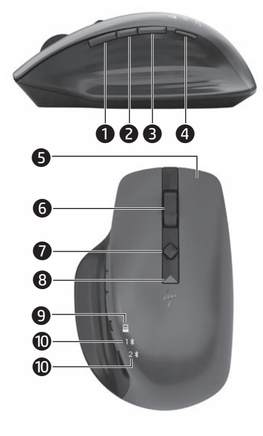

HUNGARIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

DUTCH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

PORTUGUESE

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

NORWEGIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

POLISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

ROMANIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

RUSSIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

SLOVAK

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

SLOVENIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

SERBIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

FINNISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

TURKISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.

UKRANIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support

Connect the mouse to one computer using the receiver and up to two computers via Bluetooth.

To program the mouse buttons or change the DPI setting (1200 DPI by default), use the software. If the software does not download automatically, on your computer, open **Microsoft Store** or **Apple Store**. Search for **HP Accessory Center**, and then download the app.

Components description

1. **Programmable forward button**
 By default, press to display the next page in your application history.
2. **Programmable Task View button**
 By default, press to display all virtual desktops in Windows 10.
3. **Programmable back button**
 By default, press to display the previous page in your application history.
4. **Pairing button**
 Press to switch between channels. Press and hold for 3 s to enter pairing mode for the selected channel.
5. **Programmable right-click button**
6. **Programmable scroll wheel**
 Scrolls the screen up or down. Tilt right, tilt left, or click to use functions programmed in the app. By default, tilt right to scroll the screen right, tilt left to scroll the screen left, click to use application-specific functions, and click and hold to scroll when you move the mouse up or down.
7. **Hyperscroll button**
 Press to turn hyperscroll on or off.
8. **Battery light**
 White (5 s): The mouse is on.
 Blinking amber: The mouse needs to be charged.
 Solid amber: The mouse is charging.
 Solid white: The mouse is fully charged and connected to power.
9. **Receiver light**
 Quickly blinking white (5 s): The receiver channel is currently selected and the receiver is not connected to a computer.
 Solid white (5 s): The mouse is connected to the computer to which the receiver is connected.
10. **Bluetooth pairing lights**
 Quickly blinking white (5 s): The illuminated Bluetooth channel is currently selected. If you attempted to pair the mouse to a computer, the pairing was not successful.
 Solid white (5 s): The mouse is connected to the computer that is paired to the illuminated Bluetooth channel.
 Slowly blinking white (180 s): The illuminated Bluetooth channel is in pairing mode.



Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

RMN/型號/型号: STA-AM02 + STA-AD01

© Copyright 2020 HP Development Company, L.P.

The Bluetooth trademarks are owned by their proprietor and used by HP Inc. under license.

Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: September 2020