
不見不散®
SEE ME HERE

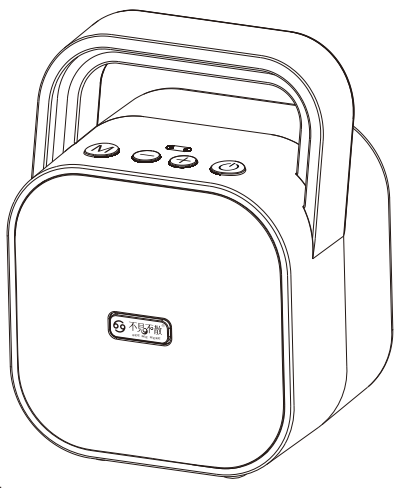

# BV670 蓝牙音箱 Bluetooth Speaker

使用说明书
USER MANUAL

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AXOX-SPRSPK


## 01 Warnings

English


◆To ensure proper use and trouble-free operation, please carefully read this user manual first.
◆For the first use, a full charge is recommended.
◆Please use and store the product at room temperature.
◆Do not throw and drop the product to avoid damages.
◆Do not expose the product to fire, high temperature, direct sunlight, etc.
◆Do not use organic solvents or other chemicals to clean the product.
◆Do not allow small particles to get into the product.
◆Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
◆Do not dissemble the product, or make any modifications to the structure or any parts of it.
◆Keep the product out of children’ s reach.
◆If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
◆Batteries (battery packs) can not be exposed to such conditions as sunshine, fire or similar overheating conditions

## 02 Packing details


English

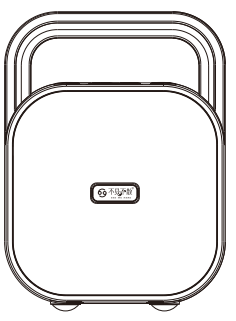


Bv670 Speaker 1pc

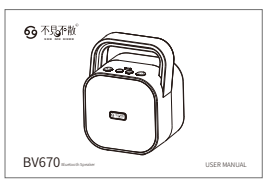


User manual




Type-C Charging Cable 1pc



3.5MM Audio cable 1pc

## 03 Keys functions

English

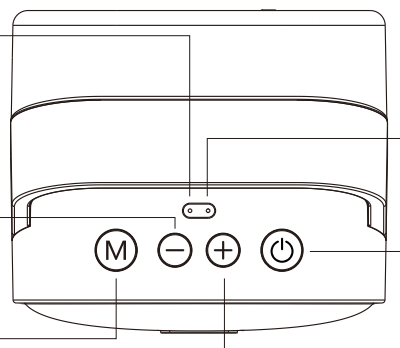

**LED indicator**
Blue light flash after turn on,Bluetooth is ready to pair. Blue light stays on after conntece to a device.
Blue light flashes rapidly at max/min volume. Red light stays on while charging ; when full charged, red light goes off.

Press it to turn down the volume , Press and hold it to play previous track.

**Mode Button :**
press it to switch modes in turns as followed:
Bluetooth mode ---Mirco SD card mode ---USB flash device ---Aux-in mode
(It need to insert Micro SD card,USB flash drive and AUX calbe)

**Call answer:** press it to answer/hang up an in-coming call, press and hold it to decline a call.

**Disconnect:** press and hold it to disconnect the current device ,and the speaker becomes detectable for pairing .

**Microphone**

**Power button:** press and hold 2s the button to turn on or turn off.
Press it to pause/continue the playing.
Reset:press and hold for 8S

Press it to turn up the volume.
Press and hold it to play next track.

## 04 Ports functions


English

**AUX-in jack**
In the powered-on state, insert an audio cable. It will beep to indicate a successful connection.

**Micro SD card slot**
In the powered-on state, insert a Micro-SD card into the slot. It will play the music stored in the card automatically after beeps.

**Charging indicator**
Red LED light keeps on during charging, and turns off when full charged

**Type- C Charging Cable**
Connect DC 5V-1A adapter for charging

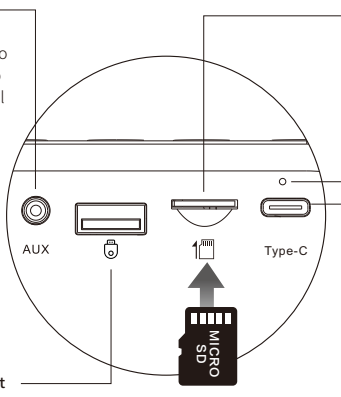


**USB flash device port**
In the powered-on state, insert a USB flash device into the slot. It will play the music stored in the USB flash automatically after beeps.


## 05 Bluetooth connection

English

**Turn on speaker**
Press and hold power button for 2 seconds , it issues a sound of “Ding” ,and the blue LED light flashes ,it can be detected.

**Pair a Bluetooth device**
Active the Bluetooth of your device ,and search for BV670 ,Once the connection is completed, the speaker will beep and the blue LED light will stay on.


The speaker will re-connect to the used device nearby automatically if the Bluetooth is activated in the future.

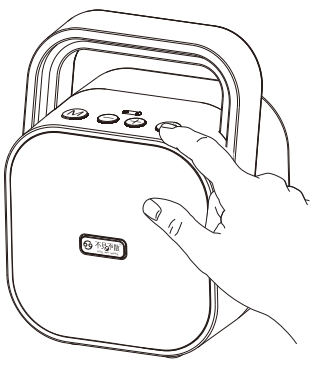


**Others instructions**
If you want to pair the speaker with another device ,press and hold the Mode button to disconnect the current device and the speaker becomes detectable,press power button to reconnect.

## 06 True Wireless Stereo (TWS)Function

English

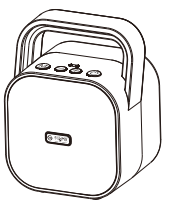

Speaker 1

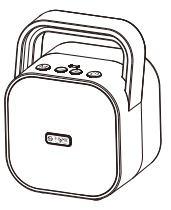

Speaker 2

**1.Set up the TWS system**
Turn on two BV670 speakers and make sure neither of them is paired with any mobile device. Doule press one speaker’ s “+ -” Button. It issues a sound and the speaker begins to connect with the other one.After a sound of Ding-dong,the TWS system is set up successfully.

**2.Connect them to a Bluetooth device**
Activate the Bluetooth of your device of your device and search for BV670 , select it once it’ s on the list .Blue LED light keep flashing slowly indicating a successful connection between the device and the speakers.


**3.Disable the system**
Press and hold either speaker`s “+ -” button to disconnect the device and disable the TWS system.

**Other instructions:**
1.When two speakers connect for the first time, press "+-" to enter TWS mode . After TWS paired,master speaker indicator keeps flickering while the slave one keeps on.
2. If two speakers TWS paired successfully ,they will auto reconnect next time.
3. When TWS paired successfully, blue light of the slave-speaker will keep on. You will see the status of the speakers from the master speaker.
4.When TWS paired successfully,operate either of the speakers, the other will have the same operation simultaneously.

## 07 Specifications

English

| Basic parameters | |
|---|---|
| Speaker type | Portable Bluetooth speaker |
| Support storage | Up to 32GB Micro SD card(FAT 32)/flash drive |
| Power supply | Built in 3000mAh lithium battery |
| | DC 5V--1A USB charger adapter about 4-5 hours |
| **Technical Parameters** | |
| Loudspeaker | Bass speaker(77mm,external magnetic) middle and treble speaker (53mm,infernal magnetic) |
| Output power | 15W THD≤10% |
| Frequency response | 100Hz-20KHz |
| Bluetooth standard | Bluetooth 5.0 |
| USB Standard | USB2.0 (complatible with USB1.1) |
| **Playing parameters** | MP3、WMA、WAV、APE、FLAC |
| Support Media Type | MP3:8Kbps-320Kbps<br>WMA:5Kbps-384Kbps<br>WAV:32Kbps-384Kbps |

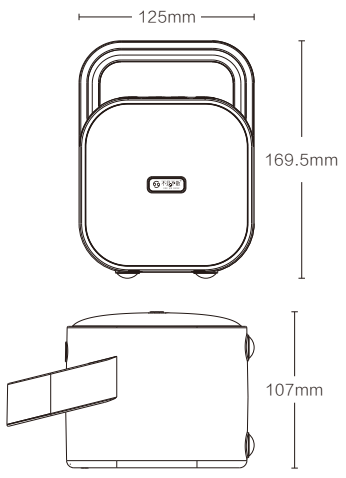


**Product size:**169.5×125×107mm
**Product net weight:**850g±10g (include Built-in lithium battery)

## 08 FAQ

English

| FAQ | Solutions |
|---|---|
| Not able to connect your device | 1.Restart the speaker and try again |
| | 2.If your device rquires Pin code ,please enter 0000. |
| Keeps cutting out when playing | Please ensure the speaker is within the operating range and there is nothing between the speaker and the device. |
| Not able to play the music in Mirco SD card | 1.Please ensure the foramts of the Micro SD card is FAT32 . |
| | 2.Please ensure the formats of the music files are MP3、WMA、WAV、APE、FLAC |
| No sound when playing | 1.Please ajust the volume of the speaker . |
| | 2.Please check if the speaker is paused. |
| No able to turn on | Please try to charge the speaker or mute. |
| No sound in AUX-In mode | 1.Check if the audio cable connected |
| | 2.Check if audio port is damaged |
| Not play with USB flash drive | 1.Check if switch to USB play mode |
| | 2.Check if USB flash drive damaged |
| | 3.Check if it is transmitting data with PC |