


Nokia Essential True Wireless Earphones E3100 Plus

诺基亚真无线蓝牙耳机
諾基亞真無線藍牙耳機
ノキア完全ワイヤレスイヤホン

User guide / 用戶指南 / 用戶指南 / ユーザーガイド


Contents

包装内容 / 包裝內容 / 同梱物

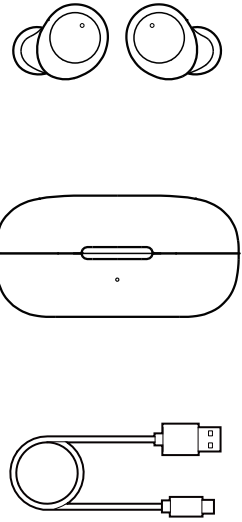


Powering on

开机 / 開機 / 電源オン

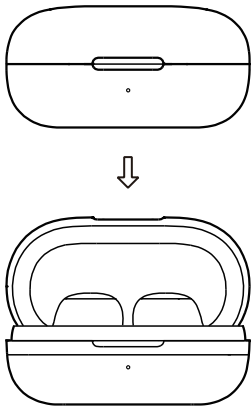

Pairing mode


配对 / 配对 / ペアリング

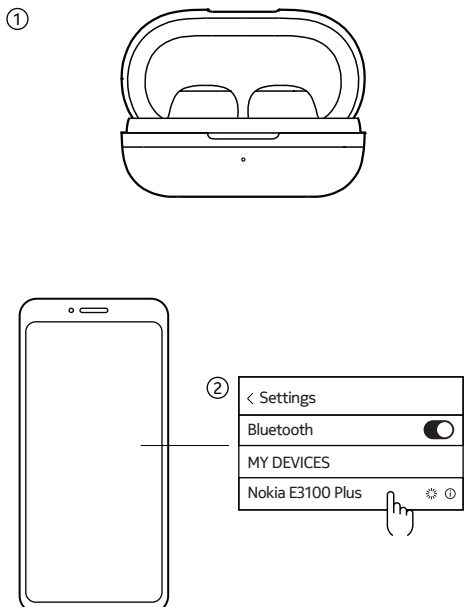


Charging

充电 / 充電 / 充電する

Earphones charging / 耳机充电 / 耳機充電/ イヤホンを充電する

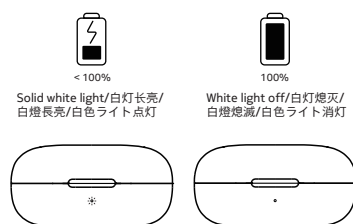

Case charging / 盒子充电 / 盒子充電/ ケースを充電する

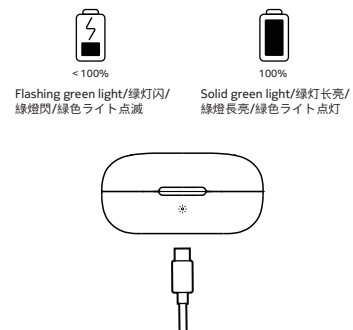

Troubleshooting

Problem	Reason	Solutions
Does not power on / Does not respond	Battery is low	Charge the earphones for 1.5 hours and reconnect the earphones
No sound after pairing	Incorrect pairing	Pair the earphones again or reset the earphones
Turns off automatically	Battery is low	Charge the earphones for 1.5 hours
Failing to charge	Error with power supply	Perform a reset
No light on the case during charging	Error with power supply	Check that the charging cable is plugged in. Ensure that the wall switch is on using a wall charger
Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location
Noise in-call / Sound occasionally drops	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your earphones and mobile phone closer together
Sound is too soft	Low volume	Increase the volume
Pairing unsuccessful / Only one side has sound / Cannot find the pairing name on the device / Mono pairing unsuccessful	Too many pairing records or not paired properly	Remove at least one pairing from your device's pairing list, reset and pair the earphones again
Earphones don't power on after removing them from the charging case	Charging case is low in battery	Charge the earphones and the charging case for 1.5 hours

疑难排除

故障	原因	解决方法
启动失败	低电量	为耳机充电
配对后没有声音	配对程序出错	先重置耳机再重新配对
耳机自动关机	低电量	为耳机充电
耳机不能充电	电源问题	先重启耳机及为耳机充电
充电期间没有指示灯	电源问题	检查充电线是否插好及电源是否开启
迴聲	音量太高或环境过于嘈杂	调整音量或改变使用环境
电话中的噪音	环境干扰或耳机设备距离超出范围	改变使用环境或缩短耳机和设备之间的距离
信号不好及有断续	环境干扰或耳机设备距离超出范围	远离干扰信号或缩短耳机与设备之间的距离
声音太少	音量太低	调高音量
耳机配对失败/只有单边有声音/不能在装置蓝牙界面搜寻耳机/单边耳机配对失败	太多配对记录/配对程序出错	删除其中一个已配对设备，重置耳机再重新配对
耳机从充电盒取出后不能开启	充电盒低电量	为耳机及充电盒充电

疑難排除


故障	原因	解决方法
啟動失敗	低電量	為耳機充電
配对後沒有聲音	配对程式出错	先重置耳機再重新配对
耳機自動關機	低電量	為耳機充電
耳機不能充電	電源問題	先重啟耳機及為耳機充電
充電期間沒有指示燈	電源問題	檢查充電線是否插好及電源是否開啟
迴聲	音量太高或環境過於嘈雜	調整音量或改變使用環境
電話中的噪音	環境干擾或耳機設備距離超出範圍	改變使用環境或縮短耳機與設備之間的距離
信號不良及有斷續	環境干擾或耳機設備距離超出範圍	遠離干擾信號或縮短耳機與設備之間的距離
聲音太少	音量太低	調高音量
耳機配对失败/只有单边有声音/不能在装置蓝牙界面搜寻耳机/单边耳机配对失败	太多配对记录/配对程序出错	删除其中一个已配对設備，重置耳機再重新配对
耳機從充電盒取出後不能開啟	充電盒低電量	為耳機及充電盒充電

故障だと思ったら

症状	原因	解決方法
電源が入らない	電池の残量がない	充電してください
ペアリング完了後音が出ない	ペアリング失敗	リセットしてから再度接続してください
電源が切れる	電池の残量がない	充電してください
充電できない	電源エラー	イヤホンを再起動してから充電してください
充電中点灯しない	電源エラー	USB充電ケーブルが確実に接続されているかどうか確認し、電源がオンになっているかどうかを確認してください
エコーがある	音量または周囲の音が大きすぎる	音量を調整し、使用環境を変えてお試しください
通話中雑音があり、音が途切れる	電波状況が悪い、または接続機器との距離が遠い	通信状況の良い場所に移動し、イヤホンと機器を近づけてください
音が小さい	接続機器の音量が低い	機器の音量を上げてください
ペアリング失敗/片方しか音が出ない/接続機器にイヤホンが表示されない/片方しかペアリングできない	接続している機器が多すぎる、ペアリングエラー	ほかの設備との接続記録を削除する。ペアリングエラして再度接続してください
充電ケースからイヤホンを取り出してから起動できない	充電ケースの電池残量少ない	イヤホンを充電ケースに入れて、USB充電ケーブルに接続して充電してください

Controls

觸控操作 / 触控操控 / コントロール

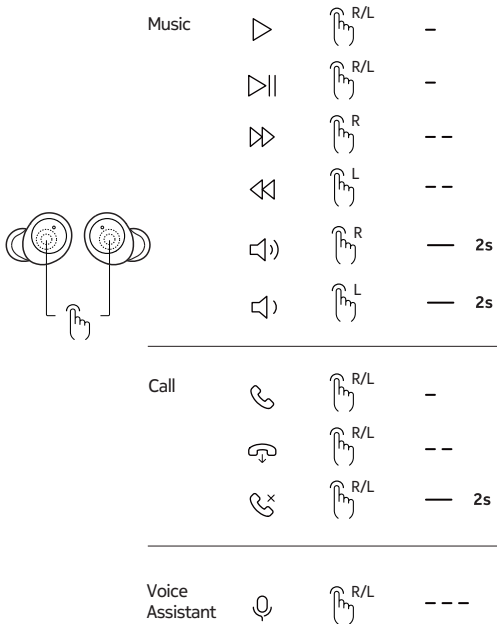

Specifications

产品规格 / 產品規格 / 仕様

Nokia Essential True Wireless Earphones E3100 Plus

Wearing style	: True wireless earphones
Ear coupling	: Ear canal
Frequency response	: 20Hz to 20kHz
Transducer principle	: Dynamic driver
Transducer size	: 6mm
Sound pressure level(SPL)	: 102dB±3dB
Impedance	: 32Ω
Microphone principle	: MEMS x 2
Power supply	: Built-in Lithium rechargeable batteries Left earphone: 35mAh/3.7V Right earphone: 35mAh/3.7V Charging case: 300mAh/3.7V Up to 5hrs (music playback via A2DP with 70% of the volume) with rechargeable batteries of the earphones* Up to 24hrs with rechargeable battery of the charging case*
Operating time	
Charging time	: Earphones: approx. 1.5hrs Charging case: approx. 2hrs
Ingress protection (earphones)	: Anti-dust and splash proof (IP44)
Weight	: Left earphone: approx. 3.4g Right earphone: approx. 3.4g Charging case: approx. 36g
Volume control	: Yes
Bluetooth	
Version	: Bluetooth specification version 5.2
Profiles	: HFP, HSP, AVRCP, A2DP
Effective range	: Line of sight approx. 30ft(10m)
Transmission frequency	: 2400MHz to 2483.5MHz
Output power	: 3mW (max.)
Supported audio format(s)	: SBC

* Charging case that holds multiple charges for total playtime. Battery life depends on device settings, environment, usage and many other factors.

Safety guide

Important safety instructions

- Please read this user guide and warranty manual carefully before using the product for the first time.
- Do include this user guide if passing the product on to new users.
- 請細心將本产品說明書與保修單一起放給其他使用者。
- 如果設備有明顯的損傷，請勿繼續使用。
- 只能在允許無線電傳輸的地方使用本产品。
- Is permitted.

Preventing damage to health and accidents

- Do not listen at high volumes, especially for extended periods, to prevent hearing injury.
- The permanent magnetic fields created by this product may interfere with medical implants such as cardiac pacemakers and implanted defibrillators (ICDs). Please always maintain a distance of at least 10cm (3.94") between the products' magnetic component/s and implanted medical device/s at all times.
- Keep this product, its accessories and packaging out of reach of young children or pets, as these may pose choking hazards.
- Do not use the product in an environment that requires your special-attention (e.g. in traffic).

Preventing damage to the product and malfunctions

- Always keep the product dry and avoid exposure to heat sources (including hairdryers, heaters, prolonged strong sunlight etc.) as this may result in product deformation or malfunction. The normal operating temperature of the product is 0 °C -40 °C or 32 °F -104 °F.
- Please do not use any attachments, accessories, or spare parts with the product unless they are included with the product or recommended by RichGo Technology Co. Ltd.
- The product should only be cleaned, where necessary, with a soft, dry cloth.

Safety instructions for lithium rechargeable batteries

WARNING

In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused:

- explosion • fire development • heat generation • smoke or gas development

Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.

Only use rechargeable batteries recommended by RichGo and the appropriate chargers.

Only charge the product / rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F.

Use after use.

Switch battery pack-powered products off after use.

When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months).

Do not heat the product / rechargeable batteries above 70 °C/158°F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.

安全须知

重要安全提示

- 在使用产品前请认真阅读用户指南及保留指南。
- 請細心將本产品說明書與保修單一起放給其他使用者。
- 如果設備有明顯的損傷，請勿繼續使用。
- 只能在允許無線電傳輸的地方使用本产品。

防止可能危害健康和引发事故的情况

- 为了预防听力损伤，请不要长时间用高音量收听音乐。
- 本产品会产生较强的持久磁场，可能含心脏起搏器和植入式除颤器 (ICD)和其他植入物品造成干扰。含有磁场的产品元件与心脏起搏器、植入式除颤器或其他植入之物必须至少保持 10 厘米 (3.94 英寸) 的距离。
- 请将产品零件、包装零件和附件等零放置于儿童和宠物无法触及之处，以防发生误食和窒息危险。
- 请在需要集中注意力的环境（例如道路上）使用本机。

防止产品损坏和故障

- 保持产品干燥，不要将其暴露于极低或极高的环境温度下(吹风机、加热器、长时间日晒等)以防造成变形。正常操作温度在 0 °C至40°C之间。
- 仅可使用制造商提供或推荐的附件/配件/备件。
- 只用于干燥的软布清洁产品。

電池、充電電池的安全說明

警告

在極端情況下，如果發生濫用或誤用，鋰離子/充電電池可能會洩漏，並可能造成以下危害：

- 過熱 • 着火 • 爆炸 • 產生火花 • 產生酸液或有氣味

將廢損的產品包括電池交到正規回收中心或專業經銷處。

請僅使用製造商推薦的電池及匹配的充電器。

只能在 10 °C至40 °C的環境溫度下給電池充電。

使用完畢後，關閉電池供電的產品。

即使長時間不使用也要定期給電池充電（約每 3 個月充電一次）。

不得將充電電池加熱超過 70 °C。請避免日照，切勿將充電電池扔入火中。

安全須知

安全注意事項

- 使用本产品前，請先認真及完整地閱讀用戶指南及保留指南（隨附提供）。
- 交付給他人本产品時，請務必附上安全告示。
- 如果設備有明顯的損傷，請勿使用。
- 使用本产品之前，請先確認所在環境是否允許使用藍牙® 無線技術。

避免導致損害健康及意外事件。

- 請勿長期高音量使用，以避免听力受损。
- 本产品会产生较强的永久磁场，可能会对心脏调节器、植入式心脏起搏器、去颤器(ICD)和其他植入装置造成干扰。在包含磁场的产品元件中心保持适当距离。植入式心脏起搏器或其他植入装置与本产品之间必须保持至少 10 公分(3.94 英寸)的距离。
- 请将产品零件、包装零件和附件等零件放置于儿童和宠物无法触及之处，以防发生误食和窒息危险。
- 请在需要集中注意力的环境（例如道路上）使用本机。

避免造成產品損壞和干擾

- 保持产品干燥，不要将其暴露于極高溫或極低溫度環境(吹風機、暖氣、長時間日照等)以防造成變形。正常操作溫度在 0 °C至40 °C之間。
- 請務必使用製造商提供或建議的附件、配件和備用零件。
- 清潔產品時，只可使用乾布擦拭。

電池 / 充電電池使用安全注意事項

警告

在極端情況下，充電電池可能會洩漏，如果濫用或誤用可能會導致以下危害：

- 產生過熱現象 • 產生火花 • 產生爆炸 • 產生酸液

將廢損的產品包括充電電池交到回收點或在您附近的經銷商。

請僅使用製造商推薦的充電電池及其為其匹配的充電器。

僅在環境溫度為 10 °C 到 40 °C 時對電池充電。

由電池提供電力的產品，不使用時務必關機。

長期不使用時，應定期（約每三個月）為電池充電。

請勿讓電池承受 70 °C 以上的溫度，應避免陽光直射，且不可將電池丟入火中。

安全ガイド

安全に関する注意事項

- 本製品をお使いになる前に、必ず安全ガイドをよくお読みの上、安全にご使用ください。
- 本製品を第三者に譲渡する場合は必ず本製品と一緒にお渡しください。
- 本製品は医療機器がある場合は必ず使用をおやめください。
- 本製品はBluetooth®の使用を許可した環境でのみ使用できます。

健康被害と事故を防止するために

- 聴覚障害を防止するために、大音量で長時間使用しないでください。
- 本製品は磁石を活用したワイヤレス製品です。人工心臓ペースメーカー、除動器などの体内埋入式医療用電気機器または家庭用磁石に影響を与える可能性があります。磁石の高濃度の存在があるものに近づけないでください。
- 事故を防止するため、幼児、子供の手の届く場所に保管しないでください。誤って部品を飲み込む恐れがあります。
- 屋外でご利用する場合、周囲の交通状況に十分ご注意ください。交通事故の原因となります。

製品の破損と故障を防止するために

- 極端な環境下での使用は避けようとしてください。高温や低温場所に保管すると故障の原因になります。また、長時間直射日光が当たる場所に置かないでください。
- 短圧品または鋭利なアクセサリーでご利用ください。付属品は本製品専用であり、その他の製品に使わないでください。
- 本製品の充電端子を汚さないように、やさらかい綿布などで拭き取ってください。

バッテリーについて安全上の注意事項

警告

本製品は充電式電池を内蔵しています。しく使用しないと発熱・発火・破損などの原因になります。また、以下に漏れた場合は素手でさわらないでください。

ご利用済みの製品は、分解せずにそのまま最寄りのリサイクル協力店に設置してある「充電式電池リサイクルBOX」に入ってください。

本体を充電する際は、推奨品もしくは本製品に適したAC充電器をお使いください。

周囲の温度が10℃ - 40℃の範囲内で充電を行ってください。

使用しない時は電源を切ってください。


長期使用しない場合は、バッテリーを定期的に充電してください。（約3ヶ月ごと）

火の中に投入したり、加熱したりしないでください。高温の状態での使用は避けようとしてください。直射日光を避けて保管してください。

Reset

重置 / 重置 / リセット

Clearing all pairings / 清除所有配对 / 清除所有配对 / 全てのペアリングを解除する

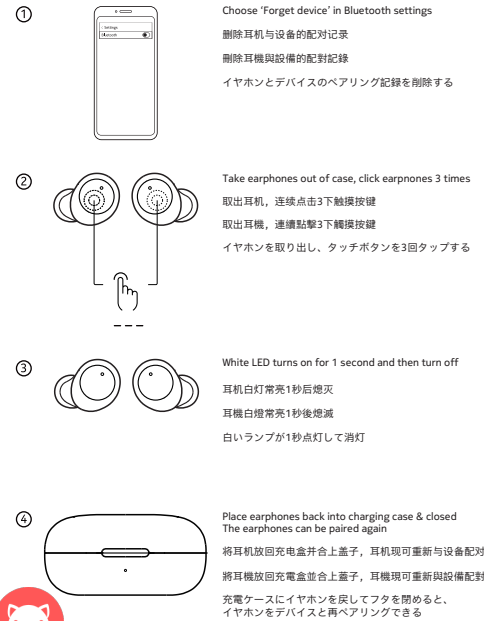

Intended use/Liability

RichGo will not be responsible for any indirect or consequential loss, loss of profits or loss of data. Warranty will be valid under the following conditions, and manufacturer reserves the right to refuse to provide service and to demand charges for any costs of servicing from the customer.

There will be no warranty if the product has been modified or repaired by persons not authorized by manufacturer. Mishandling or wrong application of product, such as leaving batteries over an extended period in the product causing battery fluid leakage, or applying wrong voltage and current, damage caused by natural disaster or accident; Product caused by impact sand or liquid damage, tampering, or operating fail; Install and maintain product without following instructions provided by the manufacturer; If the model number or item code attached with the product has been erased or modified; Modify without authorization the contents of this warranty policy.

If the product have been used for commercial, display, demonstration or rental purpose. All parts replaced within the warranty period are properties of manufacturer. We have the right to handle those parts as necessary.

Warranty covers only the hardware of the product's main body. All other accessories are not covered within the warranty terms, such as external connection cable, power cable, computer cables, software, CO, external cover/cabinet and user manual. (For item description and accessories, please refer to the user manual/instruction manual/user guide)

Manufacturer Declarations

More information on legal compliance labels can be found at the end of this document.

Recycling

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy. The crossed-out wheellie bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste; take them for recycling. For info on your nearest recycling point, check with your local waste authority.

规范使用/责任

此蓝牙耳机作为蓝牙耳机配件设备，专门设计用于无线语音通讯。如播放音乐或通过蓝牙技术通话等。任何在相关产品指南中未指定的用途都被认为是为产品的错误使用。对产品以及附带的配件有 的损坏不能归咎于产品的损坏。制造商不承担任何责任。

如果使用规格不符合要求的 USB 设备，制造商对可能造成的损坏不承担任何责任。制造商公司对因电池电量耗尽、过度老化或超出信号范围而导致的中断通讯及其损失不承担任何责任。在使用本产品前，请务必遵守所在国家的法律法规！

制造商声明

有关合规性标记的更多信息，请参阅文末附录。

回收

请务必将废旧的电子产品、电池以及包装材料送到专门的回收点。这样可以帮助防止不受控制的废物处理并帮助推动材料回收。电气和电子产品也包含多种珍贵材料，包括金属（例如铜、铝、钢和镁）和贵金属（例如金、银和钯）。设备的所有材料都可以作为材料和能源回收。

带有叉号的四轮回收车标志

产品、电池、印刷品或包装上标有叉号的四轮回收车标志提醒您，当所有电气和电子产品以及电池的的使用寿命结束时必须将其送至专门的回收站。请勿将这些产品作为未分类的市政废物处理；对其进行回收。有关离您最近的回收点的信息，请咨询当地废物处理部门。

部件名称 Part name	铝 (Al)	铜 (Cu)	铁 (Fe)	镍 (Ni)	钴 (Co)	次价格 (Cv)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 (Metal parts)*	○	○	○	○	○	○	○	○
电路模块 (Circuit modules)	○	○	○	○	○	○	○	○
电池 (Battery)	○	○	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○ 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求之下。

△ 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

中国电池警告 / China battery warning

禁止拆解、擅自、挤压或投入火中。切勿置于高温环境中。若出现严重鼓胀，请勿继续使用。电池浸水后禁止使用。* 仅适用于 SEBT4。

正确使用本机/法律責任

此款耳機作為蓝牙耳机配件設備，專門設計用於無線語音通訊。如播放音樂或透過藍牙技術通話等。使用本产品前，若不符合相關的产品指南中列示的用途，屬不當使用。對產品以及附加配件有損壞的錯誤使用不能歸咎於產品的損壞。製造商不承擔任何責任。

製造商不擔保與 USB 規格不符合的 USB 設備損害。製造商公司對因電池電量耗盡、過度老化或超出信號範圍而導致的 通訊中斷及其損失不承擔任何負責。在操作設備前，請遵守所在國家的法規規定！

廠商聲明

有關合规性標記的更多資訊，請參閱文末尾。

回收

請將您使用過的電子產品、電池及包裝材料都交到指定的收集點。這樣，您便有關於防止不受控制的 廢物處理，以及促進材料的循環利用。電氣和電子產品含有貴重材料，包括金屬（例如銅、鋁、鋼和鎂）和貴重金屬（例如金、銀和鉑）。本裝置所有材料都可以回收為材料和能源。

若產品、電池、文獻或包裝上有輪形回收標上交叉叉的標誌，這表示當所有電器和電子產品與電池使用期限屆滿時，必須將其收集及處理。請勿將這些產品或電池在不分類的城市廢物丟棄。請將它們收集到指定處理之無害廢物箱。如選擇最近收集地點的資料，請諮詢當地廢物處理有關部門。

低功率射頻器材技術規範

取得實驗證明之低功率射頻器材，非經核准，公司、商號或使 用者均不得擅自變更頻率、加大功率或變更設計之特性及功能。低功率射頻器材之使用不得影響國家安全及社會合法權益，經發現有干擾現象時，應立即停用，並改善至無干擾時方能繼續使用。前述合法通信行為，除電信管理法規定作業之無線電通信，低功率射頻器材須符合合法通信或工業、科學及醫療用電波技術標準及無線電設備之干擾。

注意事項を守る / 賠償責任

本製品は Bluetooth® 無線技術を採用した、音楽再生や電話通話などを目的として使用するアクセサリーです。安全ガイド、ユーザーガイドに記載している使用方法をよくお読みの上でご利用ください。また、本製品の以外での本製品のご使用はおやめください。誤ったご使用方法での使用は製品の損傷、推奨品以外の機器やケーブルのご使用による製品損傷などについては一切の責任を負いません。長期使用・保管による、イヤホン及び充電ケースの内蔵電池劣化が原因で生じた通信障害などの問題については保証対象外です。

製造者宣言

法規定表に関する詳細情報は以下にてご確認ください。

本機を廃棄するときのご注意

本製品はリチウムイオン電池を内蔵しています。この電池は一般家庭ゴミとして廃棄しないでください。廃棄されたリチウムイオン電池が、ゴミ収集車などで破損してショートした場合、発火や発煙の原因となります。ご使用済みの製品は、分解せずにそのまま最寄りのリサイクル協力店に設置してある「充電式電池リサイクルBOX」にお入れください。

アフターサービスに関するお問い合わせは、QRコードをスキャンしてLINEの公式アカウントを追加していただく、と迅速に対応させていただきます。

RichGo Technology (Shenzhen) Co.Ltd is a licensee of the Nokia brand for earphones and mobile accessories. Nokia is a registered trademark of Nokia Corporation.

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by RichGo is under license.

For product support, please visit <http://www.nokia.com/shop/support> or call 400993019 (CN)