


Nokia Essential Wireless Headphones
E1200ANC

诺基亚无线降噪耳机
諾基亞無線降噪耳機
Nokia ワイヤレス ノイズキャンセリングヘッドホン

User guide / 用戶指南 / 用戶指南 / ユーザーガイド


Contents

包装内容 / 包裝內容 / 同梱物

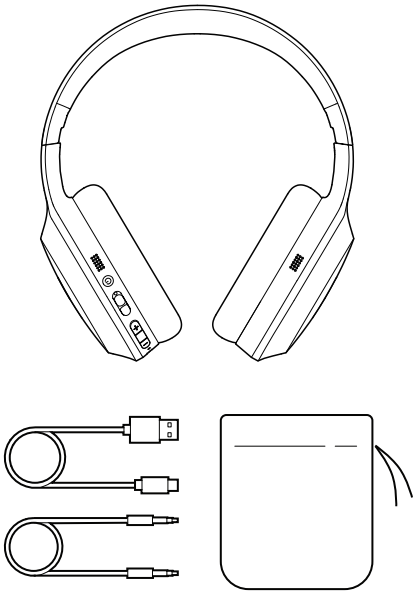


Powering on

开机 / 開機 / 電源オン

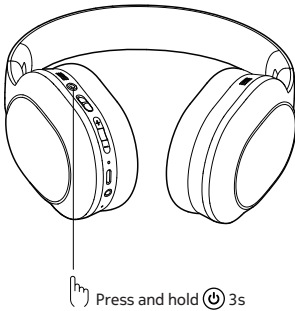

Pairing mode

配对 / 配對 / ペアリング

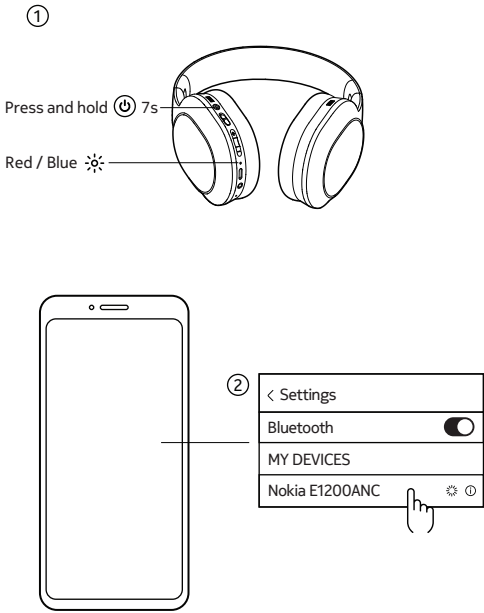

Charging

充电 / 充電 / 充電する

Headphones charging / 耳机充电 / 耳機充電 / ヘッドホンを充電する



Troubleshooting

Problem	Reason	Solutions
Does not power on / Does not respond	Battery is low	Charge the headphones for 2 - 3 hours and reconnect the headphones
No sound after pairing	Incorrect pairing	Pair the headphones again or reset the headphones
Turns off automatically	Battery is low	Charge the headphones for 2-3 hours
Failing to charge	Error with power supply	Perform a hardware reset
No light during charging	Error with power supply	Check that the charging cable is plugged in. Ensure that the wall switch is on using a wall charger.
Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location
Noise in-call / Sound occasionally drops	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your headphones and mobile phone closer together
Sound is too soft	Low volume	Increase the volume
Pairing unsuccessful / Cannot find the pairing name on the device	Too many pairing records or not paired properly	Remove at least one pairing from your device's pairing list, reset and pair the headphones again

疑难排除

故障	原因	解决方法
启动失败	低电量	为耳机充电
配对后没有声音	配对程序出错	先重置耳机再重新配对
耳机自动关机	低电量	为耳机充电
耳机不能充电	电源问题	先重启耳机及为耳机充电
充电期间没有指示灯	电源问题	检查充电线是否插好及电源是否开启
迴声	音量太高或环境过于嘈杂	调整音量或改变使用环境
电话中的噪音	环境干扰或耳机跟设备距离超出范围	改变使用环境或缩短耳机和设备之间的距离
信号不好及有断续	环境干扰或耳机跟设备距离超出范围	远离干扰信号或缩短耳机与设备之间的距离
声音太少	音量太低	调高音量
耳机配对失败/不能在装置蓝牙界面搜寻耳机/	太多配对记录/配对程序出错	删除其中一个已配对设备, 重置耳机再重新配对

疑難排除

故障	原因	解决方法
啟動失敗	低電量	為耳機充電
配對後沒有聲音	配對程式出錯	先重置耳機再重新配對
耳機自動關機	低電量	為耳機充電
耳機不能充電	電源問題	先重啟耳機及為耳機充電
充電期間沒有指示燈	電源問題	檢查充電線是否插好及電源是否開啟
迴聲	音量太高或環境過於嘈雜	調整音量或改變使用環境
電話中的噪音	環境干擾或耳機跟設備距離超出範圍	改變使用環境或縮短耳機和設備之間的距離
信號不良及有斷續	環境干擾或耳機跟設備距離超出範圍	遠離干擾信號或縮短耳機與設備之間的距離
聲音太少	音量太低	調高音量
耳機配對失敗/不能在裝置藍牙界面搜尋耳機	太多配對記錄/配對程式出錯	刪除其中一個已配對設備, 重置耳機再重新配對

故障だと思ったら

症状	原因	解决方法
電源が入らない	電池の残量がない	充電してください
ペアリング完了後音が出ない	ペアリング失敗	リセットしてから再度ペアリングしてください
電源が切れる	電池の残量がない	充電してください
充電できない	電源エラー	ヘッドホンのリセットしてから充電してください
充電中点灯しない	電源エラー	USB充電ケーブルが確実に接続されているかどうかを確認し、電源がオンになっているかどうかを確認してください
エコーがある	音量または周囲の音が大きすぎる	音量を調整し、使用環境を変えてお試しください
通話中雑音があり、音が途切れる	電波状況が悪い、または接続機器との距離が遠い	通信状況の良い場所に移動し、ヘッドホンと機器を近づけてください
音が小さい	接続機器の音量が低い	機器の音量を上げてください
ペアリング失敗/接続機器にヘッドホンが表示されない	接続している機器が多すぎる、ペアリングエラー	ほかの設備との接続記録を削除してから、ヘッドホンのリセットして再度接続してください

Controls

觸控操作 / 触控操控 / コントロール

Music			-
			-
			2s
			2s
			-
			-
ANC			
			-
Call			-
			2s
Voice Assistant			2s



Specifications

产品规格 / 產品規格 / 仕様

Nokia Essential Wireless Headphones E1200ANC

Wearing style	: Wireless headphones
Ear coupling	: Circumaural
Frequency response	: 20Hz to 20kHz
Transducer principle	: Dynamic, closed
Transducer size	: 40mm
Sound pressure level(SPL)	: 100dB(1kHz/1mW)
Impedance	: 32Ω
Microphone principle	: MEMS x 1
Power supply	: Built-in Lithium rechargeable batteries 700mAh/3.7V
Operating time	: 50hrs with ANC off, 24hrs with ANC on (music playback via A2DP with 70% of the volume) with rechargeable batteries of the headphones*
Charging time	: Approx. 3hrs
Ingress protection (earbuds)	: Anti-dust and splash proof (IP44)
Weight	: Approx. 228g
Volume control	: Yes

Bluetooth


Version	: Bluetooth specification version 5.0
Profiles	: HFP, AVRCP, A2DP
Effective range	: Line of sight approx. 30ft(10m)
Transmission frequency	: 2400MHz to 2483.5MHz
Output power	: 10mW (max.)
Supported audio format(s)	: SBC, AAC

* Battery life depends on device settings, environment, usage and many other factors.

Reset

重置 / 重置 / リセット

Clearing all pairings / 清除所有配对 / 清除所有配对 / 全てのペアリングを解除する

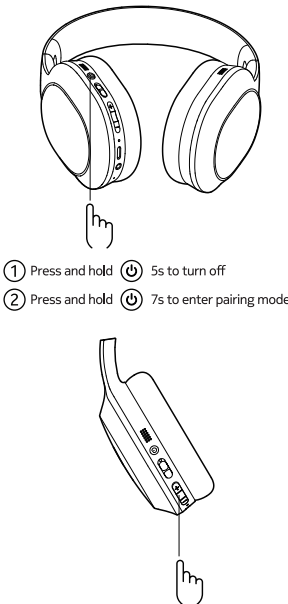

3 Press and hold the power button and volume up/down buttons in the same time for 5s to reset

Safety guide

Important safety instructions

- Please read this user guide and warranty manual carefully before using the product for the first time.
- Do include this user guide if passing the product on to new users.
- Please inspect the product before use. If there are signs of defects, please stop using the product immediately.
- Use only the product in environments where wireless Bluetooth®transmission is permitted.



Preventing damage to health and accidents

- Do not listen at high volumes, especially for extended periods, to prevent hearing injury.
- The permanent magnetic fields created by this product may interfere with medical implants such as cardiac pacemakers and implanted defibrillators (ICDs). Please always maintain a distance of at least 10cm (3.94") between the products' magnetic component/s and implanted medical device/s at all times.
- Keep this product, its accessories and packaging out of reach of young children or pets, as these may pose choking hazards.
- Do not use the product in an environment that requires your special-attention (e.g. in traffic).

Preventing damage to the product and malfunctions

- Always keep the product dry and avoid exposure to heat sources (including hairdryers, heaters, prolonged strong sunlight etc.) as this may result in product deformation or malfunction. The normal operating temperature of the product is 0 °C/40 °C or 32 °F/104 °F.
- Please do not use any attachments, accessories, or spare parts with the product unless they are included with the product or recommended by RichGo Technology Co. Ltd.
- The product should only be cleaned, where necessary, with a soft, dry cloth.

Safety instructions for lithium rechargeable batteries
WARNING
In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused:
• explosion • fire development • heat generation • smoke or gas development

Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.

Only use rechargeable batteries recommended by RichGo and the appropriate chargers.

Only charge the product / rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F.

Switch battery pack-powered products off after use.

When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months).

Do not heat the product / rechargeable batteries above 70 °C/158°F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.

安全须知

重要安全提示

- 在使用产品前请认真完整阅读用户指南及保固指南。
- 请始终将本产品连同用户指南一起交给其他使用者。
- 如果设备有明显的损伤，请不要继续使用。
- 只能在允许无线蓝牙®传输的地方使用本产品。



防止可能危害健康和引发事故的情况

- 为了保护您的听力，请不要长时间使用高音量听音乐。
- 本产品会产生较强的持久磁场，可能会对心脏起搏器和植入式除颤器 (ICD)和其他植入物造成干扰。含有磁铁的产品元件与心脏起搏器、植入式除颤器或其他植入物之间必须保持 10 厘米 (3.94 英寸) 的距离。
- 请将产品零件、包装零件和附件零件放置在儿童和宠物无法触及之处，以防发生误食和窒息危险。
- 请勿在需要集中注意力的环境（例如道路上）使用本机。

防止产品损坏和故障

- 保持产品干燥，不要将其暴露在低温或较高的环境温度下(吹风机、加热器、长时间日照等)以导致损坏或变形。正常使用温度在 0 °C 至 40 °C 之间。
- 仅可使用由制造商提供或推荐的附件/配件/备件。
- 只用干燥的软布清洁产品。

电池、充电电池的安全说明
警告
在极端情况下，如果发生滥用或误用，标准/充电电池可能会泄漏，并可能造成以下危害：
• 过热 • 着火 • 爆炸 • 产生烟雾或有害气体

将报废的产品包括电池交到正规废旧回收中心或专业经销处。

请仅使用制造商推荐的电池和匹配的充电器。

只能在 10 °C 至 40 °C 的环境温度下给电池充电。

使用完毕后，关闭电池供电的产品。

即使长时间不使用也要定期给电池充电（约每 3 个月充电一次）。

不得将充电电池加热超过 70 °C。请避免日晒，切勿将充电电池扔入火中。

安全須知

安全注意事項

- 使用本產品前，請先認真及完整地閱讀用戶指南及保固指南（隨附提供）。
- 交給給他人本產品時，請務必附上本安全指示。
- 本產品明顯受損時，請勿使用。
- 使用本產品之前，請先確認所在環境是否允許使用藍牙® 無線技術。



避免導致損害健康及意外事件。

- 請勿長期聽高聲量的聲音，以免聽力受損。
- 產品會產生較強的永久磁場，可能會對心律調節器、植入式心臟變流器（ICD）和其他植入物造成干擾。在包含磁場的產品元件與心律調節器、植入式心臟變流器或其他植入裝置之間，務必保持至少 10 公分 (3.94 英寸) 的距離。
- 請將產品零件、包裝零件和附件零件放置在兒童和寵物無法觸及之處，以防發生誤食和窒息危險。
- 請勿在需要集中注意力的環境（例如道路上）使用本機。

避免造成產品損壞和干擾

- 請務必保持產品乾燥，並不可將其暴露於極高溫或極低溫環境(吹風機、暖氣、長期陽光照射)時，以免導致損壞或變形。正常使用溫度在 0 °C 至 40 °C 之間。
- 請務必使用製造商提供或建議的附件、配件和備用零件。
- 清潔本機時，只可使用乾燥軟布。

電池/充電電池使用安全注意事項
警告
在極端情況下，充電電池可能會洩漏，如果濫用或誤用可能會導致以下危害：
• 產生過熱現象 • 產生火災 • 產生爆炸 • 產生煙霧

將損壞的產品包括充電電池交回收集點或在您附近的經銷商。

請僅使用製造商推薦的充電電池及為其搭配的充電器。

僅在環境溫度為 10 °C 到 40 °C 時對電池充電。

由電池提供電源的產品，不使用時務必關機。

長期不使用時，應定時（約每三個月）為電池充電。

請勿讓電池承受 70 °C 以上的溫度，應避免陽光直射，且不可將電池丟入火中。

安全ガイド

安全に関する注意事項

- 本製品をお使いになる前に、この安全ガイドをよくお読みの上で、正しくご使用ください。
- 本製品を他人に譲渡する場合は必ず本書と一緒にお渡ください。
- 本製品に異常がある場合はご使用を止めください。
- 本製品はBluetoothの使用を許可された環境でのみご使用できます。



健康被害と事故を防止するために

- 聴覚被害を防止するために、大音量で長時間使用しないでください。
- 本製品は磁石を活用したワイヤレス製品です。人工心臓装置やペースメーカー、除颤器などの使用状況によっては使用電磁機界または家庭用磁器に影響を与える恐れがあります。磁気の影響の恐れがあるものに近づけないでください。
- 事故を防止するため、幼児、子供の手の届く場所に保管しないでください。誤って部品を飲み込む恐れがあります。
- 屋外でご使用する場合、周囲の交通状況に十分ご注意ください。交通事故の原因になります。

製品の破損と故障を防止するために

- 極端な温度下での使用はおやめください。異常な低温または高温な場所に保管すると故障の原因になります。また、長時間直射日光が当たる場所に置かなくてください。
- 純正部品または推奨するアクセサリでご使用ください。付属品は本製品専用であり、その他の製品に使わないでください。
- 本製品の充電端子を汚ないように、やわらかい綿質布で乾拭きしてください。

バッテリーについて安全上の注意事項
警告
本製品は充電式電池を内蔵しています。正しく使用しないと発熱・発火・破損などの原因になります。また、万が一液漏れした場合は素手でさわらないでください。

ご使用済みの製品は、分解せずにそのまま最寄りのリサイクル協力店に設置してある「充電式電池リサイクルBOX」にお入れください。

本体を充電する際は、推奨品もしくは本製品に適したAC充電器をお使いください。

周囲の温度が10℃～40℃の範囲内で充電を行ってください。

使用しない時は電源を切ってください。

長期間使用しない場合は、バッテリーを定期的に充電してください。（約3ヶ月ごと）

火の中に投入したり、加熱したりしないでください。高温の状態での使用はおやめください。直射日光を避けて保管してください。

注意事項を守る / 賠償責任

本製品は、Bluetooth無線通信技術を使用した、音楽再生や電話通話などを目的として使用するアクセサリです。安全ガイド、ユーザーガイドに記載している使用方法をよくお読みの上でご使用ください。また、本来の目的以外での本製品のご使用はおやめください。誤ったご使用方法による故障や破損、指定・推奨以外の機器やケーブルのご使用による製品損傷などについては一切の責任を負いません。長期使用・保管による、ヘッドホン及び充電ケースの内蔵電池の劣化が原因で生じた通信障害などの問題については保証対象外です。

製造者宣言

法規定表示に関する詳細情報は以下にてご確認ください。



Li-Ion

本機を廃棄するときのご注意
本製品はリチウムイオン電池を内蔵しています。この電池は一般家庭ゴミとして廃棄しないでください。廃棄する際はリチウムイオン電池が、ゴミ収集車などで破裂してショートした場合、発火や発煙の原因になります。ご使用済みの製品は、分解せずにそのまま最寄りのリサイクル協力店に設置してある「充電式電池リサイクルBOX」にお入れください。

RichGo Technology (Shenzhen) Co.Ltd is a licensee of the Nokia brand for earphones and mobile accessories. Nokia is a registered trademark of Nokia Corporation.

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by RichGo is under license.

For product support, please visit <http://www.nokia.com/shop/support> or call 4009993019 (CN)

Intended use/Liability

RichGo will not be responsible for any indirect or consequential loss, loss of profits or loss of data. Warranty will be void under the following conditions, and manufacturer reserves the right to refuse to provide service and to demand charges for any costs of servicing from the customer.

There will be no warranty if the product has been modified or repaired by persons not authorized by manufacturer; Mishandling or wrong application of product, such as leaving batteries over an extended period in the product causing battery fluid leakage, or applying wrong voltage, manual destruction, damage caused by natural disaster or accident; Product caused by impact sand or liquid damage, tampering, or operating fail; Install and maintain product without following instructions provided by the manufacturer; If the model number or item code attached with the product has been erased or modified; Modify without authorization the contents of this warranty policy.

If the product have been used for commercial, display, demonstration or rental purpose. All parts replaced within the warranty period are properties of manufacturer. We have the right to handle those parts as necessary.

Warranty covers only the hardware of the product's main body. All other accessories are not covered within the warranty terms, such as external connection cable, power cable, computer cables, software, CD, external cover/cabinet and user manual. (For item description and accessories, please refer to the user manual/instruction manual/user guide)

Manufacturer Declarations

More information on legal compliance labels can be found at the end of this document.

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy. The crossed-out wheellie bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.



规范使用/责任

此款耳机作为蓝牙兼容型附件设备，专门设计用于无线音频通讯，如播放音乐或通过蓝牙技术通话等。任何在产品指南中未指定的用途都被认为是对产品的使用。对产品以及附加设备/配件的滥用或不规范使用造成的损坏，制造商不承担任何责任。

如果使用规格不符合要求的 USB 设备，制造商对可能造成的损坏不承担任何责任。制造商公司对因电池电量耗尽、过度老化或超出蓝牙信号范围而导致的通讯中断及其损失不负任何负责。在使用本设备前，请务必遵守所在国家的法律法规！

制造商声明

有关合规性标记的更多信息，请参见文档末尾。



带有叉号的四轮回收车标志

产品、电池、印刷品或包装上带有叉号的四轮回收车标志提醒您，当所有电气和电子产品以及电池的使 用寿命结束时必须将其送至单独的回收站。请勿将这些产品作为未分类的市政废物处理;对其进行回收。有关您最近的回收点的信息，请咨询当地废物处理部门。

China RoHS

部件名称 Part name	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CrVI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 (Metal parts)*	o	o	o	o	o	o
电路模块 (Circuit modules)	o	o	o	o	o	o
电池 (Battery)	o	o	o	o	o	o

本表格依据 SJ/T 11364 的规定编制。
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求之下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

中国电池警告 / China battery warning
禁止拆解、撞击、挤压或投入火中。切勿置于高温环境中。若出现严重鼓胀，请勿继续使用。电池浸水后禁止使用。 * 仅适用于 SEBT4。