


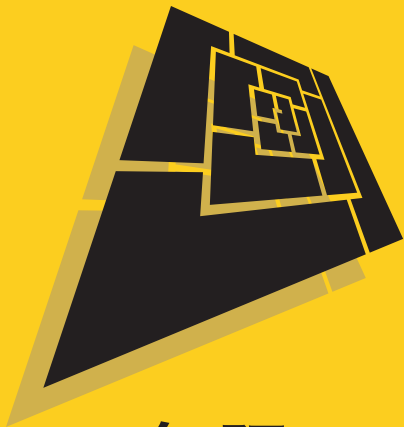


無限

MUGEN

MUGEN

Instruction Manual

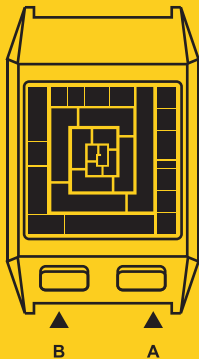

- Key A - Time Telling
- Key B - Set function
- キー A 時間表示
- キー B 時間設定

Example 1 : 4:35

4 o'clock

35th min



Example 2 : 10:43

43rd min

10 o'clock



How to set the time :

- Hold Key B for about 5 seconds, the Hour segment will blink (Minute segment is not blinking); press Key A to increase the Hours,
- Press Key B to confirm and move to Minute segments; Press Key A to increase the Minutes,
- Press Key B to confirm and exit.

時間設定：

- キーBを約5秒間押し、時間表示部分を点滅させます。(分表示部分は点滅しません)。キーAを使い時間を設定します。
- キーBを再度押し時間を確定、分設定に移ります。分表示部分が点滅したら、キーAで分設定を行います。
- キーBを押し設定モードを終了します。

Battery replacement

- One Lithium battery CR1620 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

電池の交換

CR1620 を使用しています。

もし少しでも時計の表示が暗くなった場合
すぐに使用を中止し、電池の交換を行ってください。

弱った電池を使い続けると、中の電子部分が
損傷する可能性があります。

電池の交換は専門の時計店等で行うことを
お勧めいたします。

注意

水中や水滴が表面についた状態でボタンを押さないで
ください。

高温、直射日光を避けてください。材質が変化する可能性
があります。

商品を落下させたりしないでください。

In association with Tokyoflash Japan
www.tokyoflash.com

