CLOSE CUT PRECISION

PROFESSIONAL, HIGH-PERFORMANCE LITHIUM ION METAL CLIPPER & TRIMMER



BC

Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONAIRMAN

Respect the Ritual®

Model HC6500

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

FOR HOUSEHOLD USE ONLY

DANGER – Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Unplug this appliance before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in the shower.
4. Do not place in, or drop into, water or other liquids.
5. Do not reach for an appliance that has fallen into water. **Unplug immediately.** For dry location use only. Do not expose to liquids, vapor or rain.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **Except when charging, this appliance should never be left unattended when plugged in.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged or dropped into water.** Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Keep air openings free of lint, hair and similar objects.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
12. Avoid skin coming into contact with moving blade.
13. Do not short the polarity (output cord) – ensure jack is plugged into the unit before plugging the adapter into outlet.
14. Use only with a certified USB power source, such as a computer, receptacle, lamp, class 2 power supply or automotive adapter.
15. This appliance is not a toy. Keep away from children.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: CONAIRMAN®
Model No.: HC6500
Description: Clipper
Responsible Party: Conair LLC,
1 Cummings Point Road,
Stamford, CT 06902 (203) 351-9000
Standards: FCC Part 15 Subpart B,
ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: October 10, 2022

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.
Use with adapter: CA74
Rated input voltage:
100–240V AC, 50/60Hz 0.3A
Rated output: 5.0V DC, 1000mA

OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use, unplug unit completely.
3. Unit will become warm during operation.

CAUTION

1. Ensure jack is plugged into the clipper unit before plugging the adapter into the outlet.
2. Do not operate any appliance that has a damaged output cord or housing.
3. Always unplug the unit before cleaning or when not in use, except when charging.
4. This power unit is intended to be correctly oriented in a vertical or floor-mount position.
5. Be sure voltage is correct before plugging in. The adapter included automatically adjusts to the input voltage. For connection to a power supply not in the U.S.A., use an attachment plug adapter of the proper configuration for power outlet. **DO NOT USE WITH A VOLTAGE CONVERTER.**

FEATURES

- Cordless clipper – use cordless for total flexibility and control.
- Lithium-ion technology with powerful DC motor for powerful cutting action and sustained power performance.
- Precision-engineered high-grade hardened steel blades with unique super-sharp cutting angle for smooth, effortless cutting.
- Taper control for custom settings.
- 3-hour full charge for approximately 3 hours of use.

Your new CONAIRMAN® haircut kit has everything you need to achieve professional haircuts at home. It features a high-performance metal series clipper with adjustable taper control. The clipper is engineered with Japanese stainless steel blades. Japanese stainless steel is considered one of the best brands and is renowned for its strength and the ability to hold the sharpest edge. Also included are 8 comb attachments for different hair lengths, barber scissors, a storage pouch, cleaning brush, lubricating oil and a blade guard.

INSTRUCTIONS FOR USE

CHARGING THE APPLIANCE

IMPORTANT

To charge the clipper, first ensure the clipper is switched off, plug the USB cable into the USB port on the USB adapter with output 5.0V DC, 1000mA, then insert the Micro USB plug into the bottom of the clipper. Plug the adapter into wall outlet (at the voltage listed on the label affixed to the adapter). Unplug adapter when not in use.

This clipper is easy to use, but before first use, you must charge the unit for 3 hours. **Maximum battery capacity will be reached only after 3 charging/discharging cycles.** A full charge will provide approximately 2 hours use. When the clipper is about to run out of power, the charging indicator will flash and you will have approximately 10 minutes of use remaining. The charging LED indicator light will flash when correctly connected to the main power and will continuously flash until the battery has fully charged. When the battery is fully charged, the LED indicator light will stop flashing but remain on.

WARNING: When charging, the unit can't operate. If the charging light suddenly starts to flash rapidly, the appliance is faulty. If this happens, stop charging, remove the adapter from the outlet and contact our Customer Care Center for further advice (see the Warranty section of this information booklet).

OILING INSTRUCTIONS

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance. Unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades, ensure that the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil to the blades (see FIGS. 1, 2, and 3). Leave the unit on for a few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

Be careful not to use too much oil and don't oil your clipper more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.)

KEEP OIL OUT OF REACH OF CHILDREN.




FIG. 1



FIG. 2




FIG. 3

PRESERVING THE BATTERY

In order to maintain the optimum capacity of the rechargeable battery, the appliance has to be fully discharged approximately every 6 months. Then recharge the device for 3 hours to full capacity again.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled and running smoothly.
2. Place a barber cape or a towel around the neck of the person whose hair is to be cut.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. Comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.


MEDIUM-TO-LONG CUT

To begin, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short attachment comb (number 0) cuts hair to 1/32" (0.8mm).
- Short attachment comb (number 0.5) cuts hair to 1/16" (1.5mm).
- Medium attachment comb (number 1) cuts hair to 1/8" (3mm).
- Medium attachment comb (number 2) cuts hair to 1/4" (6mm).
- Medium attachment comb (number 3) cuts hair to 3/8" (9.5mm).
- Long attachment comb (number 4) cuts hair to 1/2" (13mm).
- Long attachment comb (number 5) cuts hair to 5/8" (16mm).
- Long attachment comb (number 6) cuts hair to 3/4" (19mm).




Attach comb by holding it teeth up, then snapping onto the bottom of the clipper blade.

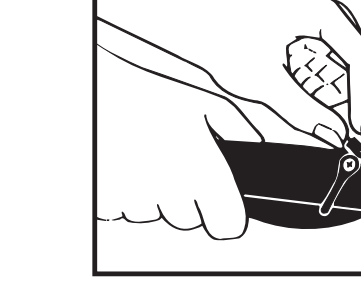


To remove comb attachment, place index finger and thumb as illustrated; then pull out and up.


NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

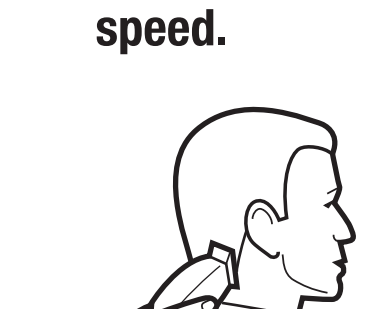

To begin cutting hair:

1. The hair should be combed in its natural direction.
2. Using the longest comb attachment, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the comb attachment pointing upward yet flat against the head.

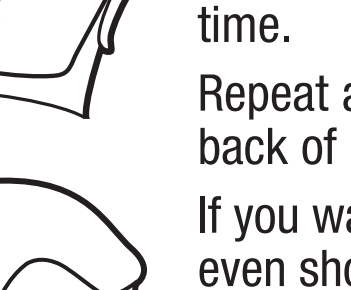

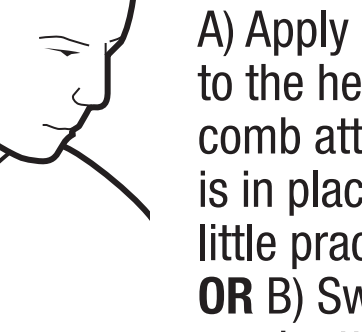

Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:


A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course. **OR** B) Switch to a shorter comb attachment.



Remember, it's better to leave too much hair than too little.

For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands and to get rid of trimmed hair.

OUTLINING

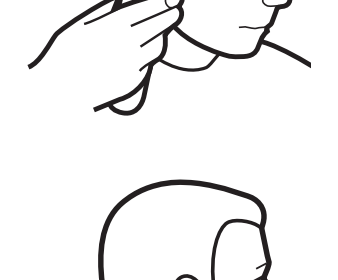



Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see illustration), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper in the opposite direction and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do: Comb hair often and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.



For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

INSTRUCCIONES DE MANTENIMIENTO

MANTENIMIENTO DE SU CORTADORA DE CABELLO

ALINEACIÓN DE LAS CUCHILLAS:

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTENGALO AL EJADO DEL AGUA

SIEMPRE DESENCHUFE LOS APARATOS EEQUIENES

INFORMACIÓN DE SEGUIDAD ACERCA DE LAS PILAS/BATERÍAS

ELIMINACIÓN DE LA BATERÍA

REMOCIÓN DE LA BATERÍA

PALANCA DE AJUSTE DE LONGITUD DE CORTE

BATTERY REMOVAL

BATTERY DISPOSAL

BATTERY SAFETY INFORMATION

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

ALWAYS UNPLUG SMALL APPLIANCES

KEEP AWAY FROM WATER

FADE OR TAPER

USER MAINTENANCE INSTRUCTIONS

CARE OF YOUR CLIPPER

IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:

ADJUSTABLE TAPER LEVER

GARANTÍA LIMITADA DE 5 AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ EN SOLAMENTE)