

SAMSUNG

User Manual

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance

HW-Q930C / HW-Q800C

You can access the FULL MANUAL on Samsung's on-line customer support centre by scanning the QR code on the left.
To see the manual on your PC or mobile device, download the manual in document format from Samsung's website. (<http://www.samsung.com/support>)

© 2023 Samsung Electronics Co., Ltd. All rights reserved.

Contact **SAMSUNG WORLD WIDE**

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Center.

Country	Samsung Service Center ☎	Web Site
TÜRKİYE	444 77 11	www.samsung.com/tr/support

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. Refer to the table below for an explanation of symbols which may be on your Samsung product.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.	
	This symbol indicates that this product has included important literature concerning operation and maintenance.	
	Class II product : This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a power cord, the product MUST have a reliable connection to protective earth (ground).	
	AC voltage : Rated voltage marked with this symbol is AC voltage.	
	DC voltage : Rated voltage marked with this symbol is DC voltage.	
	Caution. Consult Instructions for use : This symbol instructs the user to consult the user manual for further safety related information.	

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

- TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases, on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times

PRECAUTIONS

- Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the bottom of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use.
To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.
- During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.
- Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.
- Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Unplug the power cable from the AC wall socket if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.
- The battery used with this product contains chemicals that are harmful to the environment. Do not dispose of the battery in the general household trash. Do not expose the battery to excess heat, direct sunlight, or fire. Do not short circuit, disassemble, or overheat the battery.
CAUTION : Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.

01 CHECKING THE COMPONENTS


Soundbar Main Unit / Soundbar Remote Control / Batteries / Subwoofer / Surround Speaker x2 (Left/Right, HW-Q930C model only) / HW-Q930C : Power Cord X 4 (Subwoofer, Surround Speaker, Soundbar) / HW-Q800C : Power Cord X 2 (Subwoofer, Soundbar) / HDMI Cable / Wall Mount Guide / Holder-Screw X 2 / Rubber-Foot X 4

NOTE

- For more information about the power supply and power consumption, refer to the label attached to the product. (Label: Rear of the Soundbar Main Unit)
- To purchase additional components or optional cables, contact a Samsung Service Centre or Samsung Customer Care.
- The number of power cables may differ with the model.


02 PRODUCT OVERVIEW

Top Panel of the Soundbar

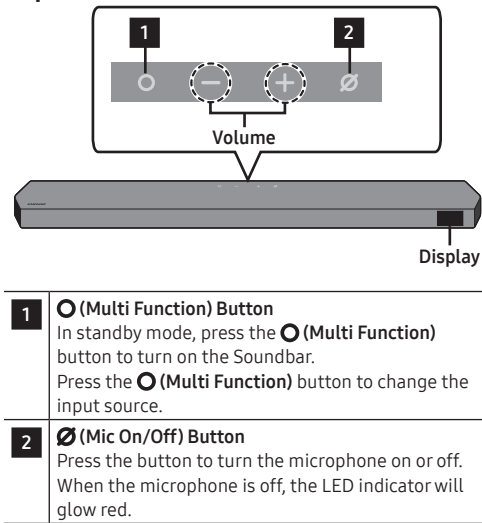


- (Multi Function) Button**
In standby mode, press the **○ (Multi Function)** button to turn on the Soundbar.
Press the **○ (Multi Function)** button to change the input source.
- ⊘ (Mic On/Off) Button**
Press the button to turn the microphone on or off. When the microphone is off, the LED indicator will glow red.

Bottom Panel of the Soundbar

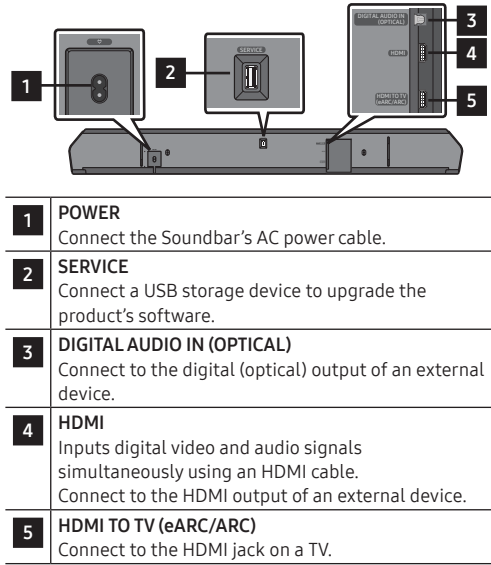


03 CONNECTING THE SOUNDBAR

Connecting the power and units

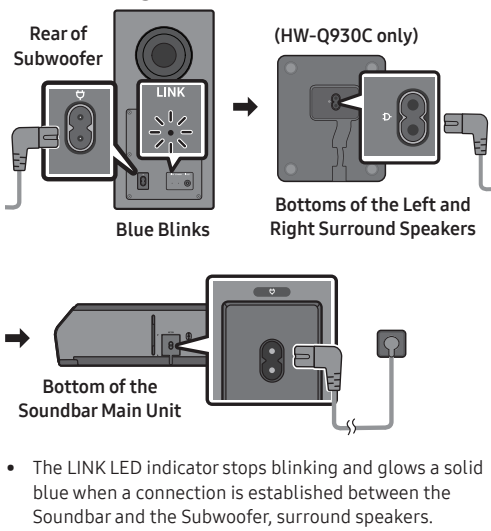

- The LINK LED indicator stops blinking and glows a solid blue when a connection is established between the Soundbar and the Subwoofer, surround speakers.

04 USING A WIRED CONNECTION

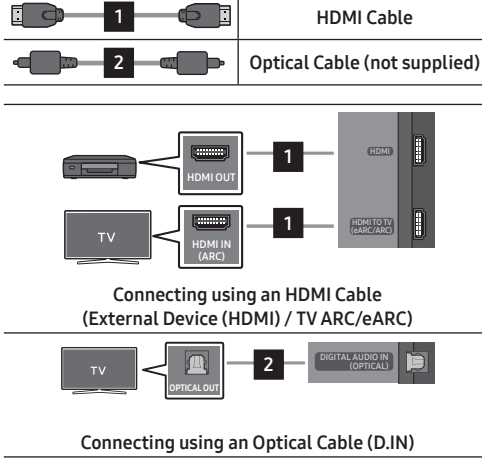

NOTE

- When the TV sound is not output, press the **○ (Multi Function)** button at the top of the Soundbar or the **Ⓢ (Source)** button on the remote control to select the "D.IN" mode. The screen displays "D.IN" and "TV ARC/ eARC" in sequence, and TV sound is played.
- The recommended cable is a **Premium High Speed HDMI Cable with Ethernet** certified by HDMI.org.
- When you use an optical cable and the terminals have covers, be sure to remove the covers.

Using the Q-Symphony Function


When the Soundbar connects to a Samsung TV that supports the Q-Symphony function you can play the sound simultaneously through the Soundbar and the TV. If you use the Q-Symphony function, the surround sound played on the TV allows you to enjoy a richer, more three-dimensional surround sound effect.
When the Soundbar is connected "TV+Soundbar" menu appears on the TV.
(Settings (⚙) → All Settings (⚙) → Sound → Sound Output)

Using the SpaceFit Sound

This function analyzes the user's listening space with the Soundbar's microphone and provide optimal sound for the space. Sound optimization proceeds automatically.

05 USING A WIRELESS CONNECTION

Connecting via Bluetooth

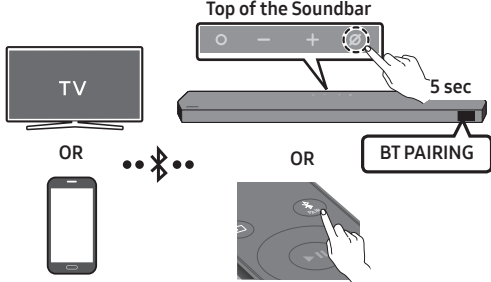

What is the difference between BT READY and BT PAIRING?

- BT READY** : In this mode, you can reconnect any Samsung TV or mobile device that was connected before.
- BT PAIRING** : In this mode, you can connect a new device to the Soundbar.
(Press the **⌘ PAIR** button on the Soundbar remote control or press and hold the **⊘ (Mic On/Off)** button on the top of the Soundbar for more than 5 seconds while the Soundbar is in "BT" mode.)

NOTE

- If asked for a PIN code when connecting a Bluetooth device, enter <0000>.

Connecting via Wi-Fi (Wireless Network)

- To connect a Soundbar to a mobile device via a wireless network (Wi-Fi), the **SmartThings** app is required.
1. Connect your mobile device (smartphone, tablet, etc.) to the Wi-Fi network the TV is connected to.
- 2. Install and launch the **SmartThings** app on your mobile device (smartphone, tablet, etc.).
- 3. Follow the instructions in the app screen on the mobile device to connect the Soundbar to your Wi-Fi network.

06 TROUBLESHOOTING

Before seeking assistance, check the following.


Soundbar does not turn on.

- Check whether the power cord of the Soundbar is correctly inserted into the outlet.


When the subwoofer or surround sound speakers are not automatically connected

- Turn off the Soundbar main unit.
- Press and hold **ID SET** on the rear of the subwoofer and surround speakers for at least 5 seconds.
 - The surround speakers may not be provided, depending on the model.


Subwoofer

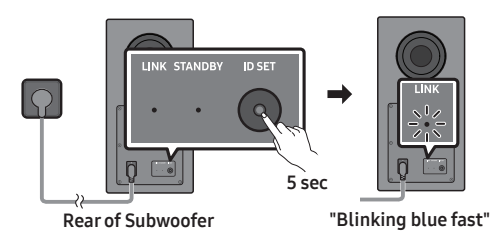

Surround Speaker (HW-Q930C only)

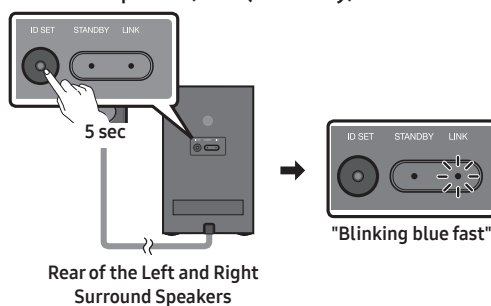

- Press the **Up** button on the remote control for 5 seconds.

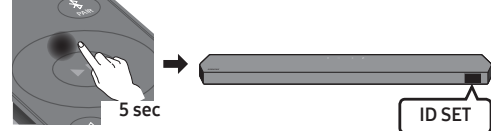

- Check if the LINK LED is solid blue (connection complete).
 - The LINK LED indicator stops blinking and glows a solid blue when a connection is established between the Soundbar and the Subwoofer, surround speakers.

Soundbar works erratically.

- After removing the power cord, insert it again.
- Try again after initialising the product.
- If there is no signal, the Soundbar automatically turns off after a certain period of time. Turn on the power.

Remote control does not work

- Point the remote directly at the soundbar.
- Replace the batteries with new ones.

The Soundbar indicator turns solid red.

- The microphone is turned off. Turn on the microphone.

Sound is not output from the soundbar.

- The volume of the Soundbar is too low or muted. Adjust the volume.
- When any external device (STB, Bluetooth device, mobile device, etc.) is connected, adjust the volume of the external device.
- For sound output of the TV, select Soundbar. (Samsung TV: Home (⏏) → Menu → Settings (⚙) → All Settings (⚙) → Sound → Sound Output → Select Soundbar)
- Remove the cable from the Soundbar and then reconnect it.

Sound is not output from the subwoofer or the surround speakers.

- Check whether the LED on the rear of the Subwoofer and Surround Speakers lights in blue. Reconnect it when the blue LED blinks or the red LED lights.

If the TV is not connected via HDMI TO TV (eARC/ARC)

- Check whether the HDMI cable is correctly connected to the ARC terminal.
- Connection may not be possible due to the connected external device (set-top box, game console, etc.). Directly connect the Soundbar.
- HDMI-CEC may not be activated on the TV. Turn on the CEC on the TV menu. (Samsung TV: Home (⏏) → Menu → Settings (⚙) → All Settings (⚙) → Connection → External Device Manager → Anynet+ (HDMI-CEC) ON)

Soundbar will not connect via Bluetooth.

- When connecting a new device, switch to "BT PAIRING" for connection. (Press the **⌘ PAIR** button on the remote control or press the **⊘ (Mic On/Off)** button on the body for at least 5 seconds.)
- Reconnect it after removing the Bluetooth speaker list on the device to connect. (Samsung TV: Home (⏏) → Menu → Settings (⚙) → All Settings (⚙) → Sound → Sound Output → Bluetooth Speaker List)

Sound drops out when connected via Bluetooth.

- Some devices can cause radio interference if they are located too close to the Soundbar. e. g. microwaves, wireless routers, etc.
- If your device that is connected via Bluetooth moves too far away from the soundbar, it may cause the sound to drop out. Move the device closer to the soundbar.
- If a part of your body is in contact with the Bluetooth transceiver or the product is installed on metal furniture, the sound may drop out. Check the installation environment and conditions for use.


Soundbar will not connect to Wi-Fi.

- Make sure the wireless router is turned on and then reconnect the wireless router after rebooting.
- The soundbar will not connect if the wireless signal is too weak. Try moving the router closer to the soundbar, or eliminating any obstacles that are between the soundbar and the router, if possible.

The soundbar does not turn on automatically with the TV.

- When you turn off the Soundbar while watching TV, power synchronization with the TV is disabled. First turn off the TV.

07 LICENCE

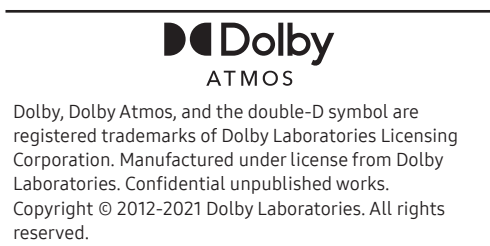

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies).
DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



- Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how
- The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>.

To send inquiries and requests for questions regarding open sources, contact Samsung Open Source (<http://opensource.samsung.com>)



- Apple, Airplay, iPhone, iPad, and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

08 IMPORTANT NOTES ABOUT SERVICE

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read). (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

09 SPECIFICATIONS AND GUIDE

Model Name HW-Q930C	
Weight 5.1 kg	Dimensions (W x H x D) 1110.7 x 60.4 x 120.0 mm
Operating Temperature Range +10 °C to +40 °C	Operating Humidity Range 10 % to 80 %, non-condensing
Storage Temperature -20 °C to +45 °C	Storage Humidity 5 % to 95 %, non-condensing
AMPLIFIER Rated Output power (30 W x 3) + (20 W x 4) + (10 W x 3)	
Supported play formats Dolby 5.1ch / Dolby Digital Plus / Dolby TRUE HD / Dolby ATMOS / DTS 5.1ch / DTS HD / DTS-HD Master Audio / DTS:X / LPCM 8Ch	
Subwoofer Name PS-WC96B	
Weight 9.8 kg	Dimensions (W x H x D) 210.0 x 403.0 x 403.0 mm
AMPLIFIER Rated Output power 160 W	
Surround Speaker Name (HW-Q930C only) PS-RC96B (LEFT/RIGHT)	
Weight 3.1 kg	Dimensions (W x H x D) 129.5 x 201.3 x 140.4 mm
AMPLIFIER Rated Output power 140 W	

NOTE

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- The surround speakers are provided for specific models only.

Precaution : The Soundbar will restart automatically if you turn on/turn off Wi-Fi.

Overall Standby Power Consumption (W)

7.5 W

Wi-Fi Port deactivation method

Press the **CH LEVEL** button on the remote control of the Soundbar for 30 seconds to turn Wi-Fi On / Off.

Bluetooth Port deactivation method

Press the **TONE CONTROL** button on the remote control of the Soundbar for 30 seconds to turn Bluetooth On / Off.


- Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements.

The full text of the declaration of conformity is available at the following internet address:
<http://www.samsung.com> go to Support and enter the model name.

This equipment may be operated in the TÜRKİYE. The 5GHz WLAN(Wi-Fi or SRD) function of this equipment may only be operated indoors.

WIRELESS DEVICE OUTPUT POWER

RF max transmitter power
100mW at 2.4GHz-2.4835GHz
200mW at 5.15GHz-5.25GHz & 5.47GHz - 5.725GHz
100mW at 5.25GHz-5.35GHz
25mW at 5.725GHz-5.875GHz




(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH, WEEE, Batteries, visit:
www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/

SAMSUNG

Kullanıcı Kılavuzu

Bu Kullanıcı Kılavuzu'ndaki resimler ve şekiller yalnızca referans amaçlı olarak sağlanmıştır ve ürünün gerçek görünümünden farklı olabilir.

HW-Q930C / HW-Q800C



KULLANIM KILAVUZUNUN TAM SÜRÜMÜ belgesine, soldaki QR kodunu tarayarak Samsung'un çevrimiçi müşteri destek merkezinden erişebilirsiniz.
PC'nde veya mobil cihazınızda görmek için Samsung web sitesinden belge biçimindeki kılavuzu indirebilirsiniz. (<http://www.samsung.com/support>)



AH81-16812E-00
NSPBI01427A-00

© 2023 Samsung Electronics Co., Ltd. Tüm hakları saklıdır.

SAMSUNG WORLD WIDE ile iletişim kurun
Samsung ürünleri ile ilgili soru ve yorumlarınız için SAMSUNG Müşteri Hizmetleri Merkezi ile iletişime geçebilirsiniz.

Ülke	Samsung Servis Merkezi ☎	Web Sitesi
TÜRKİYE	444 77 11	www.samsung.com/tr/support

İthalatçı Firma

SAMSUNG

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD. ŞTİ
Flatofis İstanbul İş Merkezi, Otaközü Cad. Bina
No: 78, Kat:3, No: B3, 34050, Etiler, İstanbul / Türkiye
Tel: (0212) 467 06 00

Bu ürünün ortalama yaşam süresi 10 yıldır

İmalatçı	: (Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si. Gyeonggi-Do 16677 Korea
LVD	: Korea Testing Laboratory (KTL) 87, Digital-ro 26-gil, Guro-gu, Seoul, 08389, KOREA, REPUBLIC OF Tel : +82 2 8601114 / Fax : +82 2 8601 285
E M C	: SEC EMC Laboratory (Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si. Gyeonggi-Do 16677 Korea CTK Co.,Ltd. (Ho-dong), 113, Yejik-ro, Cheoin-gu, Yongin-si, Gyeonggi-do, Korea

AEEE Yönetmeliğine
Uygun



06 SORUN GIDERME

Yardıma istmeden önce şunları kontrol edin.


Soundbar açılmıyor.

- Soundbar'ın elektrik kablosunun prize doğru takıldığını kontrol edin.


Subwoofer ve surround hoparlörler otomatik olarak bağlanmadığında

- Soundbar ana ünitesini kapatın.
- Subwoofer'in ve surround hoparlörlerin arkasındaki ID SET düğmesini en az 5 saniye basılı tutun.
 - Surround hoparlörler modele bağlı olarak ürüne birlikte verilmeyebilir.


Subwoofer

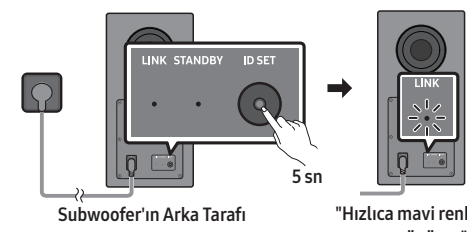

Surround Hoparlör (sadece HW-Q930C)

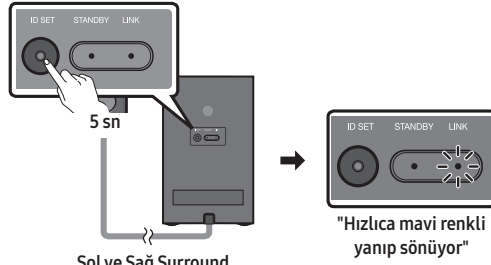

3. Uzaktan kumandanın Yukarı düğmesini 5 saniye boyunca basılı tutun.

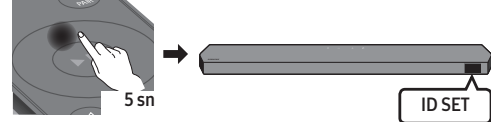

4. LINK LED'in sabit mavı yandığını (bağlantı tamamlandı) kontrol edin.

- Soundbar ile Subwoofer ve surround hoparlörler arasında bağlantı kurulduğunda, LINK LED göstergesinin yanıp sönməsi durur ve sabit mavi renkte yanar.

GÜVENLİKLE İLGİLİ BİLGİLER

GÜVENLİK UYARILARI

ELEKTRİK ÇARPMASI RİSKİNİ AZALTMAK İÇİN KAPAĞI (VEYA ARKASINI) ÇIKARMAYIN.
İÇ KISIMDA KULLANICININ SERVİS VERİLECEĞİ PARÇA YOKTUR. SERVİS İŞLEMLERİNDE KALİFİYE SERVİS PERSONELİNE BAŞVURUN.
Samsung ürününüzde bulunabilecek sembollerin açıklaması için aşağıdaki tabloya bakın.

	DİKKAT ELEKTRİK ÇARPMASI RİSKİ. AÇMAYIN.	
	Bu sembol, ürünün içinde yüksek voltaj olduğunu gösterir. Bu ürünün içindeki parçaları herhangi bir temasta bulunmak tehlikelidir.	
	Bu sembol, bu ürüne çalışma ve bakıma ilişkin önemli bilgi kaynakları verildiğini gösterir.	
	Sınıf II ürünü: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerektirdiğini gösterir. Güç kablolu bir üründe bu sembol bulunmuyorsa, ürünün koruyucu topraklamaya (toprak) güvenilir bir bağlantısı OLMALIDIR.	
	AC voltajı: Bu sembolle işaretlenen nominal voltaj AC voltajdır.	
	DC voltajı: Bu sembolle işaretlenen nominal voltaj DC voltajdır.	
	Dikkat: Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için kullanıcının kılavuzuna başvurmalarını bildirir.	

UYARI

- Yangın veya elektrik çarpması riskini azaltmak için bu cihaz yağmura veya neme maruz bırakmayın.

DİKKAT

- ELEKTRİK ÇARPMASINI ÖNLEMEK İÇİN FİŞİN GENİŞ UCUNU PRİZİN GENİŞ YUVASINA TAM OLARAK YERLEŞTİRİN.
- Bu cihaz her zaman koruyucu topraklama bağlantısı olan bir AC prize bağlı olmalıdır.
- Cihazın elektrik bağlantısını kesmek için fişin elektrik prizinden çekilerek çıkarılması gerekir. Dolayısıyla, fiş kolayca erişilebilir bir yerde olmalıdır.
- Bu cihazı suya batırmayın veya üzerine su sıçratmayın. İçinde sıvı bulunan vazo gibi nesneleri cihazın üzerine koymayın.
- Bu cihazı tamamen kapatmak için fişini elektrik prizinden çıkarmanız gerekir. Dolayısıyla, fiş her zaman kolay erişilebilir bir yerde olmalıdır.

ÖNLEMLER

- Evinizdeki AC güç kaynağının, ürününüzün alt kısmında bulunan kimlik etiketinde listelenen güç gereksinimlerine uyduğundan emin olun. Ürününüzü, uygun bir tabana (mobilya) havalandırma için çevresinde yeterli alan olacak şekilde (7-10 cm) yatay yönde kurun. Havalandırma yuvalarının kapanmadığından emin olun. Ünite ısınabileceğinden amfllerin veya diğer ekipmanların üzerine yerleştirmeyin. Bu ünite sürekli kullanım için tasarlanmıştır. Üniteyi tamamen kapatmak için, AC fişini prizden çıkarın. Üniteyi uzun süre kullanmayacaksanız fişini prizden çıkarın.
- Yıldırımli havalarda AC fişini prizden çıkarın. Yıldırımdan kaynaklı ani voltaj sıçramaları üniteye zarar verebilir.
- Üniteyi doğrudan güneş ışığına veya diğer ısı kaynaklarına maruz bırakmayın. Bu, aşırı ısınmaya ve ünitenin arızalanmasına neden olabilir.
- Ürünü nemden (ör. vazolar) ve aşırı ısıdan (ör. şömine) veya güçlü manyetik alanlar ya da elektrik alanları oluşturan ekipmanlardan koruyun. Ünite analizasya güç kablosunu AC prizinden çıkarın. Ürününüz endüstriyel kullanım için tasarlanmamıştır. Yalnızca kişisel kullanım için ürününüz soğukta depolanırsa yoğunlaşma oluşabilir. Üniteyi kişin taşıdıysanız, üniteyi kullanmadan önce oda sıcaklığına erişene kadar yaklaşık 2 saat bekleyin.
- Bu ürüne kullanılan pil, çevreye zararlı kimyasallar içerir. Pili genel ev çöplüyle birlikte atmayın. Pili aşırı ısıya, doğrudan güneş ışığına veya ateşe maruz bırakmayın. Pili kısa devre yapmayın, parçalamayın veya aşırı ısıya maruz bırakmayın. Dikkat: Pilin yanlış yerleştirilmesi halinde patlama tehlikesi vardır. Yalnızca aynı veya eşdeğer tipteki pil pile değiştirin.

01 BİLEŞENLERİ KONTROL ETME


Soundbar Ana Ünitesi / Soundbar Uzaktan Kumandası / Piller / Subwoofer / Surround Hoparlör x2 (Sol/Sağ, sadece HW-Q930C modeli) / HW-Q930C: Güç Kablosu X 4 (Subwoofer, Surround Hoparlör, Soundbar) / HW-Q800C: Güç Kablosu X 2 (Subwoofer, Soundbar) /HDMI Kablosu / Duvara Montaj Kılavuzu / Tutucu Vida X 2 / Vida (M4 x L10) X 2 / Braket-Duvara Montaj X 2 / Lastik Ayak X 4

NOT

- Güç beslemesi ve güç tüketimi hakkında daha fazla bilgi için, ürün üzerindeki etikete bakın. (Etiket: Soundbar Ana Ünitesinin Arkası)
- Ek bileşenler veya isteğe bağlı kablolar satın almak için bir Samsung Servis Merkezi'ne veya Samsung Müşteri Hizmetleri'ne başvurun.
- Kablo sayısı modele bağlı olarak değişiklik gösterebilir.


02 ÜRÜNE GENEL BAKIŞ

Soundbar'ın Üst Paneli

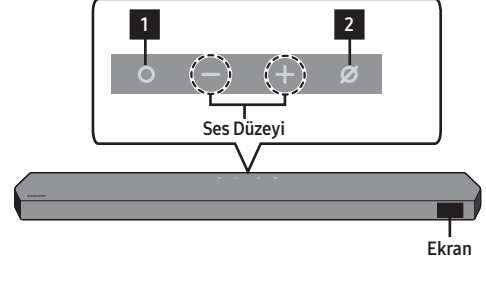

- Ö (Çoklu İşlev) Düğmesi**
Bekleme modunda, **Ö (Çoklu İşlev)** düğmesine basarak Soundbar'ı açın.
Ö (Çoklu İşlev) düğmesine basarak giriş kaynağını değiştirin.
- Ø (Mikrofon Açık/Kapalı) Düğmesi**
Mikrofonu açmak veya kapatmak için düğmeye basın. Mikrofon kapalıyken LED göstergesi kırmızı renkte yanar.


Soundbar'ın Alt Paneli

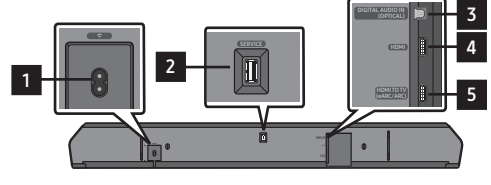

- POWER**
Soundbar'ın AC güç kablosunu fişe takın.
- SERVICE**
Ürünün yazılımını yükseltmek için bir USB depolama cihazı bağlayın.
- DIGITAL AUDIO IN (OPTICAL)**
Harici bir cihazın dijital (optik) çıkışına bağlayın.
- HDMI**
Bir HDMI kablosu kullanarak dijital video ve ses sinyallerinin aynı zamanlı girişini yapar. Harici bir cihazın HDMI çıkışına bağlayın.
- HDMI TO TV (eARC/ARC)**
Bir TV'nin HDMI'ye yakına bağlayın.

03 SOUNDBAR'ı BAĞLAMA

Güç kablosunu ve birimleri bağlama

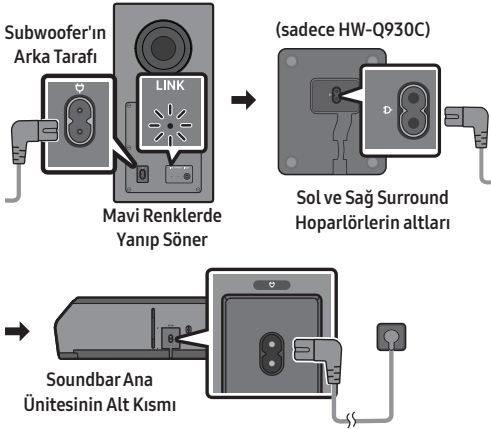

- Soundbar ile Subwoofer ve surround hoparlörler arasında bağlantı kurulduğunda, LINK LED göstergesinin yanıp sönməsi durur ve sabit mavi renkte yanar.

08 SERVİS İLE İLGİLİ ÖNEMLİ NOTLAR

- Bu Kullanıcı Kılavuzu'ndaki resimler ve şekiller yalnızca referans amaçlı olarak sağlanmıştır ve ürünün gerçek görünümünden farklı olabilir.
- Aşağıdaki durumlarda bir idari ücret alınabilir
(a) Talebiniz üzerine bir mühendis çağırılır ancak üründe herhangi bir kusur olmadığı görülürse (ör. kullanıcı kılavuzu okunmamışsa).
(b) Üniteyi onarım merkezine götürürseniz ve üründe bir kusur olmadığı görülürse (ör. kullanıcı kılavuzu okunmamışsa).
- Teknisyen ziyaret etmeden önce idari ücret tutarı hakkında bilgilendirilirsiniz.

09 TEKNİK ÖZELLİKLER VE KILAVUZ

Model Adı	HW-Q800C
Ağırlık	5,1 kg
Boyutlar (G x Y x D)	1110,7 x 60,4 x 120,0 mm
Çalışma Sıcaklığı Aralığı	+10 °C - +40 °C
Çalışma Nem Aralığı	10 % - 80 %, yoğunlaşmayan
Depolama Sıcaklığı	-20 °C - +45 °C
Depolama Nemi	5 % - 95 %, yoğunlaşmayan
AMPLİFİKATÖR	
Nominal Çıkış gücü (30 W x 3) + (20 W x 4) + (10 W x 3)	
Desteklenen oynatma formatları Dolby 5.1ch / Dolby Digital Plus / Dolby TRUE HD / Dolby ATMOS / DTS 5.1ch / DTS HD / DTS-HD Master Audio / DTS:X / LPCM 8ch	
Subwoofer Adı	PS-WC96B
Ağırlık	9,8 kg
Boyutlar (G x Y x D)	210,0 x 403,0 x 403,0 mm
AMPLİFİKATÖR	
Nominal Çıkış gücü 160 W	
Surround Hoparlör Adı (sadece HW-Q930C)	
Ağırlık	3,1 kg
Boyutlar (G x Y x D)	129,5 x 201,3 x 140,4 mm
AMPLİFİKATÖR	
Nominal Çıkış gücü 140 W	



- Telefon, tablet veya bilgisayarını Spotify için uzaktan kumanda olarak kullan. Nasıl yapacağını öğrenmek için [spotify.com/connect](https://www.spotify.com/connect) adresine
- Spotify Yazılımı şu adreste bulunan üçüncü taraf lisanslarına tabidir: <https://www.spotify.com/connect/third-party-licenses>

Açık kaynaklarla ilgili soru ve talepleri göndermek için Samsung Açık Kaynak (<http://opensource.samsung.com>) ile iletişime geçin



- Apple, Airplay, iPhone, iPad, and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

04 KABLOLU BAĞLANTI KULLANMA

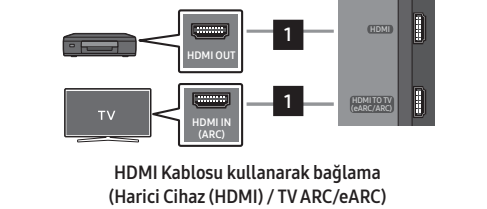

HDMI Kablosu kullanarak bağlama
(Harici Cihaz (HDMI) / TV ARC/eARC)

Optik Kablo (D.IN) kullanarak bağlama

- TV sesi çıkmazsa Soundbar'ın üst kısmındaki **Ö (Çoklu İşlev)** düğmesine basarak veya uzaktan kumandadaki **Ö (Kaynak)** düğmesine basarak "D.IN" modunu seçin. Ekranda sırayla "D.IN" ve "TV ARC/eARC" gösterilir ve TV sesi gelir.
- HDMI.org tarafından onaylı bir Premium High Speed HDMI Cable with Ethernet kullanmanız önerilir.
- Optik kablo kullandığınızda ve uçlarda kapaklar olduğunda, kapakları çıkardığınızdan emin olun.

Q-Symphony İşlevini Kullanma

Soundbar, Q-Symphony işlevini destekleyen bir Samsung TV'ye bağlandığında, sesi Soundbar ve TV üzerinden aynı anda alabilirsiniz. Q-Symphony işlevini kullanırsanız TV'de alınan surround ses daha zengin, daha güçlü bir surround ses efektinin keyfini çıkarmanızı sağlar.

Soundbar bağlandığında televizyonda "TV+Soundbar" menüsü görünür.

(Ayarlar) (⊞) → Tüm Ayarlar (⊞) → Ses → Ses Çıkışı

SpaceFit Sound'u Kullanma

Bu işlev, Soundbar'ın mikrofonu ile kullanıcının dinleme alanını analiz eder ve bu alan için en iyi sesi sağlar. Ses optimizasyonu otomatik olarak devam eder.

NOT

- Samsung Electronics Co., Ltd. teknik özellikleri haber vermeksizin değiştirme hakkını saklı tutar.
- Ağırlık ve boyutlar yaklaşık değerlerdir.
- Surround hoparlörler sadece belirli modellerle birlikte gelir.

Önem: Wi-Fi'yi açarsanız/kapatırsanız Soundbar otomatik olarak yeniden bağlatılır.

Genel Bekleme Güç Tüketimi (W)
75 W

Wi-Fi Bağlantı Noktası devre dışı bırakma yöntemi
Wi-Fi'yi Açık / Kapalı durumuna getirmek için Soundbar uzaktan kumandasındaki CH LEVEL düğmesine 30 saniye basın.

Bluetooth Bağlantı Noktası devre dışı bırakma yöntemi
Bluetooth'u Açık / Kapalı durumuna getirmek için Soundbar uzaktan kumandasındaki TONE CONTROL düğmesine 30 saniye basın.


- İşbu belge ile, Samsung bu radyo ekipmanının 2014/53/EU Direktifi ve ilgili Birleşik Krallık yasal gerekliliklerine uygun olduğunu beyan eder.

Uygunluk beyanının tam metni
<http://www.samsung.com> adresinde bulunabilir; Destek bölümüne gidin ve model adını girin.
Bu ekipman, TÜRKİYE'de çalıştırılabilir.
Bu ekipmanın 5 GHz WLAN (Wi-Fi veya SRD) işlevi yalnızca iç mekanda çalıştırılabilir.

- KABLOSUZ CİHAZ ÇIKIŞI GÜCÜ**
RF maks. verici gücü
2,4 GHz – 2,4835 GHz'de 100 mW
5,15 GHz – 5,25 GHz ve 5,47 GHz – 5,725 GHz'de 200 mW
5,25 GHz – 5,35 GHz'de 100 mW
5,725 GHz – 5,875 GHz'de 25 mW

05 KABLOSUZ BAĞLANTI KULLANMA

Bluetooth üzerinden bağlantı

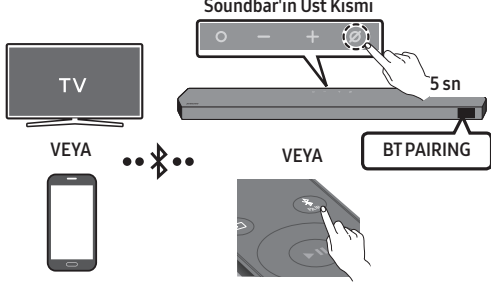

BT READY ve BT PAIRING arasındaki fark nedir?

- BT READY:** Bu modda, daha önce bağlanmış olan herhangi bir Samsung TV'yi veya mobil cihaz yeniden bağlayabilirsiniz.
- BT PAIRING:** Bu modda, Soundbar'a yeni bir cihaz bağlayabilirsiniz. (Soundbar "BT" modundayken Soundbar uzaktan kumandasındaki **Ø PAIR** düğmesine basın veya Soundbar'ın üst kısmındaki **Ø (Mikrofon Açık/Kapalı)** düğmesini 5 saniyeden uzun bir süre basılı tutun.)

NOT

- Bir Bluetooth cihazla bağlantı sağlarken PIN kodu istenirse <0000> değerini girin.

Wi-Fi üzerinden bağlantı (Kablosuz Ağ)

- Soundbar'ı bir mobil cihazla kablosuz ağ (Wi-Fi) üzerinden bağlamak için SmartThings uygulaması gerekir.
- Mobil cihazınızda (akıllı telefon, tablet vb.) TV'nin bağlı olduğu Wi-Fi ağına bağlayın.
- Mobil cihazınızda (akıllı telefon, tablet vb.) SmartThings uygulamasını yükleyin ve bağlatın.
- Soundbar'ı Wi-Fi ağına bağlamak için, mobil cihazda uygulama ekranında yer alan talimatlara uyun.

[Bu üründeki pillerin doğru atılması]



(Ayrı toplama sistemlerine sahip ülkeler için)

Ürünün, ambalajdaki veya ambalajdaki bu işaret bu üründeki pillerin kullanım ömürlerinin sonunda diğer ev atıkları ile birlikte atılmaması gerektiğini belirtir. Hg, Cd veya Pb kimyasal sembollerinin pilin EC Yönetmeliği 2006/66'da belirtilen referans değerlerin üstünde cıva, kadmiyum veya kurşun içerdiğini gösterir. Piller düzgün atılmazsa, bu maddeler insan sağlığına veya ortama zarar verebilir. Doğal kaynakları korumak ve malzemelerin yeniden kullanılmasını özendirerek için pilleri diğer atıklarından ayırıp bölgenizdeki ücretsiz pil iade sistemiyle geri dönüştürülmesini sağlayın.

Bu Ürünün Doğru Şekilde Atılması
(Atık Elektrikli ve Elektronik Cihazlar)



(Ayrı toplama sistemlerine sahip ülkeler için)

Ürünün, aksesuarların veya ilgili belgelerin üzerinde bulunan bu işaret, ürünün ve elektronik aksesuarlarının (örn. şarj cihazı, kulaklık, USB kablolu) kullanım ömrü sonunda diğer ev atıklarıyla birlikte atılmaması gerektiğini belirtir. Atıkların kontrolsüz olarak imha edilmesinin çevre ve insan sağlığı üzerindeki zararlı etkisini engellemek için lütfen bunu diğer atık türlerinden ayırın ve malzeme kaynaklarının sürdürülebilir şekilde yeniden kullanılabilmesi için geri dönüştürülmesini sağlayın.
Ev kullanıcıları, bu ürünü çevresel açıdan güvenli bir geri dönüşümüne işlevi için nereye ve nasıl ulaştırılacakları hakkında ayrıntılı bilgi için ürünü satın aldıkları bayi ile veya yerel resmi makama irtibat kurmalıdır.
İş kullanıcıları tedarikçileri ile irtibat kurup satın alma sözleşmesinin hüküm ve koşullarına bakmalıdır. Bu ürün ve ürünün elektronik aksesuarları, imha için diğer ticari atıklarla karıştırılmamalıdır.

Samsung'un çevreye ilgili taahhütleri ve REACH, WEE, Piller gibi ürüne özgü düzenleme yükümlülükleri hakkında bilgi için şu adresi ziyaret edin:
www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/