

Portable Monitor 便携式显示屏

Quick Start Guide | 快速入门指南



ポータブルディスプレイ
クイックスタートガイド



www.cnbanan.com

LANGUAGE CATALOG

1.English	-----	1-13
2.日本語	-----	14-26
3.中文	-----	27-38



Contact us QR code



1.Full Package List




What's in the box

1 x Portable Monitor
1 x Mini HDMI to HDMI Cable
1 x Adapter
1 x Screen Cleaning Cloth

1 x USB-C to USB-C Cable
1 x USB-C to USB-A Cable
1 x Smart Cover(Some models)
1 x User Guide

2.Key Instruction

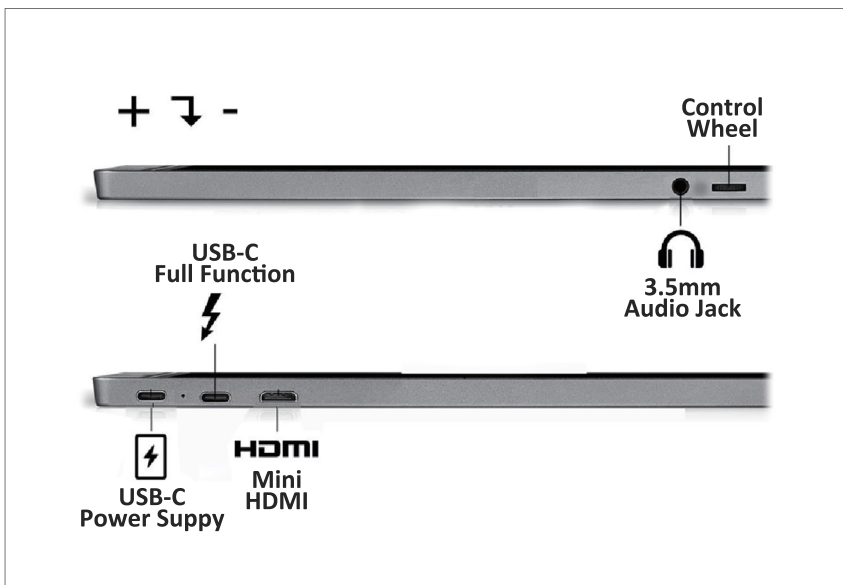

Universal Compatibility

Use with all cables, all devices and all system



Desktop PC



Nintendo\PS4
Xbox\Wii



Smartphone



Laptop

3.PRODUCT INTRODUCTION

1.Display.

2.Micro USB port: compatible with other USB peripherals.

3.Scroll button: press the scroll button to enter menu settings.

·Scroll to the top / bottom to enter menu selection, and the selected menu icon appears at the highlight. Press the scroll button to finalize the highlight icon.

·Turn on the volume icon to activate, adjust the volume by turning on / down. ·Turn brightness down to activate brightness icon, turn it up / down to adjust brightness.

Note: you can't adjust the brightness and volume at the same time, and set it one time.

4.Signal lamp.

5.Return button: if you press the menu screen, it will return. Press 3 seconds to turn the display on / off.

6.3.5mm earphone jack.

7.VESA hole: 75 * 75 * M4.(Partial model)

8.Mini HDMI port.

9.Full featured WS-C port: power supply and audio / video data signal transmission.

10.USB port: for charging only.

11.Speaker: built-in speaker.

12.Display stand.




4.CONNECTION METHOD



USB-C to USB-C Cable

LAPTOP with USB-C Full Function Port



USB-C to USB-A Cable

PHONE with USB-C Full Function Port



Mini-HDMI to HDMI Cable
USB-C to USB-A Cable

COMPUTER with HDMI PORT



Mini-HDMI to HDMI Cable

PS4/5 with HDMI PORT

CONNECTION TO VARIOUS DEVICES

First, connect your to a power source. Next, connect it to your desired device.

1. LAPTOP(with USB-C)

Compatible with the latest laptops with a full-featured USB-C port.

Note:

❶ If the monitor does not work properly when you connect it to your laptop using the USB-C to C cable, pls use the USB-C to A cable and wall charger at the same time.

❷ USB-C port functions can vary on laptops. This method may not work on all laptops with a USB-C port Please make sure the monitor is connected to the USB-C port on your laptop that meets or exceeds the USB 3.0 (USB 3.1 Gen 1)

2. PC/ LAPTOP (with HDMI Port) Compatible with most PCs/ laptops with an HDMI port.

3. LAPTOP(with Mini Display Port) Compatible with laptop models with a Mini Display Port adapter (not included).

4. iOS/ Android DEVICES (with Full-featured USB-C Port) Works with compatible Android devices from Samsung, Huawei, OnePlus, Smartisan, OPPO, etc.

Note:

USB-Cport functions can vary on mobile devices. This method may not work on all smartphones and tablets with a USB-Cport. Please make sure your mobile device's USB-C port meets or exceeds the USB 3.0 (USB 3.1 Gen 1) specification Connecting your iOS device with the monitor requires a Lightning to HDMI adapte (not included).Lightning to HDMI Adapter (not ndluded)

5.Other Devices Compatible with PS5, PS4, Xbox One, Xbox, Switch, and other devices with a standard HDMI output.



5.HOW TO SET UP

1. Press the Roll Key to enter the Settings menu.
2. Scroll the Roll Key up/ down to select a settings option, press the Roll Key aga to confirm.
3. Press the Return key to exit

SUPPORTED DEVICES MODELS (WITH USB-C)

Brand	Model
Apple	MacBook 12,MacBook Pro 2017/2018/2019/2020, MacBook Air 2018/2019,iPad Pro 2018/2019/2020
Google	Chromrbook Pixels,Pixelbook,Pen
Microsoft	Surface Book 2
Lenovo	Yoga 5 Pro,Miix 720,ThinkPad X1,Carbon 2017
Huawei	MateBook X,MateBook X Pro,MateBook E,MateBook
Honor	MateBook

Brand	Model
ASUS	Zenbook 3/3 Pro,U4100UN,ROG Series,U306, U321 Series
Dell	XPS13,XPS15
HP	EliteBook Folio G1,Pavilion X2
Razer	Blade Stealth
XIAOMI	Mi Laptop Air 12.5/13.3,Mi Notebook pro, Mi Gaming Laptop

Laptop/Tablet

Note:Please make sure the monitor is connected to the USB -C port on your laptop/tablet that meets or exceeds the USB 3.0 (USB 3.1 Gen 1) specification

Phone

Brand	Model
Huawei	P30,P30 PRO, P20, P20 Pro, Mate 10, Mate 10 Pro Mate 20, Mate 20X, Mate 20 Pro, Honor Note 10
OPPO	R17 Pro
Smartisan	R1,Pro2s
Samsung	S8+,S9,S9+,Note8,Note9

Please make sure your mobile device's USB-C port meets or exceeds the USB 3.0 (USB 3.1 Gen 1) specification.Mobile phone models will be

If you are not sure if your device will work well with the monitor, feel free to contact us via Amazon Messenger.



6.FREQUENTLY ASKED QUESTIONS

Q1: Does it support laptop pass-through charging? The display is connected to the laptop with type-c, and the power port is connected to a PD compatible charging adapter. Can the laptop be charged?

A1: It supports pass-through charging.

If you connect the computer with a USB-C-USB-C cable, and use the PD power adapter to supply power to the display, you can charge the connected computer at the same time. Note that the charging effect will vary depending on the power output of the PD power adapter.

Q2: Why can't I adjust the brightness sometimes?

A2: Maybe HDR mode is turned on. HDR mode is an automatic brightness mode, so turn it off when you want to adjust the brightness.

Q3: Is the included cover removable?

A3: The attached cover can be removed.

Q4: I'm a Super Smash Bros guy. I want to buy this because the TV has a slight lag. Will this monitor improve the latency of the gaming experience?

A4: For Switch, a refresh rate of 60fps and a response speed of less than 5ms are enough. These few monitors are all 60Hz, 5ms, so I think you can buy without hesitation.



Q5:Can it be used vertically?

A5:On the connected computer, in Display Settings, select the additional display you want to set to portrait orientation, and then in Screen Orientation, select a portrait display. This way, the screen of the attached monitor is displayed vertically.

Q6:Why does the screen flicker during use?

A6:Screen flickering means this portable monitor cannot receive enough power from your device, you need to plug the provided power supply in the

Q7:Does this portable monitor built-in battery?

A7:No, this portable monitor without battery.

Q8:Do I have to plug the provided power supply in wall outlet to power it during use?

A8:

(1.If you connect this portable monitor with provided USB C cable, you don't need to plug the provided power supply in the wall outlet to power it. But if this portable monitor flickers suddenly, you need to plug the provided power supply in the wall outlet to power it at this time.

(2.If you connect this portable monitor with provided mini HDMI cable, you need to plug provided power supply in the wall outlet to power it at the same time.



Q9:Is this portable monitor compatible with my device?

A9:If your device has a Full-featured can transmit signal, audio and video) USB C port or HDMI port. it does. If your device has VGA port/ mini display port/ display port, then you could try to use a VGA to HDMI adapter/ mini display port to HDMI adapter/ display port to HDMI adapter to connect this portable monitor.

Q10:How to set up the split screen?

A10:(Windows System)

- 1.Find your computer's Control Panel/S- ettings and click inside.
- 2.Find the Display/ System option and click to enter.
- 3.Find" Adjust Resolution" on the left and click to enter, and then you can set the split screen in the " Monitor" option bar, or pull down the right side and find the " Multi-monitor Settings" option bar to select the split screen



7.PRODUCT SPECIFICATION

Model	M133A25	P161A10D	P160A17	P161A10G	P17A18BWG	P16TA10
Aspect	16:9	16:9	3:2	16:9	16:9	16:9
Resolution	3840*2160	1920*1080	2520*1680	1920*1080	1920*1080	1920x1080
SRGB	100%	100%	100%	100%	72%	100%
Contrast Radio	1800:1	1200:1	1500:1	1200:1	800:1	1000:1
Refresh Rate	60Hz	60Hz	60Hz	144Hz	144Hz	60Hz
Speaker	Built-in Speaker*2	Built-in Speaker*2	Built-in Speaker*2	Built-in Speaker*2	Built-in Speaker*2	Built-in Speaker*2
Inch	13.3"	16.1"	16"	16.1"	17.3"	16.1"
Touchscreen	No Support	No Support	No Support	No Support	No Support	Yes

8.SAFETY INSTRUCTIONS

1.For an IPS panel monitor, the user should consider the placement position of the monitor, otherwise, the panel may reflect the surriounding light and cause interference.

2.Please use the original power adapter to avoid electrical damage.down immediately and contact us.

3.If liquid is dumped on the monitor during use please disconnect the power adapter immediately, If you have any problems, please shut it

Warning 

If the monitor is not used,adjusted or controlled according to the instructions it may cause electric shock.Short circuit or mechanical hazard.



9.WARRANTY INFORMATION

Item	Warranty term
Monitor	1 Years
Panel	1 Years



1.Service Email:

US: service-us@cnbanan.com

JP: service-japan@cnbanan.com

Service Website: <http://www.cnbanan.com>

2.Contact us QR code




3.This Warranty is not applicable:

- 1.The product is not purchased from an Authorized dealer.
- 2.The product is not used according to instructions given in the instruction manual.
- 3.Defects caused by improper use as determined by company personnel.
- 4.Modification or alteration of any nature is made in the electrical circuitry/or physical construction of the set.
- 5.Installation/repair work is carried out by persons/agency other than authorized by the company.
- 6.The original serial number is removed,obliterated or altered from the machine or cabinet.
- 7.Accidents.Acts of natural,lightning,water,fire,public disturbances,improper ventilation,voltage fluctuations or any cause beyond the control of brand.



1.完全包装リスト

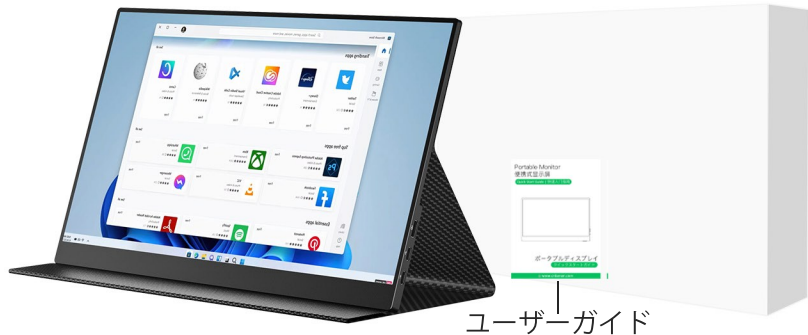

USB-C
USB-C
ケーブル



Mini HDMI
-HDMI
ケーブル




USB-A-
USB-C
ケーブル

パッケージ内容

- 1 x ポータブルモニター
- 1 x Mini HDMI - HDMIケーブル
- 1 x アダプター
- 1 x スクリーンクリーニングクロス

- 1 x USB-C - USB-C ケーブル
- 1 x USB-C - USB-A ケーブル
- 1 x 磁気ケース(一部モデル)
- 1 x ユーザーガイド

2.キー命令

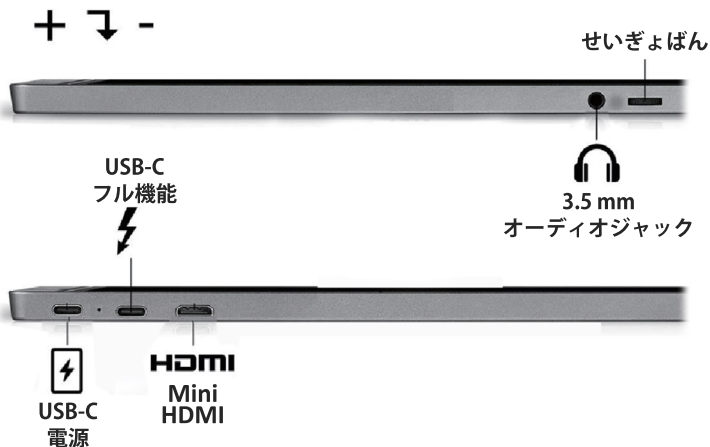

普遍的な互換性

すべてのケーブル、すべてのデバイス、すべてのシステムで使用



デスクトップPC



Nintendo\PS4
Xbox\Wii



スマー
トフォン



ノートブ
ックPC

3.製品導入

1.ディスプレイ

2. Micro USB ポート: 他の USB 周辺機器と互換性があります。

3. スクロール ボタン: スクロール ボタンを押して、メニュー設定に入ります。

・上/下にスクロールしてメニュー選択に入り、選択したメニュー アイコンがハイライト表示されます。スクロール ボタンを押して、ハイライト アイコンを確定します。

・音量アイコンをONにして起動、ON/OFFで音量調整。

・明るさを下げると明るさアイコンが有効になり、上下に回して明るさを調整します。

注: 明るさと音量を同時に調整することはできません。一度に設定してください。

4. シグナルランプ。

5. 戻るボタン: メニュー画面を押すと戻ります。3秒間押して、ディスプレイのオン/オフを切り替えます。

6. 3.5mmイヤホンジャック。

7. VESA 穴: 75 * 75 * M4.(モデルの一部です)

8. ミニHDMIポート。

9. フル機能の WS-C ポート: 電源とオーディオ/ビデオ データ信号の伝送

10. USB USB ポート: 充電専用。

11. スピーカー: 内蔵スピーカー。

12. ディスプレイスタンド。

4.接続方法




USB-C対 USB-C ケーブル

LAPTOP USB-Cフル機能ポート付き



USB-C対 USB-A ケーブル

PHONE USB-Cフル機能ポート付き



ミニhdmí-hdmiケ-ブル
usb-c対 usb-A ケ-ブル

COMPUTER HDMIポ-ト



ミニhdmí-hdmiケ-ブル

PS4/5 HDMIポ-ト

各種デバイスへの接続

まず、電源に接続します。次に、必要なデバイスに接続します。

1.ノートパソコン（USB-c付き）

フル機能のUSB-Cポートを備えた最新のtaptopsと互換性があります。

注：

①USB-CからCケーブルを使用してノートパソコンにモニタを接続した場合、モニタが正常に動作しない場合は、USB-CからAケーブルと壁充電器を併用してください。

②ノートパソコンのUSB-Cポートの機能が異なる場合があります。この方法は、USB-Cポートを持つすべてのノートパソコンには適していない可能性があります。ディスプレイがUSB 3.0（USB 3.1 Gen 1）を超えるUSB-Cポートに接続されていることを確認してください。

2.PC/LAPPO（HDMIポート付き）

HDMIポート付きPC/ノートパソコンのほとんどと互換性があります。

3.ノートパソコン（ミニディスプレイポート付き）す。

ミニディスプレイポートアダプタ（含まない）を搭載したノートブックPCモデルと互換性がありま

4.iOS/Androidデバイス（フル機能USB-Cポート）

サムスン、ファーウェイ、OnePlus、Smartisan、OPPOなどの互換性のあるAndroidデバイスに適しています。

注：USBポート機能はモバイルデバイスによって異なる場合があります。この方法は、USBポートを持つすべてのスマートフォンやタブレットPCには適さない可能性があります。モバイルデバイスのUSB-CポートがUSB 3.0（USB 3.1 Gen 1）仕様を満たしているか、超えていることを確認してください。iOSデバイスとディスプレイを接続するには、HDMIアダプタにLightningが必要です（含まない）。LightningをHDMIアダプタに（バインドされていない）

5.その他の機器

PS5、PS4、Xbox One、Xbox、Switch、その他の標準HDMI出力を持つデバイスに対応しています。

5.設定方法

- 1.スクロールキーを押して設定メニューに入ります。
- 2.スクロールキーを上下にスクロールして設定オプションを選択し、スクロールキーを押して確認します。
- 3.戻るキーを押して終了します。

サポートされているデバイスモデル (USB-C付き)

Brand	Model
Apple	MacBook 12,MacBook Pro 2017/2018/2019/2020, MacBook Air 2018/2019,iPad Pro 2018/2019/2020
Google	Chromrbook Pixels,Pixelbook,Pen
Microsoft	Surface Book 2
Lenovo	Yoga 5 Pro,Miix 720,ThinkPad X1,Carbon 2017
Huawei	MateBook X,MateBook X Pro,MateBook E,MateBook
Honor	MateBook

Brand	Model
ASUS	Zenbook 3/3 Pro,U4100UN,ROG Series,U306, U321 Series
Dell	XPS13,XPS15
HP	EliteBook Folio G1,Pavilion X2
Razer	Blade Stealth
XIAOMI	Mi Laptop Air 12.5/13.3,Mi Notebook pro, Mi Gaming Laptop

ノートパソコン/タブレット

注意：モニタがUSB 3.0（USB 3.1 Gen 1）仕様に準拠しているか、またはそれを超えるノートブック/タブレット上のUSB-Cポートに接続されていることを確認してください。

スマートフォン

Brand	Model
Huawei	P30,P30 PRO, P20, P20 Pro, Mate 10, Mate 10 Pro Mate 20, Mate 20X, Mate 20 Pro, Honor Note 10
OPPO	R17 Pro
Smartisan	R1,Pro2s
Samsung	S8+,S9,S9+,Note8,Note9

モバイルデバイスのUSB-CポートがUSB 3.0（USB 3.1 Gen 1）仕様に適合しているか、それを超えていることを確認してください。携帯電話のモデルは順次更新されます。

デバイスがモニタと連携して使用できるかどうかわからない場合は、いつでもAmazon Messengerを通じてお問い合わせください。

6.よくある質問

Q1:ラップトップのパススルー充電に対応していますか? ディスプレイはType-Cでラップトップに接続され、電源ポートはPD対応の充電アダプターに接続されています。ラップトップは充電できますか?

A1:パススルー充電に対応しています。

パソコンをUSB-C-USB-Cケーブルで接続し、PD電源アダプターを使用してディスプレイに電源を供給すれば、接続したパソコンを同時に充電できます。

PD電源アダプターの出力によって充電効果が異なりますのでご注意ください。

Q2:時々明るさを調整できないのはなぜですか?

A2:HDRモードがONになっている可能性があります HDRモードは自動輝度モードなので、明るさを調整したい場合はOFFにしてください。

Q3:付属のカバーは取り外し可能ですか?

A3:付属のカバーは取り外し可能です。

Q4:大乱闘スマッシュブラザーズですが、テレビのラグが少ないので購入したいのですが、このモニターはゲーム体験の遅延を改善しますか?

A4:Switchの場合、リフレッシュレート60fps、応答速度5ms以下で十分ですが、数少ないモニターはすべて60Hz、5msですので、迷わず購入できると思います。

Q5:縦置きで使用できますか？

A5:接続したパソコンの「ディスプレイ設定」で縦向きにしたい追加ディスプレイを選択し、「画面の向き」で縦向きディスプレイを選択すると、接続したモニターの画面が縦向きに表示されます。

Q6:使用中に画面が点滅するのはなぜですか。

A6:画面が点滅することは、このポータブルディスプレイがデバイスから十分な電源を受け取ることができないことを意味します。この場合、提供された電源を壁の電源コンセントに差し込んで、ディスプレイに電力を供給する必要があります。

Q7:このポータブルディスプレイはバッテリーを内蔵していますか？

A7:いいえ、このポータブルディスプレイには電池がありません。

Q8:使用中に、供給された電源プラグをコンセントに差し込んで電源を供給する必要がありますか。

A8:

① 提供されたUSB Cケーブルでこのポータブルディスプレイに接続すれば、提供された電源を壁のコンセントに差し込んで電力を供給する必要はありません。しかし、このポータブルディスプレイが突然点滅した場合、供給された電源を壁に差し込む必要があります電源コンセントから電力が供給されます。

②.このポータブルディスプレイを提供されているミニHDMIケーブルに接続する場合は、提供されている電源プラグをコンセントに差し込み、同時に電源を供給する必要があります。

Q9:このポータブルディスプレイは私のデバイスと互換性がありますか？

A9:デバイスが完全機能（信号、オーディオ、ビデオを転送可能）のUSB CポートまたはHDMIポートを持っている場合。デバイスにVGAポート/ミニ表示ポート/表示ポートがある場合は、では、VGAからHDMIアダプタ/ミニディスプレイポートをHDMIに使用してみてください。アダプタ/ディスプレイポートをHDMIアダプタに接続して、このポータブルディスプレイに接続します。

Q10: 分割画面の設定方法

A10: (Windowsシステム)

- 1.コンピュータのコントロールパネル/s-設定を見つけて、「内部」をクリックします。
- 2.表示/システム?オプションを見つけて、「進む」をクリックします。
- 3.左側に「解像度の調整」を見つけて「進む」をクリックし、「モニター」オプションバーで分割画面を設定するか、右側をドロップダウンして「マルチモニター設定」オプションバーを見つけて分割画面を選択します

7.製品仕様

モデル	M133A25	P161A10D	P160A17	P161A10G	P17A18BWG	P16TA10
アスペクト比です	16:9	16:9	3:2	16:9	16:9	16:9
解像度	3840*2160	1920*1080	2520*1680	1920*1080	1920*1080	1920x1080
SRGB	100%	100%	100%	100%	72%	100%
コントラスト比です	1800:1	1200:1	1500:1	1200:1	800:1	1000:1
リフレッシュレート	60Hz	60Hz	60Hz	144Hz	144Hz	60Hz
オーディオ	内蔵スピーカー*2	内蔵スピーカー*2	内蔵スピーカー*2	内蔵スピーカー*2	内蔵スピーカー*2	内蔵スピーカー*2
サイズ	13.3"	16.1"	16"	16.1"	17.3"	16.1"
タッチスクリーン	いいえ	いいえ	いいえ	いいえ	いいえ	はい

8.安全指示

1. IPS パネル モニターの場合、ユーザーはモニターの配置位置を考慮する必要があります。そうしないと、パネルが周囲の光を反射して干渉を引き起こす可能性があります。

- 2.電氣的損傷を避けるため、元の電源アダプターを使用してください。
- 3.使用中に液体がモニターに落ちた場合は、すぐに電源アダプターを外してください。問題がある場合は、すぐに電源を切って、当社までご連絡ください。

警告

モニターを指示に従って使用、調整、または制御しないと、感電の原因となる場合があります。短絡または機械的危険。



9.保証情報

アイテム	保証期間
モニター	1年
パネル	1年



1. サービスメール:

米国: service-us@cnbanan.com

JP: service-japan@cnbanan.com

サービスサイト: <http://www.cnbanan.com>



2. お問い合わせ QRコード



3. この保証は適用されません:

1. 正規販売店以外で購入した商品です。
2. 取扱説明書の指示通りに使用しない。
3. 当社の担当者が判断した不適切な使用に起因する欠陥。
4. セットの電気回路/物理的構成において、何らかの変更または変更が行われた場合。
5. 当社が認めた者以外による設置・修理の場合。
6. 元のシリアル番号がマシンまたはキャビネットから削除、消去、または変更さ
7. 事故自然、落雷、水、火災、公共の混乱、不適切な換気、電圧変動、またはブランドの制御を超える原因による行為。

1.产品清单

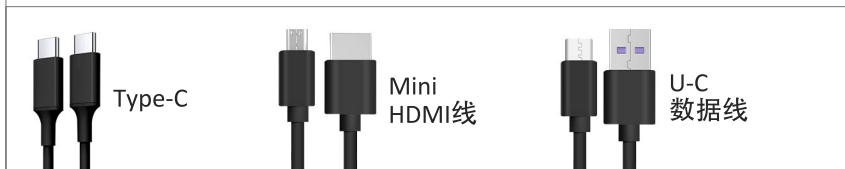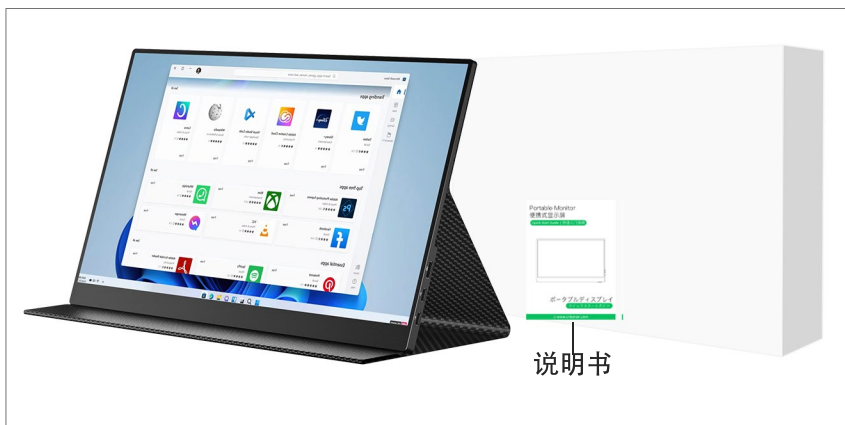


盒子里有什么？

1 x便携式显示器
1 x迷你HDMI-HDMI电缆
1 x适配器
1 x屏幕清洁布

1 x USB-C-USB-C电缆
1 x USB-C-USB-A电缆
1 x智能保护壳（部分型号）
1 x用户指南

2. 关键指令

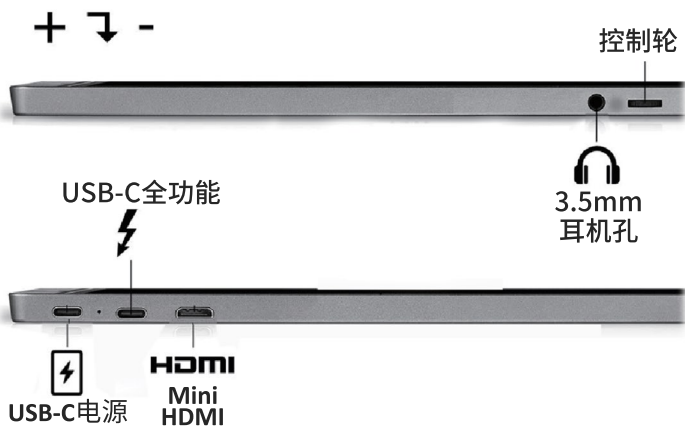

兼容性广泛

与所有电缆、所有设备和所有系统一起使用



台式电脑



任天堂\PS4
Xbox\Wii



智能手机



笔记本电脑

3.产品介绍

1.显示。

2.Micro USB端口：与其他USB外设兼容。

3.滚动按钮：按下滚动按钮进入菜单

设置。

·滚动到顶部/底部以进入菜单选择所选菜单图标出现在突出显示处。

按下滚动条按钮完成高亮图标。

·打开音量图标以激活，通过打开/关闭·调低亮度以激活亮度图标，将其调高/调低以调整亮度。

注意：您无法在同时设置一次。

4.信号灯。

5.返回按钮：如果您按下菜单屏幕，它将返回。按3秒以打开/关闭显示器。

6.3.5mm耳机插孔。

7.VESA孔：75*75*M4。（部分型号）

8.迷你HDMI端口。

9.全功能WS-C端口：电源和音频/视频数据信号传输。

10.USB USB端口：仅用于充电。

11.扬声器：内置扬声器。


12.展示架。

4.连接方法



USB-C 转 USB-C 数据线

笔记本 带USB-C全功能端口



USB-C 转 USB-A 数据线

手机 带USB-C全功能端口



Mini-HDMI 转 HDMI 数据线
USB-C 转 USB-A 数据线

台式机 带HDMI端口



Mini-HDMI 转 HDMI 数据线

PS4/5 带HDMI端口

连接到各种设备

首先，将您的连接到电源。然后，将其连接到您需要的设备。

1.笔记本电脑（带USB-C）

与具有全功能USB的最新taptops兼容-C端口。

注：

①如果连接显示器时无法正常工作使用USBC到C数据线连接到您的笔记本电脑，请使用USB-同时连接C到A电缆和壁式充电器。

②USB-C端口功能在笔记本电脑上可能有所不同。此方法可能无法在所有带有USB-C端口的笔记本电脑上运行请确保显示器已连接到符合或超过USB 3.0（USB 3.1 Gen 1）的笔记本电脑

2.PC/LAPTOP（带HDMI端口）与大多数PC兼容/带HDMI端口的笔记本电脑。

3.笔记本电脑（带迷你显示端口）与笔记本电脑兼容带有迷你显示端口适配器（不包括在内）的型号。

4.iOS/Android设备（具有全功能USB-C端口）与三星的兼容Android设备兼容，华为、OnePlus、Smartisan、OPPO等。

注：

USB端口功能可能因移动设备而异。这该方法可能不适用于所有智能手机和平板电脑USB端口。请确保移动设备的USB-C端口符合或超过USB 3.0（USB 3.1 Gen 1）规范将iOS设备与显示器连接需要Lightning到HDMI适配器（不包括）。Lightning到HDMI适配器（未绑定）

5.其他与PS5、PS4、Xbox One、Xbox兼容的设备，开关和其他具有标准HDMI输出的设备。

5.如何设置

- 1.按滚动键进入设置菜单。
- 2.向上/向下滚动滚动键以选择设置选项，再次按下滚动键确认。
- 3.按返回键退出

支持的设备型号（带USB-C）

品牌	型号
Apple	MacBook 12,MacBook Pro 2017/2018/2019/2020, MacBook Air 2018/2019,iPad Pro 2018/2019/2020
Google	Chromrbook Pixels,Pixelbook,Pen
Microsoft	Surface Book 2
Lenovo	Yoga 5 Pro,Miix 720,ThinkPad X1,Carbon 2017
Huawei	MateBook X,MateBook X Pro,MateBook E,MateBook
Honor	MateBook

品牌	型号
ASUS	Zenbook 3/3 Pro,U4100UN,ROG Series,U306, U321 Series
Dell	XPS13,XPS15
HP	EliteBook Folio G1,Pavilion X2
Razer	Blade Stealth
XIAOMI	Mi Laptop Air 12.5/13.3,Mi Notebook pro, Mi Gaming Laptop

笔记本电脑/平板电脑

注意：请确保显示器已规范连接到USB-笔记本电脑/平板电脑上符合或超过USB的C端口3.0（USB 3.1 Gen 1）

手机

品牌	型号
Huawei	P30,P30 PRO, P20, P20 Pro, Mate 10, Mate 10 Pro Mate 20, Mate 20X, Mate 20 Pro, Honor Note 10
OPPO	R17 Pro
Smartisan	R1,Pro2s
Samsung	S8+,S9,S9+,Note8,Note9

请确保您的移动设备的USB-C端口符合或超过USB 3.0（USB 3.1 Gen 1）规范。

如果您不确定您的设备是否能连接，
请随时通过购买路径与我们联系。

6. 常见问题解答

Q1:它是否支持笔记本电脑直通充电？这个显示器与c型笔记本电脑相连，电源端口连接到PD兼容充电适配器。可以通过笔记本电脑充电吗？

A1:它支持直通充电。如果您使用USB-C-USB-C电缆连接计算机，并且使用PD电源适配器向显示器供电，你可以同时给连接的电脑充电。请注意，充电效果会因PD电源适配器的电源输出。

Q2:为什么我有时不能调整亮度？

A2:可能HDR模式已打开。HDR模式是自动亮度模式，因此在需要时将其关闭调整亮度。

Q3:随附的盖子是否可拆卸？

A3:可以拆下连接的盖子。

Q4:我是一个Switch游戏迷，因为连接电视玩游戏响应速度有延迟，这个显示器是否可以降低响应速度提高游戏体验？

A4:对于Switch，刷新率为60fps，响应速度为小于5ms就足够了。这些显示器都是60Hz，5ms，所以我认为你可以毫不犹豫地购买。

Q5:它可以垂直使用吗？

A5:在连接的计算机上，桌面右键“显示设置”中，选定附加的显示器屏幕，在“显示方向”选择“纵向”，即可让显示器纵向显示。

Q6: 为什么屏幕在使用过程中会闪烁？

A6: 屏幕闪烁意味着显示器无法从电源适配器接收足够和稳定的电源，您需要保证有足够的电源和稳定的电压。

Q7: 这款便携式显示器内置电池吗？

A7: 不，这个便携式显示器没有电池。

Q8: 必须将提供的电源插入墙上插座在使用过程中为其供电？

A8:

❶.如果您将便携式显示器与USB C电缆，您不需要插入提供的电源在墙上的电源插座为其供电。但如果这个便携式监视器突然闪烁。您需要插入提供的此时，墙上插座中的电源可为其供电。

❷.如果您将便携式显示器与provided mini连接HDMI电缆，您需要将提供的电源插入墙壁插座，同时为其供电。

Q9: 这个便携式显示器与我的设备兼容吗？

A9: 如果您的设备具有“全功能”可发送信号，音频和视频)USB C端口或HDMI端口。如果您的设备具有VGA端口/迷你显示端口/显示端口，然后您可以尝试使用VGA转HDMI适配器/迷你显示器端口到HDMI适配器/显示端口到HDMI连接这个便携式显示器。

Q10: 如何设置分割屏幕?

A10: (Windows系统)

- 1.找到计算机的控制面板/s-设置，然后单击在...内
- 2.找到显示/系统选项，然后单击进入。
- 3.在左侧找到“调整分辨率”并单击进入，然后您可以在“显示器”选项中设置分割屏幕或下拉右侧，找到“Multi-monitor”设置”选项栏以选择分割屏幕

7.产品规格

型号	M133A25	P161A10D	P160A17	P161A10G	P17A18BWG	P16TA10
比例	16:9	16:9	3:2	16:9	16:9	16:9
分辨率	3840*2160	1920*1080	2520*1680	1920*1080	1920*1080	1920x1080
SRGB	100%	100%	100%	100%	72%	100%
对比度	1800:1	1200:1	1500:1	1200:1	800:1	1000:1
刷新率	60Hz	60Hz	60Hz	144Hz	144Hz	60Hz
扬声器	内置扬声器 *2	内置扬声器 *2	内置扬声器 *2	内置扬声器 *2	内置扬声器 *2	内置扬声器 *2
尺寸	13.3"	16.1"	16"	16.1"	17.3"	16.1"
触摸屏	不支持	不支持	不支持	不支持	不支持	支持

8.安全说明

- 1.对于IPS面板显示器，用户应考虑显示器的放置位置，否则，面板可能反射周围的光并引起干涉。
- 2.请使用原装电源适配器以避免电气故障损坏。请立即下载并与我们联系。
- 3.如果在使用过程中液体倾倒在显示器上，请立即断开电源适配器，如果有问题，请关闭它。

警告

如果未按照说明书使用、调整或控制显示器，可能会导致触电。短路或机械危险。



9.保修信息

项目	保修期
显示器	一年
面板	一年

1.服务电子邮件

我们: service-us@cnbanan.com

JP: service-japan@cnbanan.com

服务网站: <http://www.cnbanan.com>

2.联系我们二维码



3.本保修不适用:

- 1.该产品不是从授权经销商处购买的。
- 2.本产品未按照说明书中给出的说明使用。
- 3.公司人员确定的不当使用导致的缺陷。
- 4.对机组的电路/或物理结构进行任何性质的修改或变更。
- 5.安装/维修工作由公司授权以外的人员/机构进行。
- 6.将原始序列号从机器或机柜中删除、抹掉或删除。
- 7.事故。自然、闪电、水、火、公共行为干扰、通风不良、电压波动或品牌无法控制的任何原因。