

Körperschallwandler Exciter



MONACOR

WWW.MONACOR.COM



EX-40/4 Bestell-Nr. • Order No. 0163400

EX-40/8 Bestell-Nr. • Order No. 0163410



Körperschallwandler

Diese Anleitung richtet sich an Installateure von Beschallungsanlagen mit entsprechenden Fachkenntnissen. Bitte lesen Sie diese Anleitung vor der Installation gründlich durch und heben Sie sie für ein späteres Nachlesen auf.

Verwendungsmöglichkeiten

Dieser Körperschallwandler (Exciter) wird auf eine schwingfähige Fläche geklebt (z. B. Tür, Tischplatte, Regal, Leichtbauwand, Deckenplatte oder Glasscheibe), die damit quasi als Lautsprechermembran dient. Anders als bei gewöhnlichen Lautsprechern werden in der Fläche jedoch primär Biegewellen angeregt. Dadurch ergibt sich eine breitere Abstrahlung. Klangqualität und Lautstärke hängen vom Material und der Dimensionierung der Montagefläche ab.

Sicherheitshinweise

Das Produkt entspricht allen relevanten Richtlinien der EU trägt deshalb das CE-Zeichen.

- Verwenden Sie das Produkt nur im Innenbereich. Schützen Sie es vor Tropf- und Spritzwasser sowie vor hoher Luftfeuchtigkeit. Der zulässige Einsatztemperaturbereich beträgt 0–40 °C.



- Verwenden Sie zum Säubern nur ein weiches, trockenes Tuch, niemals Wasser oder Chemikalien.
- Wird das Produkt falsch verwendet, überlastet oder nicht fachgerecht repariert, kann keine Haftung für daraus resultierende Sach- oder Personenschäden und keine Garantie für das Produkt übernommen werden.

Installation

- 1) Vor der endgültigen Montage einen Probetrieb durchführen, um die für den Klang optimale Position zu ermitteln.
- 2) Zur Montage den EX-40/... nach Entfernen der Schutzfolie auf eine saubere, ebene Fläche kleben.
- 3) Den Verstärker vor dem Anschluss ausschalten.
- 4) Die Anschlüsse des EX-40/... mit einem Lautsprecherausgang des Verstärkers verbinden. Beim Anschluss mehrerer Wandler an einem Ausgang darauf achten, dass diese gleich gepolt sind und nicht die min. Lastimpedanz des Ausgangs unterschreiten.

Hinweis: Zum Lösen der Verklebung nicht am Gehäuse zerren, der Wandler könnte beschädigt werden. Beispielsweise ein Messer oder Draht zum Wiederablösen zu Hilfe nehmen.



Technische Daten

Nennbelastbarkeit: 20 W

Musikbelastbarkeit: 40 W

Impedanz: $4\ \Omega$ (EX-40/4), $8\ \Omega$ (EX-40/8)

Frequenzbereich: f_x – 20 000 Hz (montageabhängig)

Resonanzfrequenz (f_s): . . . 300 Hz

Schwingspule: $\varnothing$ 32 mm

Schwingspulenträger: KSV

Einsatztemperatur: 0 – 40 °C

Abmessungen: $\varnothing$ 61 mm × 20 mm

Gewicht: 129 g

Änderungen vorbehalten



Soll das Produkt endgültig aus dem Betrieb genommen werden, entsorgen Sie es gemäß den örtlichen Vorschriften.

Exciter

These instructions are intended for installers of PA system with adequate technical knowledge. Please read the instructions carefully prior to installation and keep them for later reference.

Applications

This exciter is glued onto a surface capable of vibrating (e. g. table plate, shelf, drywall panel, ceiling panel or glass pane) so that the surface serves as a kind of speaker cone. In contrast to conventional speakers, this exciter primarily excites bending waves on the surface to provide a wider radiation. Sound quality and volume depend on the material properties and the dimensions of the mounting surface.

Safety Notes

The product corresponds to all relevant directives of the EU and is therefore marked with **CE**. The product corresponds to the relevant UK legislation and is therefore marked with **UKCA**.

- The product is suitable for indoor use only. Protect it against dripping water, splash water and high air humidity. The admissible ambient temperature range is 0–40 °C.



- For cleaning only use a dry, soft cloth; never use water or chemicals.
- No guarantee claims for the product and no liability for any resulting personal damage or material damage will be accepted if the product is not correctly used, if it is overloaded or if it is not repaired in an expert way.

Installation

- 1) Before installing the exciter, make a test run to determine the exciter position for the best sound reproduction.
- 2) To install EX-40/..., remove the protective film and then glue the exciter onto a clean, flat surface.
- 3) Switch off the amplifier prior to connecting the exciter.
- 4) Connect the connections of EX-40/... to a speaker output of the amplifier. When connecting multiple exciters to a single output, make sure that they have the same polarity and are not below the minimum load impedance of the output.

Note: Once the exciter has been attached to a surface, use a knife or wire, for example, to detach the exciter. Never pull the housing; the exciter may be damaged.



Specifications

Power rating: 20 W

Peak music power output: 40 W

Impedance: 4 Ω (EX-40/4), 8 Ω (EX-40/8)

Frequency range: f_x –20 000 Hz (depending on
mounting)

Resonant frequency (f_s): . . 300 Hz

Voice coil: $\varnothing$ 32 mm

Voice coil former: KSV

Ambient temperature: . . . 0–40 °C


Dimensions: $\varnothing$ 61 mm $\times$ 20 mm

Weight: 129 g

Subject to technical modification.



If the product is to be put out of operation definitively, dispose of the product in accordance with local regulations.

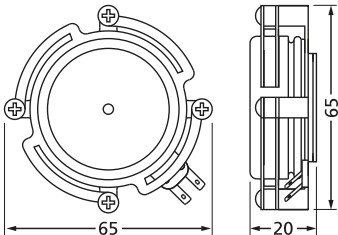

MONACOR INTERNATIONAL GmbH & Co. KG
 Zum Falsch 36, 28307 Bremen
 Germany



Copyright[®] by MONACOR INTERNATIONAL
 All rights reserved

A-2056.99.02.08.2022

