



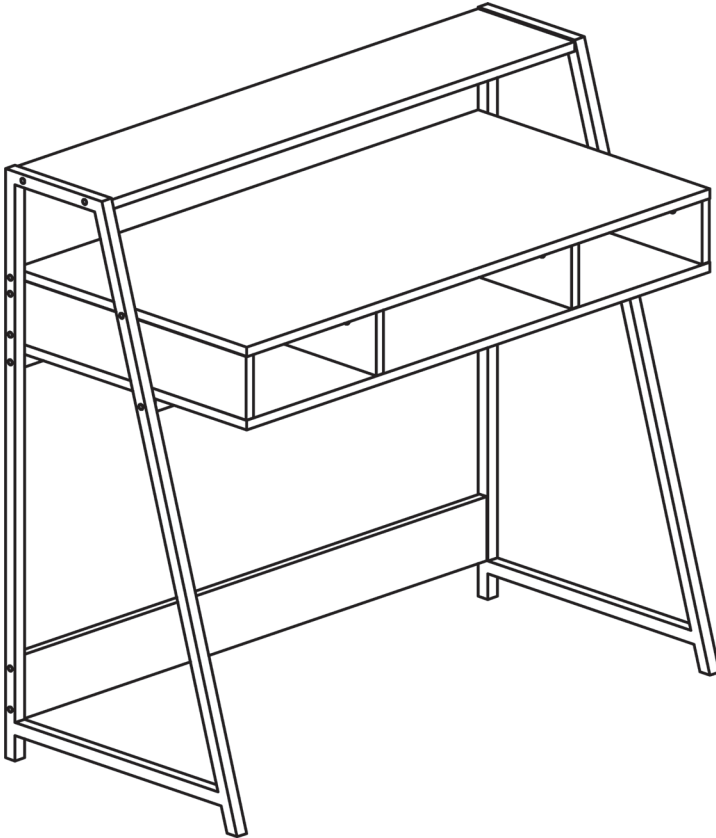

INDIANA DESK

OVINDIADWOA, OVINDIADBWA

COMPONENTS

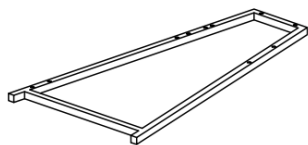


A (x2)




B (x2)




C (x1)




D (x1)




E (x1)

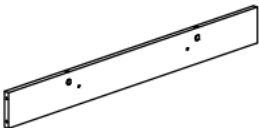


F (x1)

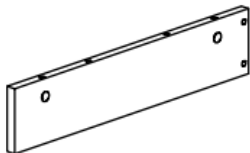


G (x1)

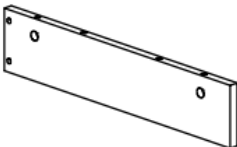

H (x1)

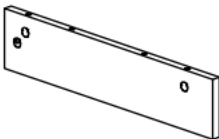


I (x2)

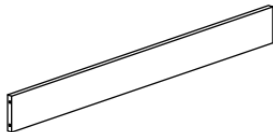

J (x1)

Hardware



1 (x12)



2 (x12)




3 (x16)




4 (x22)




5 (x4)



6 (x6)




7 (x4)

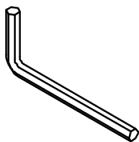

8 (x1)


OVERVIEW

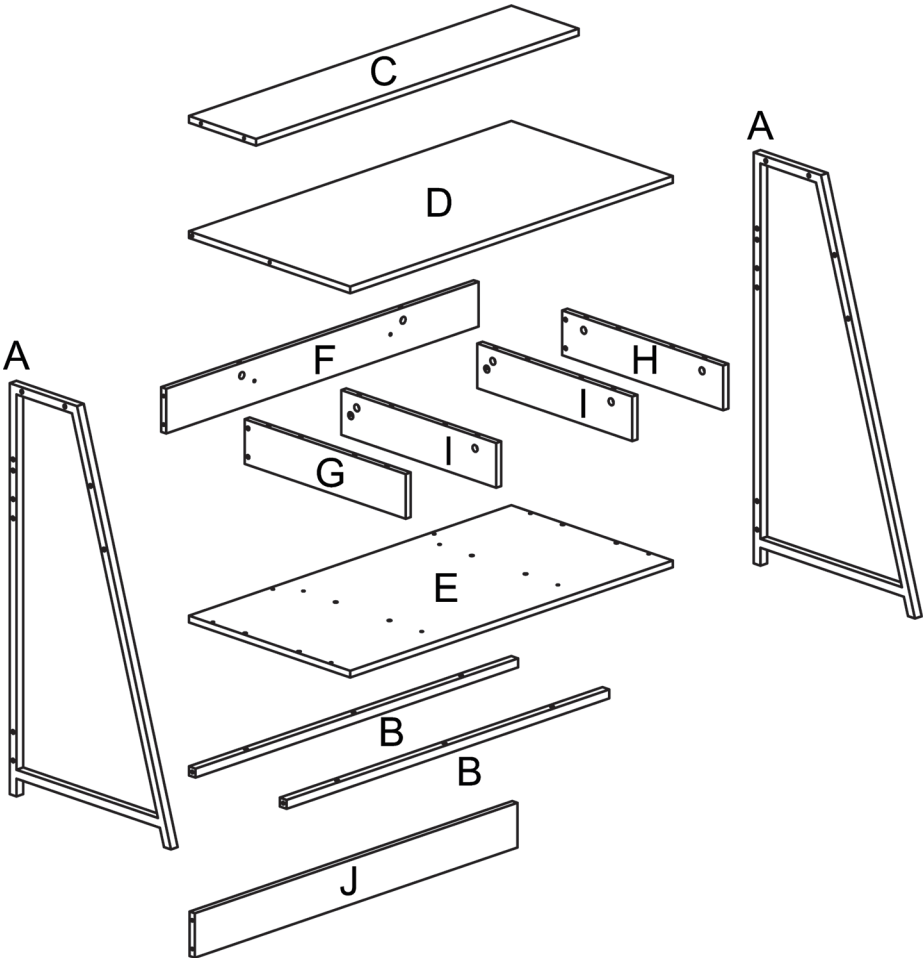

ASSEMBLY

Step 1: Insert two cam screws **(1)** into part **F**. Using a Phillips head screwdriver (not supplied), secure two cam locks **(2)** into parts labelled **I**.



Align part **F** with parts labelled **I**. Ensure the arrows on the cam locks **(2)** are pointing towards the corresponding cam screws **(1)**. Use a Phillips head screwdriver (not supplied) to secure the cam locks **(2)** into the cam screws **(1)**, securing parts labelled **I** to part **F**.




1 (x2)



2 (x2)

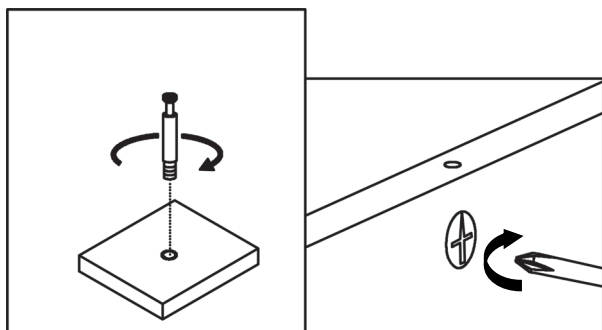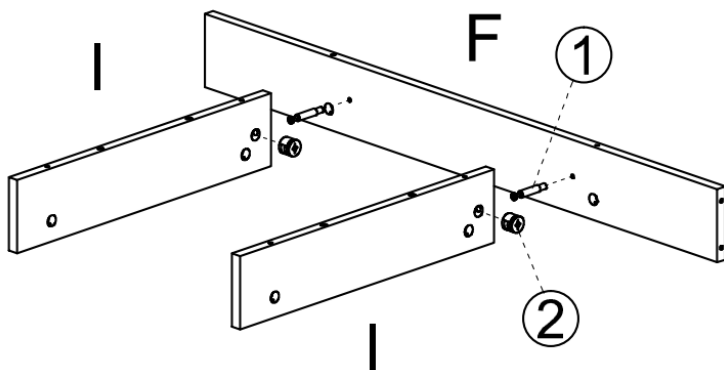

Step 2:




1 (x10)



2 (x10)



3 (x8)

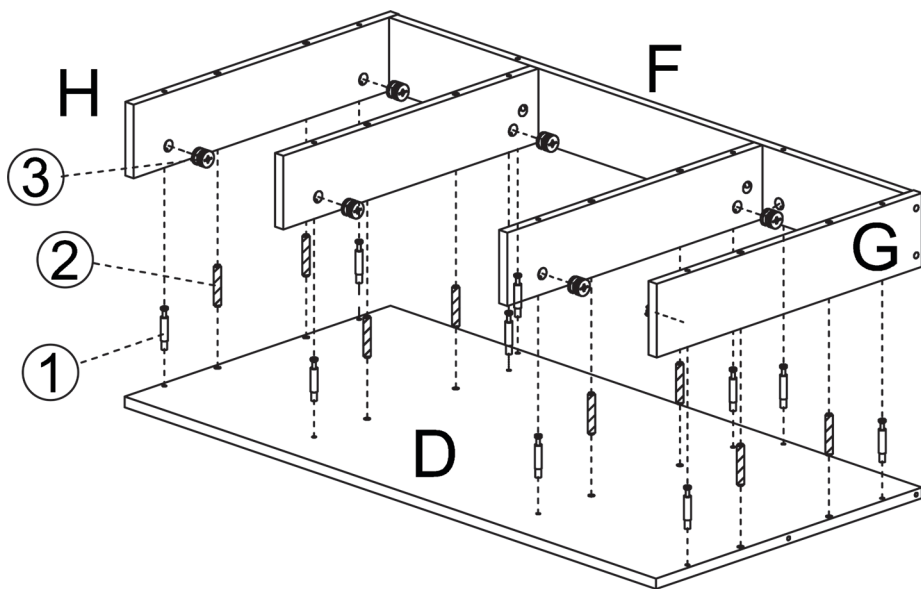


Step 3:




3 (x8)



4 (x10)

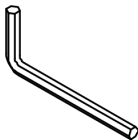


8 (x1)

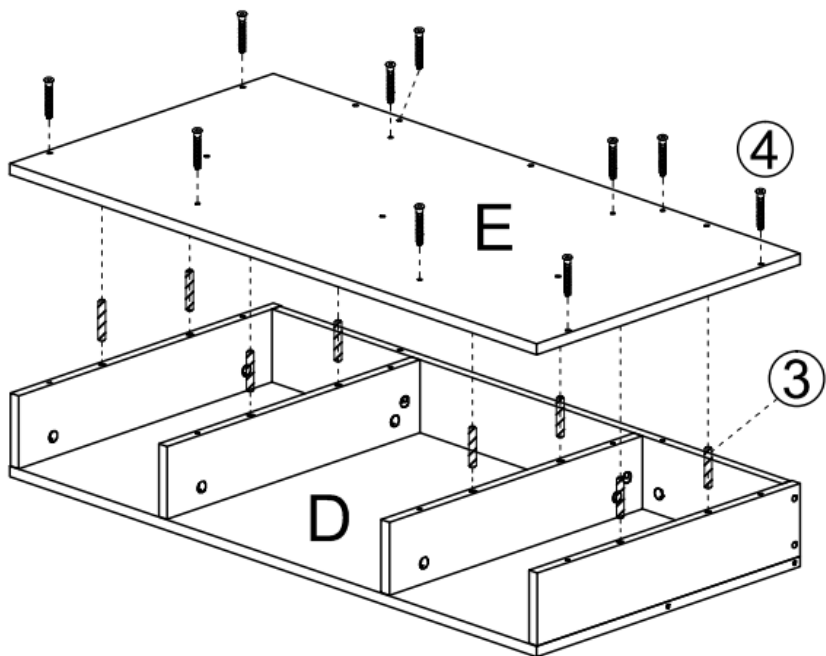


Step 4:




4 (x8)



7 (x4)

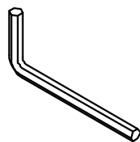


8 (x1)

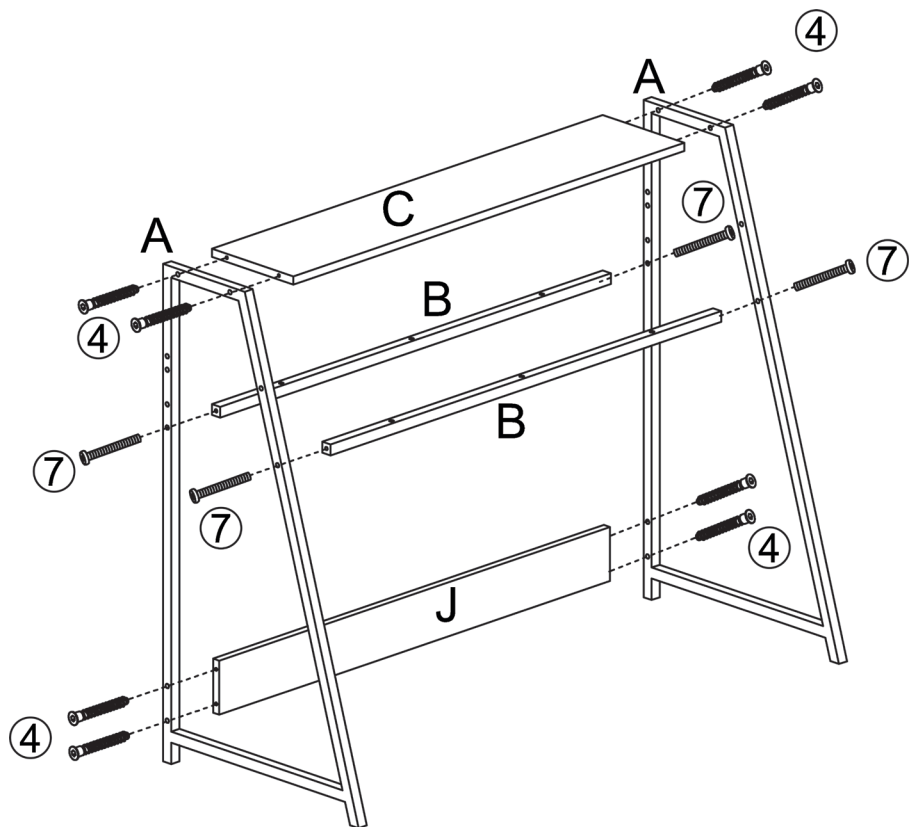


Step 5:




5 (x4)




6 (x6)

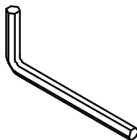

8 (x1)

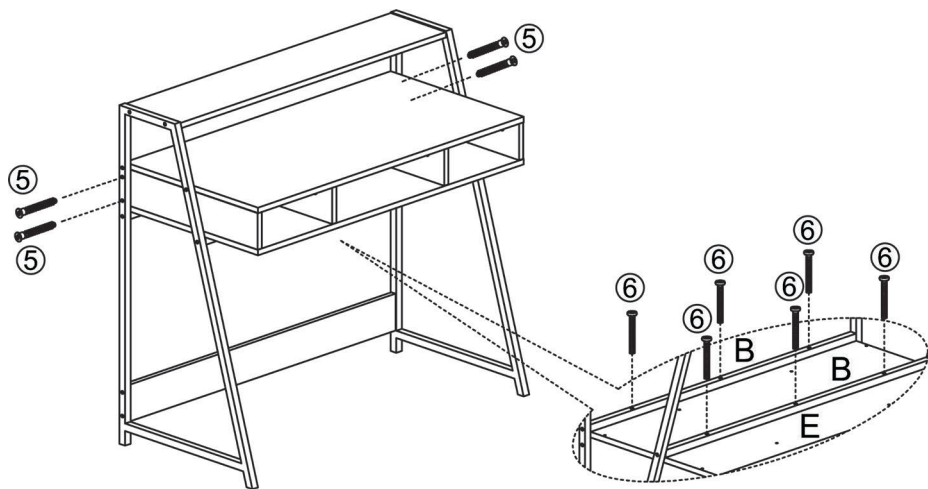

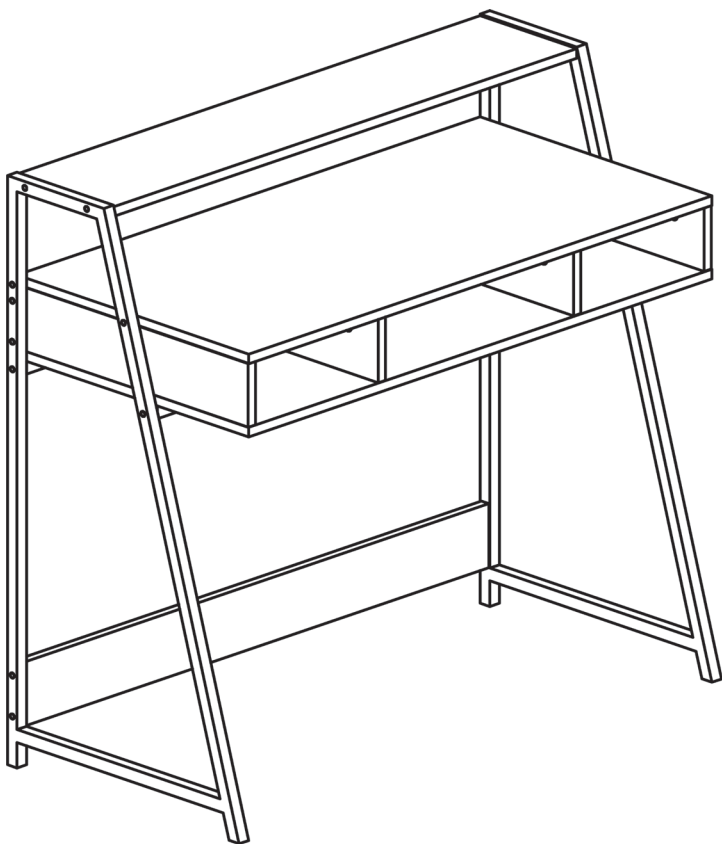

Assembly is complete.

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com