



LOW BACK ALUMINUM PADDED OFFICE CHAIR – EAMES REPLICA


User Guide

MATT BLATT

MBEAPOCLBLA, MBEAPOCLWLA & MBEAPOCLTLA




COMPONENTS


1	2	3
		
Chair Body (x1)	Base (x1)	Gas Spring (x1)
4	5	6
		
Castor Wheels (x5)	Armrests (x2)	15mm M6 Screws (x6)
7		
		
Allen Key (x1)		

ASSEMBLY


Step 1: Using the Allen Key, attach the Armrests to the Chair Body with the Screws.

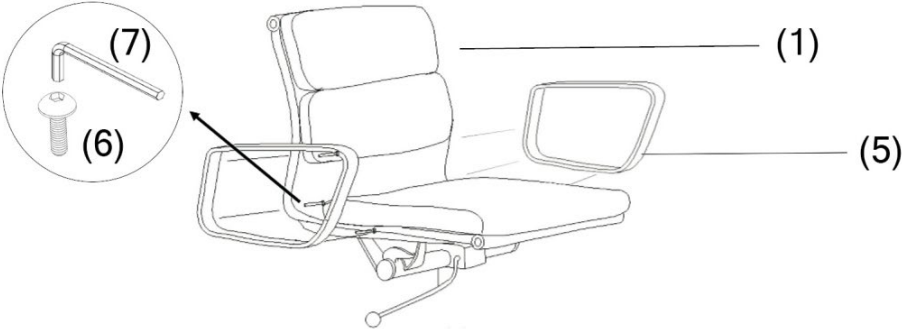

Step 2: Attach the Castor Wheels to the Base.

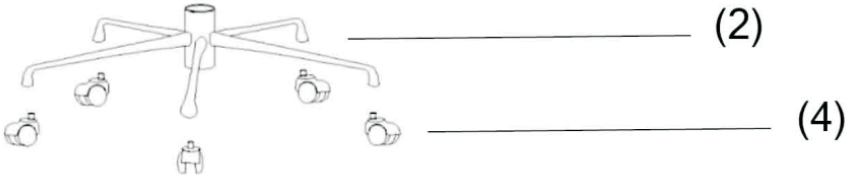

Step 3: Attach the Gas Spring to the Base Assembly.

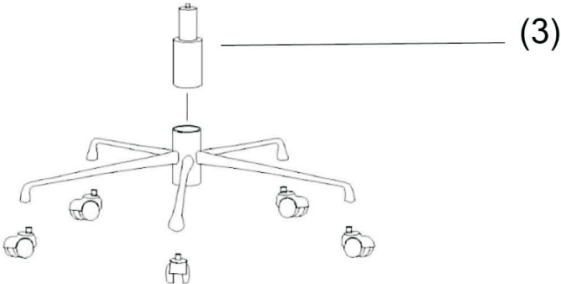

Step 4: Align the Chair Body with the Gas Spring and lower it onto the Base Assembly.



Completed

NOTES

[illegible]



NEED MORE INFORMATION?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.mattblatt.com.au**

MATT BLATT