


Quick Reference Guide

Included Items

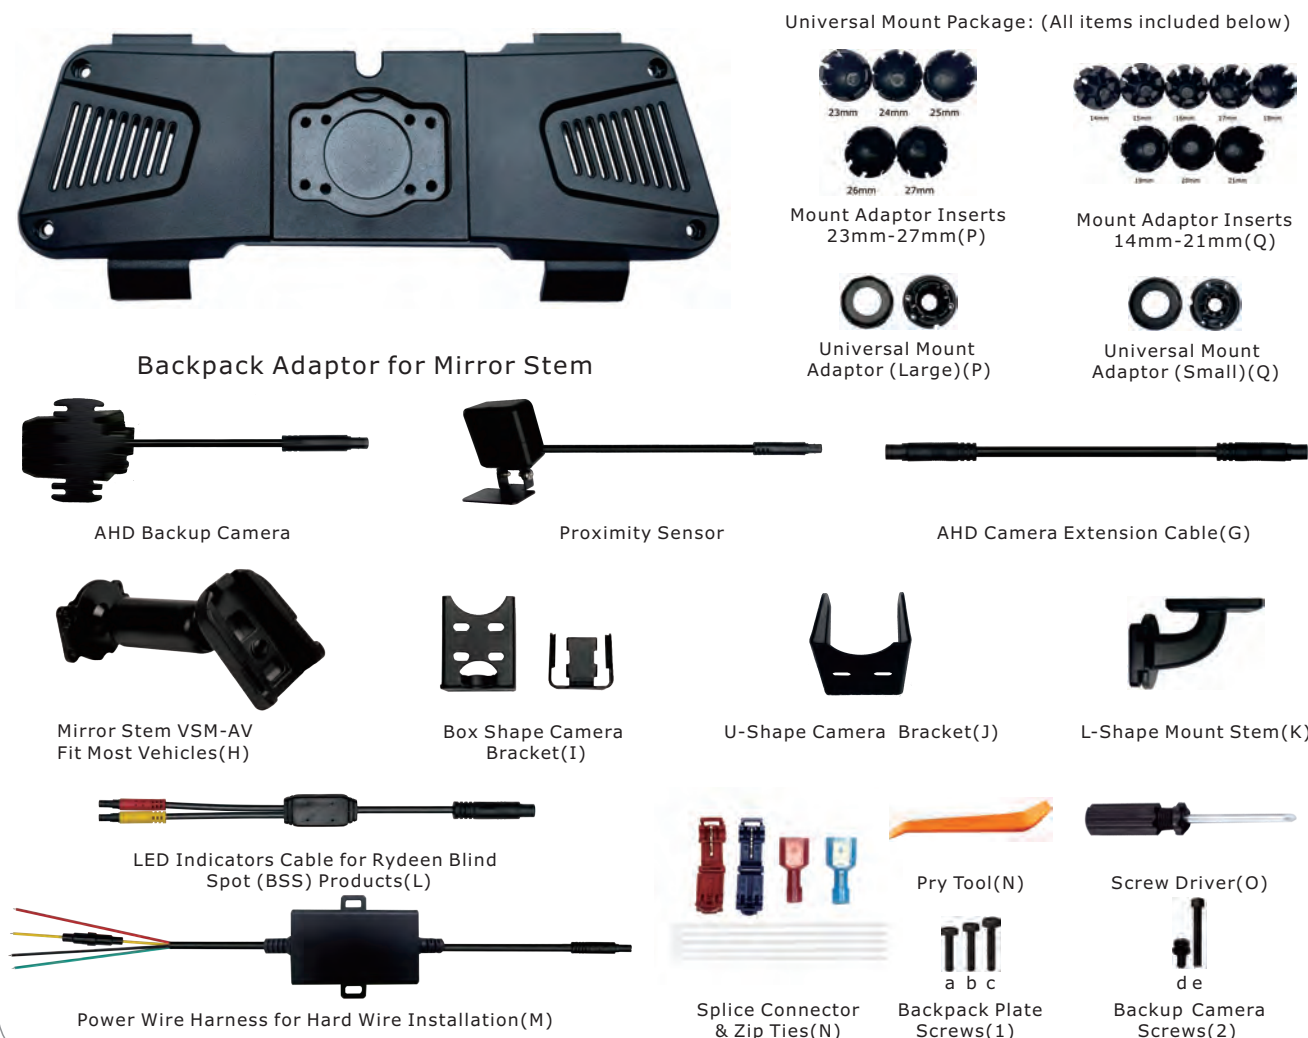

Getting Started

1. Mount the mirror onto vehicle

Remove the existing mirror and unplug the connector, if one exists. (Note: All vehicles use different mounting solutions. If necessary, consult your local automotive dealer or installation professional for specific instructions.)




Note:

If your vehicle uses a universal D-Tab mount, do not remove the D-Tab and use the VSM-AV mount provided.


Screws size reference

a:PM3*7mm b:PM2.5*8mm c:PM3*10mm d:PM3*5mm e:M3*15mm

Insert Backpack Adaptor for Mirror Stem onto TOMBO 360 Main Unit.

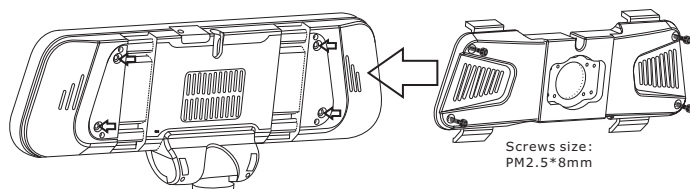


Method 1 Use VSM-AV Mount Stem

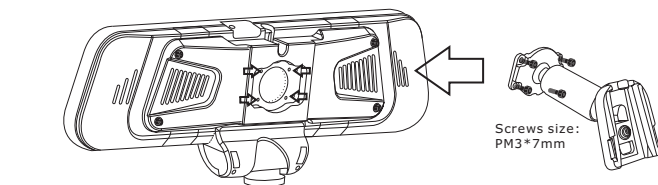

Note:

If Rydeen Mirror does not fit into factory windshield tab, please use the included universal mounting solution.



Method 2 Use Universal Mount Package

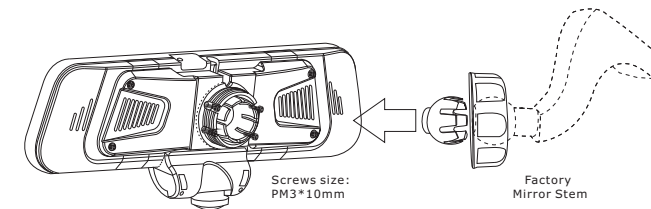

Note:


If the diameter of the factory joint mount in your vehicle is 22mm, then you do not require the use of any mount adaptor inserts.

Method 3 Use the L-shape mount stem and universal mount package for rooftop application

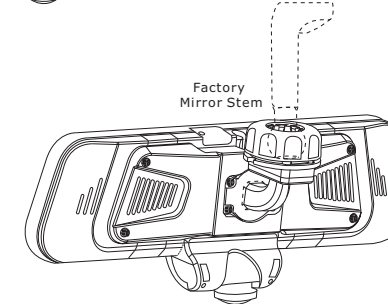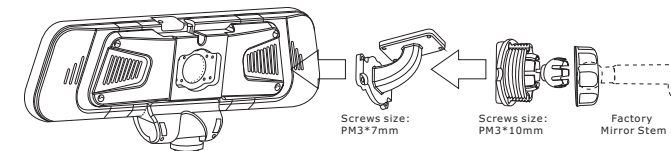


2. Install the accessories


For Cars

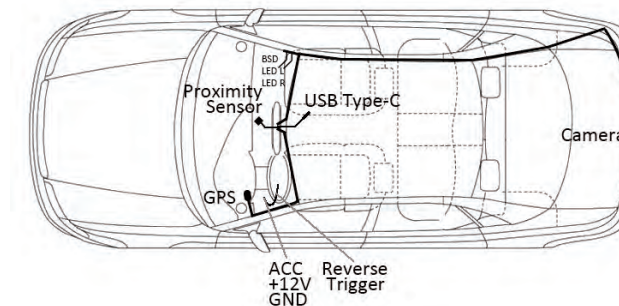

For Trucks

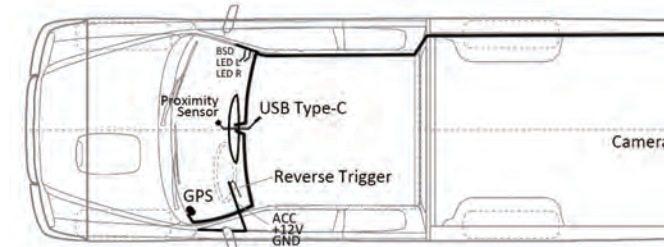


Inside View

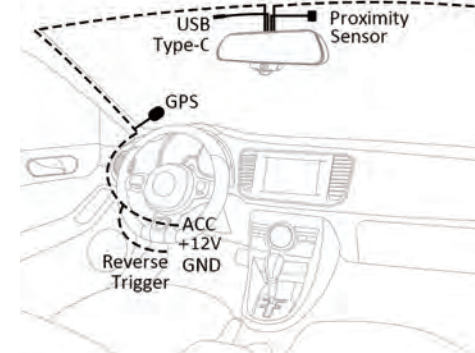



3. Install the backup camera bracket (remove wing mount first)

Use Box Shape Camera Bracket Use U-Shape Camera Bracket


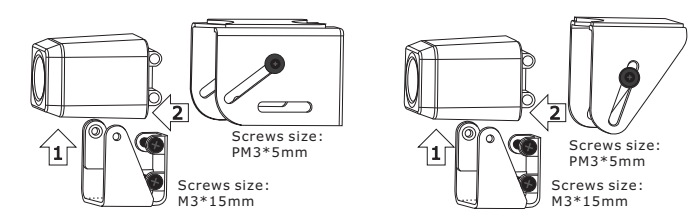


4. Backup camera installation position option diagram

Rear windshield mounting location (Interior Top Mounted)

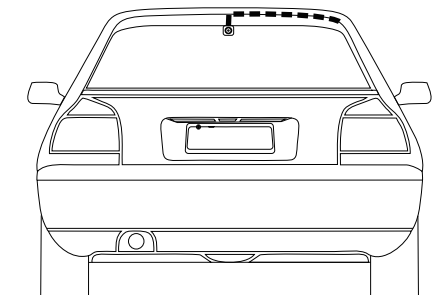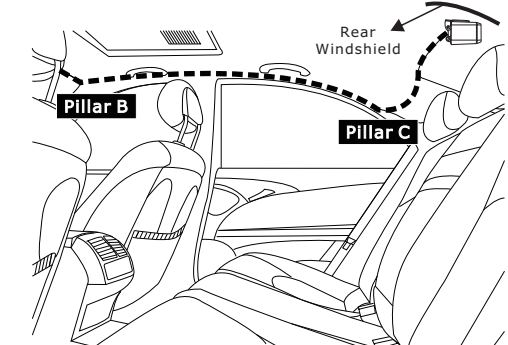


Above license plate mounting location (Exterior Mounted)

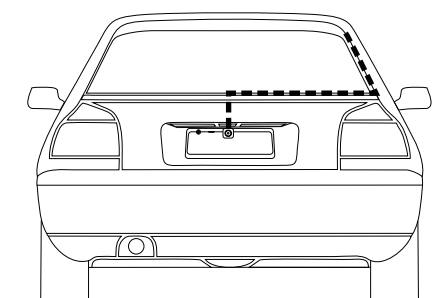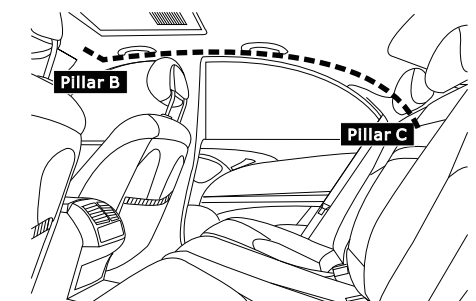

*For more detail instructions, please visit our website at www.rydeenmobile.com/manual-catalog-downloads/

Guide de référence rapide

Contenu du coffret

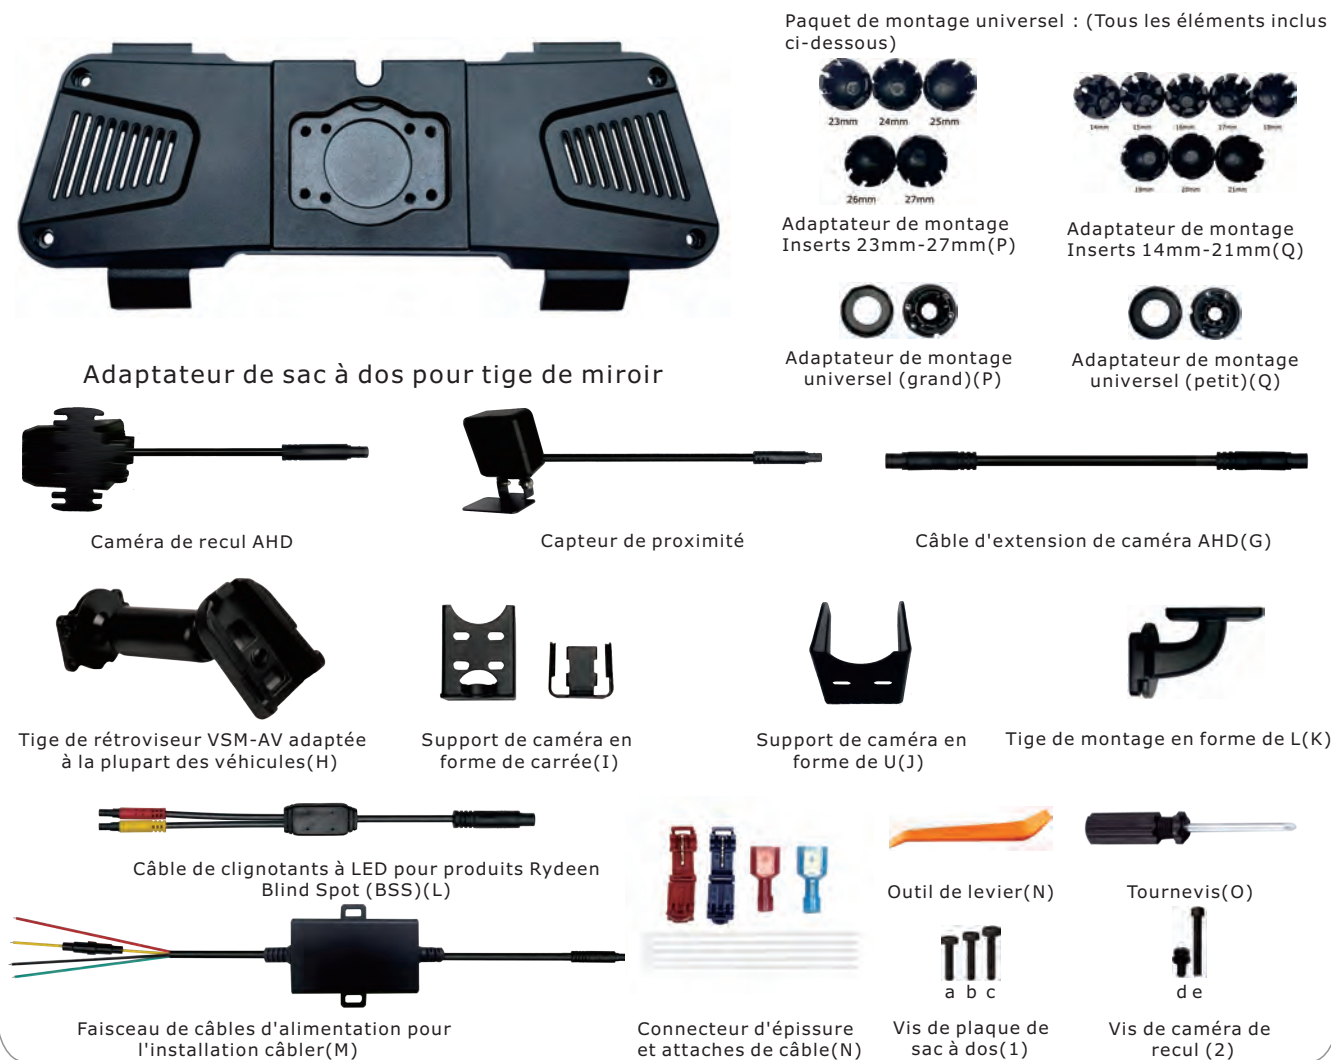

Commencer

1. Montez le rétroviseur sur le véhicule

Retirez le miroir existant et débranchez le connecteur, s'il existe. (Remarque : Tous les véhicules utilisent des solutions de montage différentes. Si nécessaire, consultez votre concessionnaire automobile locale ou un professionnel de l'installation pour obtenir des instructions spécifiques.)




Remarque :

Si votre véhicule utilise un support D-Tab universel, ne retirez pas le D-Tab et utilisez le support VSM-AV fourni.


Référence taille des vis

a:PM3*7mm b:PM2.5*8mm c:PM3*10mm d:PM3*5mm e:M3*15mm

Insérez l'adaptateur de sac à dos pour la tige de miroir sur l'unité principale TOMBO 360.

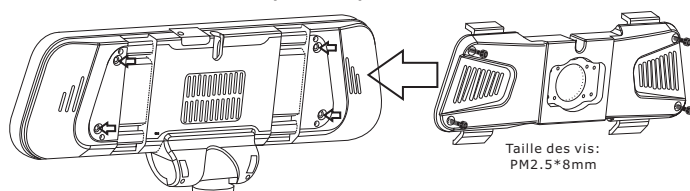


Méthode 1 Utiliser la tige de montage VSM-AV

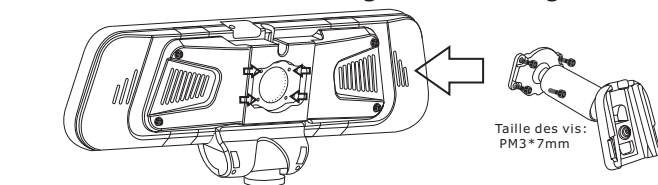

Remarque :

Si miroir Rydeen ne rentre pas dans la languette de pare-brise d'usine, veuillez utiliser la solution de montage universelle incluse.


Méthode 2 Utiliser le paquet de montage universel

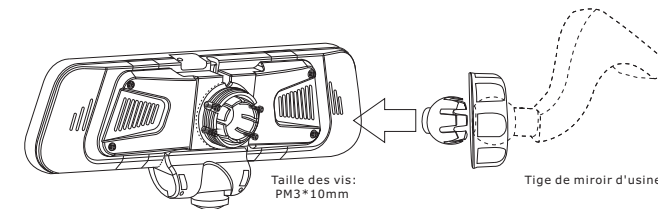

Remarque :


Si le diamètre du support de joint d'usine dans votre véhicule est de 22 mm, vous n'avez pas besoin d'utiliser d'inserts d'adaptateur de support.

Méthode 3 Utilisez la tige de montage en forme de L et le paquet de montage universel pour une application sur le toit

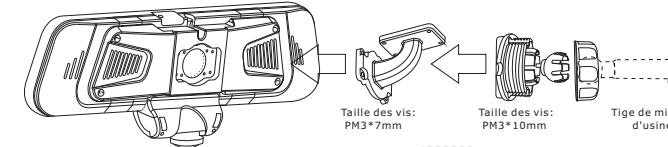


2. Installer les accessoires


Pour les voitures

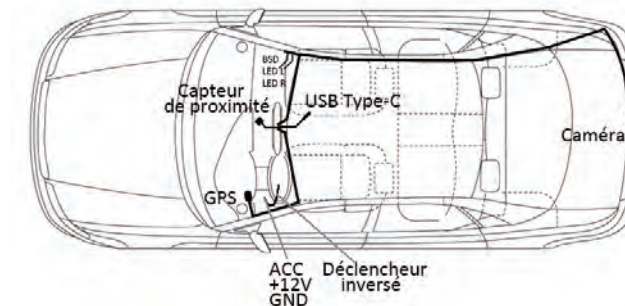

Pour les camions

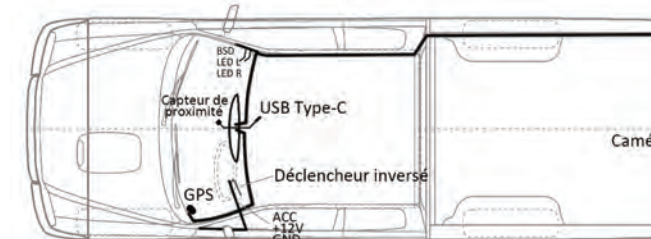


Vue de l'intérieur

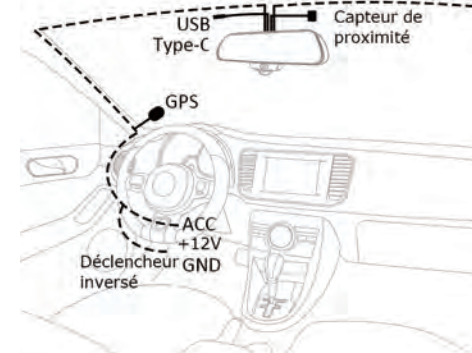

3. Installez le support de la caméra de recul (retirez d'abord le support d'aile)



Utiliser le support de caméra en forme de carrée

Utiliser le support de caméra en forme de U

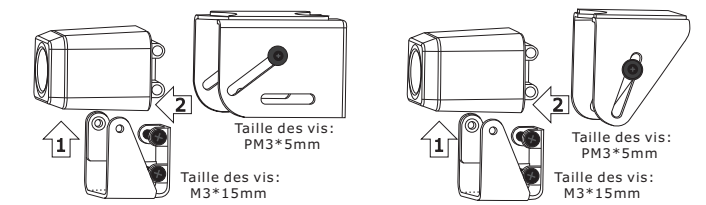

4. Schéma des options de position d'installation de la caméra de recul

Emplacement de montage du pare-brise arrière (montage intérieur supérieur)

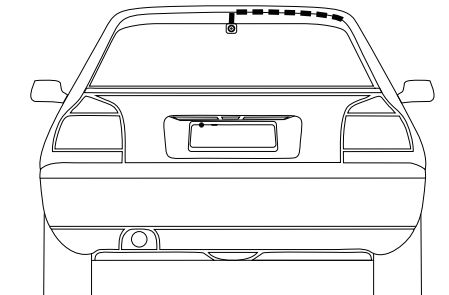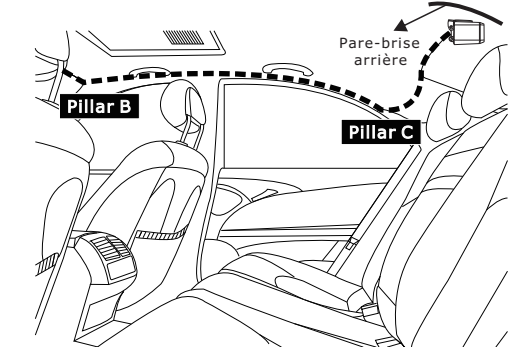

Emplacement de montage au-dessus de la plaque d'immatriculation (montage extérieur)

