






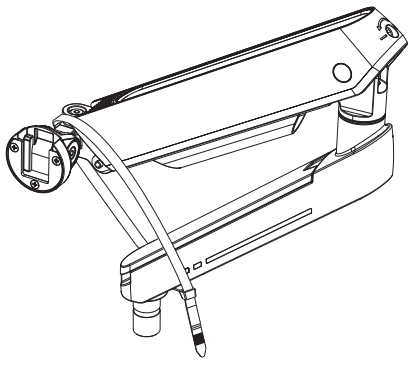


A (x1)




B (x1)

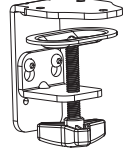

C (x1)



D (x1)



E (x1)



F (x1)



G (x1)



H (x1)
M8x105



I (x1)



J (x3)
M6x12



K (x2)




L (x1)
4mm




M (x1)
5mm




N (x1)



O (x1)



M-A (x4)
M4x12




M-B (x4)
M5x12




M-C (x4)
D5

1

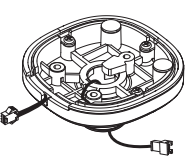

Note: Manage the USB cables as shown prior to the grommet or clamp installation.

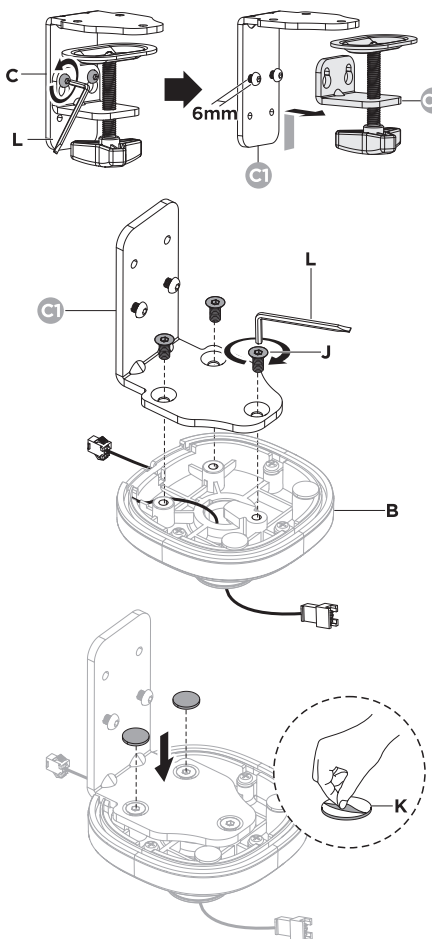

6mm


C1

L

J

B

K

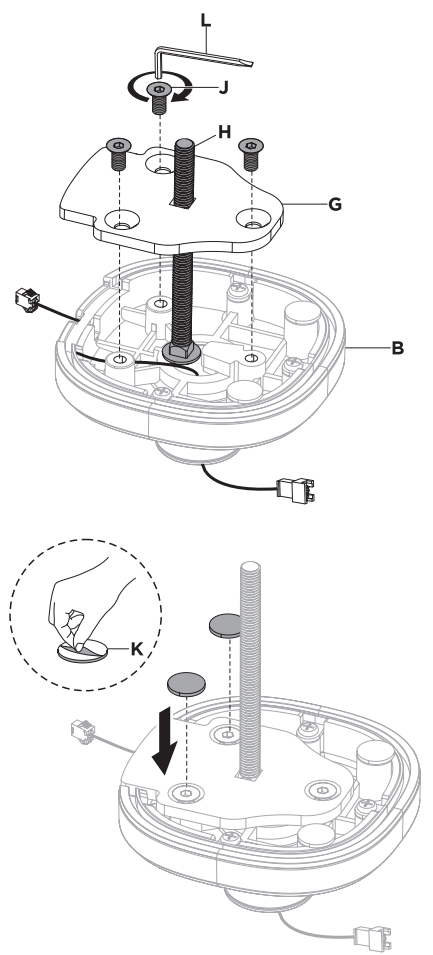

L


J

H

G

B

K

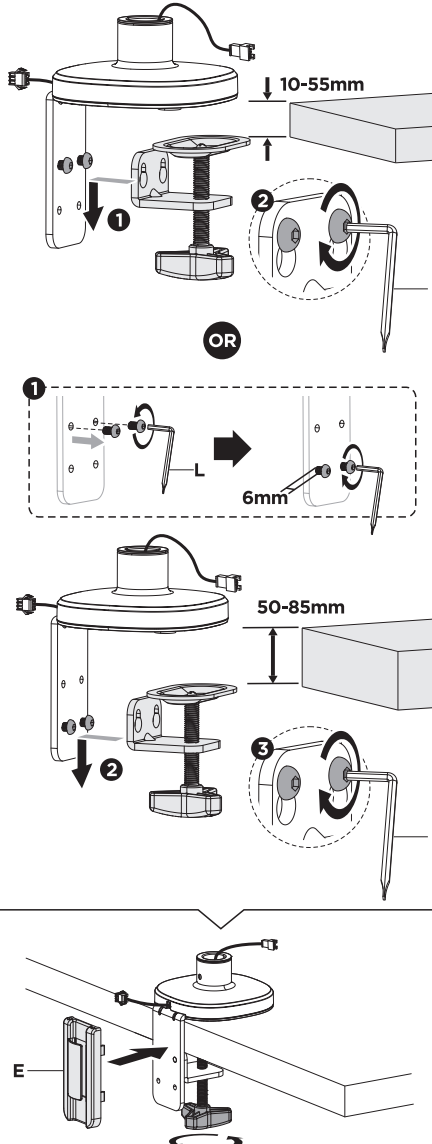


10-55mm

OR

6mm

50-85mm

E

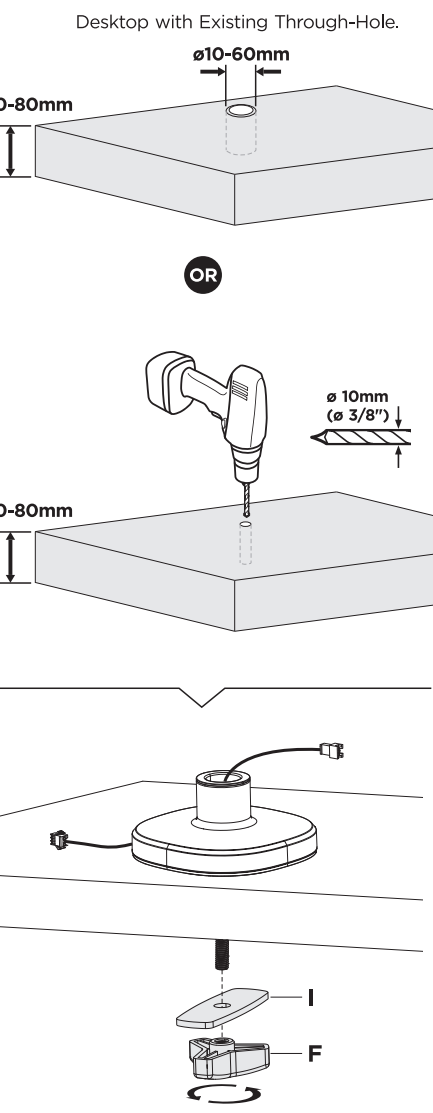

Desktop with Existing Through-Hole.

10-80mm

ø10-60mm

OR

10-80mm


ø 10mm (ø 3/8")

2

Stored energy hazard!

1. Firmly hold the two halves of the spring arm together and have another person cut off the cable tie from around the spring arm.

2. Slowly release the pressure on the spring arm and allow it to gradually stretch to its full extension.

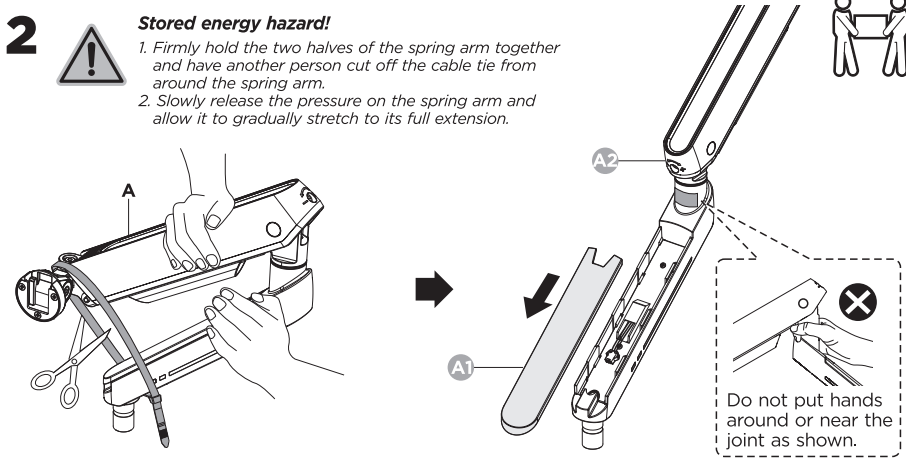


A

A2

A1

Do not put hands around or near the joint as shown.


3

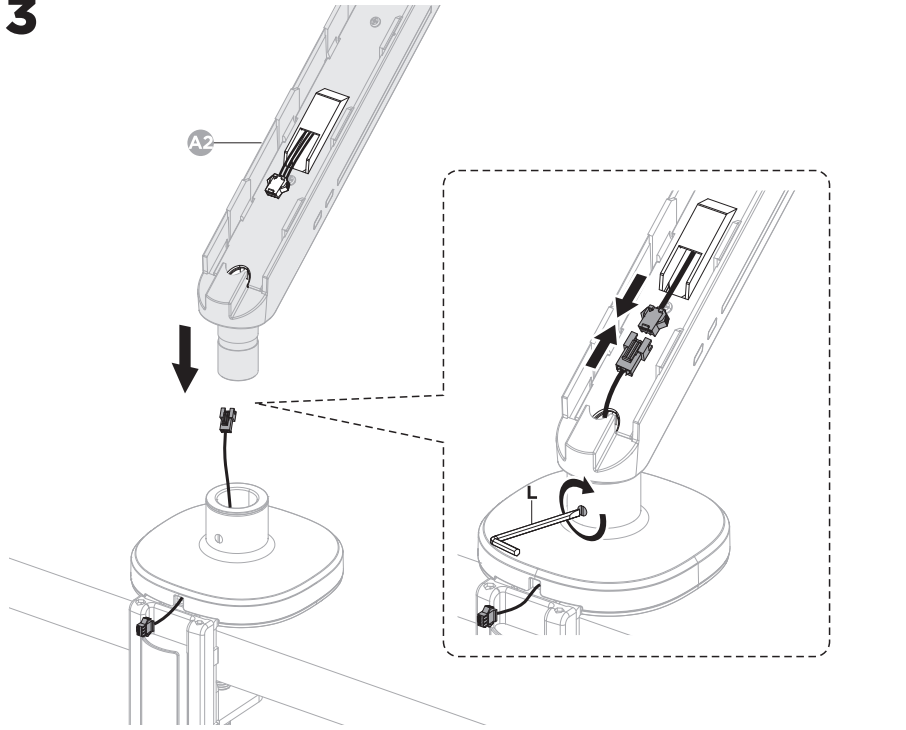

A2

L

4

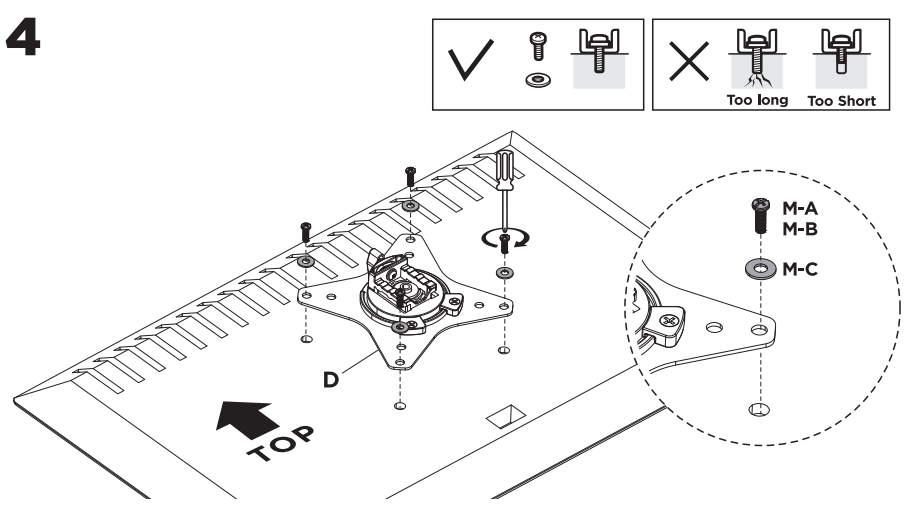

✓

✗

Too long

Too Short

M-A


M-B

M-C

D

TOP

5

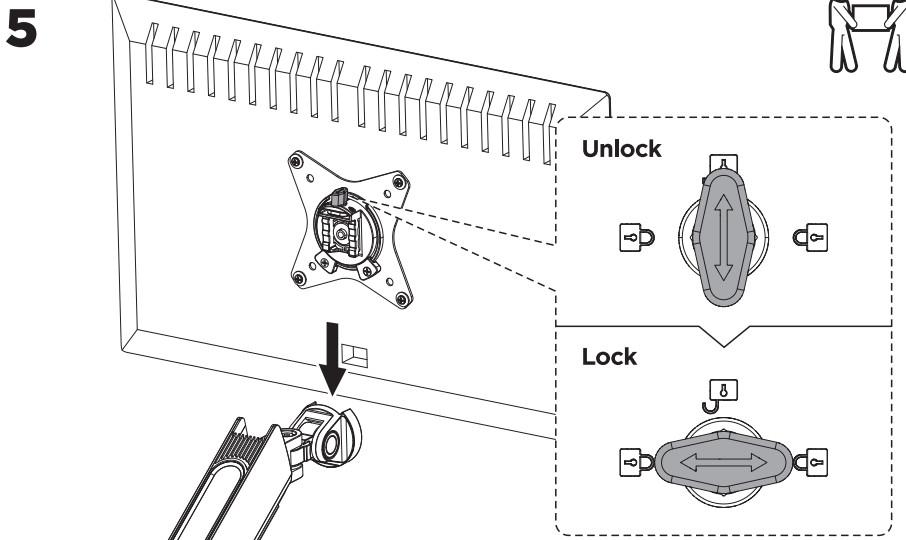

Unlock

Lock

